

# Hydro Jetter Instructions

## WARNING

The following warnings must be followed.

Failure to follow these warnings could result in serious personal injury or death!

Never allow untrained personnel to operate machinery.

High pressure water can cause death or serious injury.

Before starting unit, be sure to wear personal protective equipment such as safety goggles or face shield and protective clothing such as gloves, coveralls or raincoat, rubber boots with metatarsal guards, and hearing protection.

Do not direct water stream toward self or others.

Do not spray electrical apparatus.

Pressurized fluid streams and ruptured pressure vessels can cause death or injury.

Ensure the jet hose has been placed in the pipe. (minimum of 6 feet suggested) before engaging the water pressure to prevent the hose from coming out of the pipe prematurely and causing injury.

High pressure fluid can create a high-pressure stream or ruptured vessel.

Relieve pressure before servicing.

Use in open, well-ventilated areas or vent the exhaust to the outside.

Exhaust gases can cause death or serious injury.

A hydrant meter is required when using a water hydrant. Fines are the responsibility of the user.

## Hydro Jetter Sewer Equipment for Sale or Rent

Select from smaller portable Jetters to full-size trailer Jetters.

CALL OR TEXT US FOR A QUOTE  
682-263-8363



Eagle 300 Trailer Jetter



Brute Cart Jetter

### Authorized Jetters Northwest Dealer

\*Rental Units May be quoted for sale\*



1150 Blue Mound Rd W. Ste 501 Haslet, TX 76052  
Office: 817-350-5376 Sales: 682-263-8363





Pick-up and Return Jetter Rentals During Business Hours Only

Monday-Friday

8 AM - 5 PM

(Closed Major Holidays)

Office: 817-350-5376 Sales: 682-263-8363

1150 Blue Mound Rd W Ste 501

Haslet, TX 76052

## Nozzle Description

Rental Trailer Jetters may have additional nozzles

### Izonso Grenade

The Best General Cleaning Nozzle.



### Raut Chisel

Penetrating Nozzle for Blockage Removal.



Cuts through Grease and Ice.

### Tremol

Spinner Nozzle for descaling and grease.



Cleans built up debris from pipe walls.

### Arzino Egg

Egg Style Flushing Nozzle.



general cleaning, sand, mud and light sediments removal, long runs.

### Ellipse

Penetrating Nozzle for grease, dirt, roots and other waste.



### RPD Nozzle

All Purpose Nozzle for penetrating and flushing blockages.



### TIPS:

If your nozzle stops pulling the hose through the pipe, you've likely found a blockage or a bend. Pull the hose back about 6 inches to allow the nozzle to do its job.

Our Jetter has the option to run both engines or only one. Running one engine will provide 9 Gallons of water per minute at 4000 PSI, Running Two Engines will provide 18 Gallons of Water per minute at 4000 PSI.

**Hydro-Max Jetter** 1150 Blue Mound Rd W. Ste 501 Haslet, TX 76052

Office: 817-350-5376 Sales: 682-263-8363

## Eagle Hydro-Jetter Instructions

Hydro-Jetters should only be operated by trained professionals.

**Trailer Requires a 2-5/16" Trailer Hitch Ball**

### 1. Fill the tank with water

Using fill hose on jetter

Using Hydrant hook-up (**Meter Required**)

Or simply placing a garden hose into the top of the tank

Do NOT tow with water in the tank.

Fill Hose



Top of Tank



Hydrant Hookup



### 2. Select your nozzle.

3. Attach the nozzle to the end of the Orange Leader Hose.


4. Attach the Orange Leader Hose to the Jetting Hose.

The leader hose is a warning to the operator that the jetting nozzle is close to the entry point, operator should use caution.

### 5. Use a Tyger Tail

Run the hose through the center of the Tyger tail.

Helps protect the hose from damage.

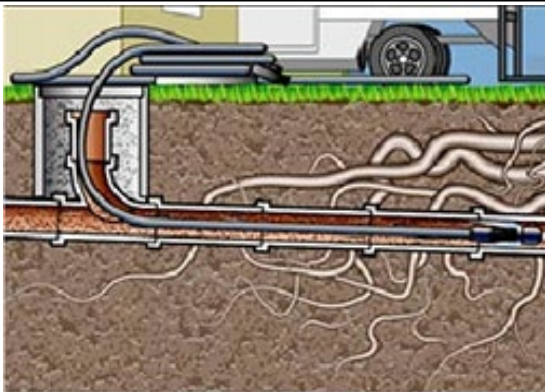


6. Insert the Hose end with the nozzle **AT LEAST** 6 feet into the pipe or cleanout.

7. Place Keys in Ignition

A clockwise partial turn will prime the fuel pumps.


Allow 2-3 Seconds for priming before completing the key turn.

Keys are normally located in the Nozzle Box

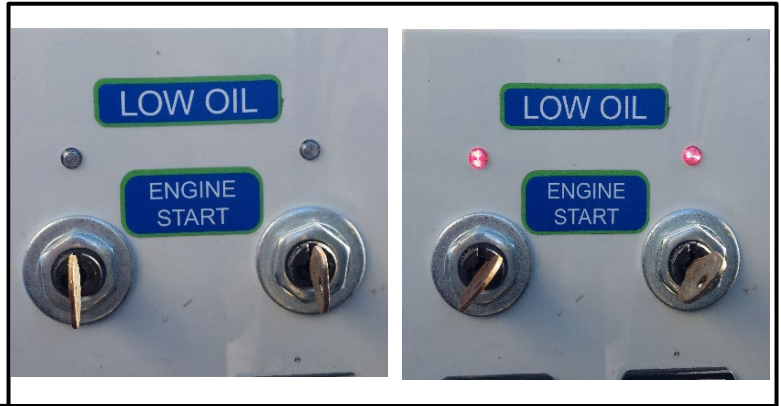


8. Pull up the **Red** Water Selector Valve.

9. Throttle up the Engine(s)  
Rotate Throttle Counterclockwise.

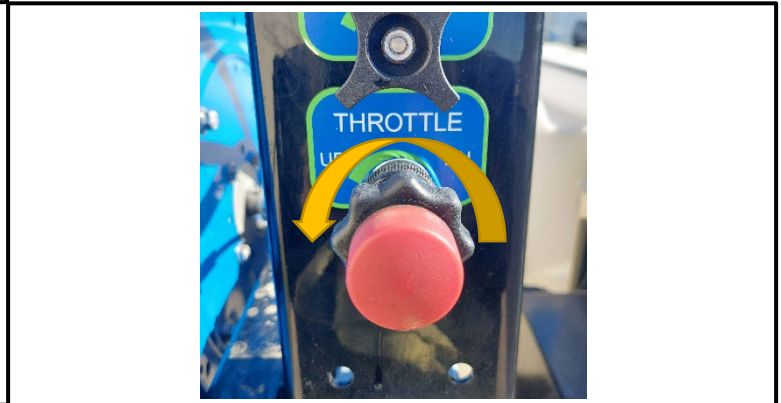

10. Use the Hose Reel Controls to allow the nozzle to pull the hose further into the pipe.

11. The Pulsation Valve causes a “Jump Jet” effect to help punch through debris.

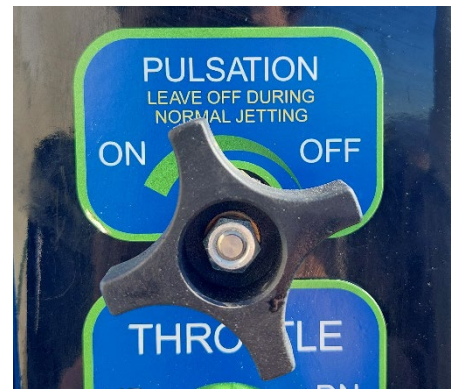

12. Throttle the Engines down to an idle.

Rotate the Throttle Clockwise.

13. Return **Red** Water Selector Valve to the OFF or Down Position.




14. Turn Engines off by turning the keys counterclockwise to the OFF Position.

15. Rewind the hose, use black button.
16. Remove the Tyger tail, leader hose and nozzle.
17. Place nozzles back in the nozzle box.
18. Secure the jetting hose.



19. Drain remaining water in the tank.

20. Refuel the Jetter with **GAS** before return.

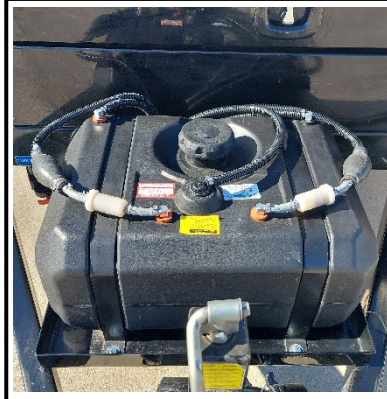

Rental returns are Mon-Fri 8AM-5PM Hydro-Max Employee must be on-site at time of return

## Having Trouble?

- Pressure Spiking? Check the nozzle for clogs.
- No water with red selector on? Check water filter for clogs.
- Not starting? Check fuel level and prime fuel lines.
- Throttle not opening? Check the throttle lock located just behind the knob.



1150 Blue Mound Rd W. Ste 501 Haslet, TX 76052  
Office: 817-350-5376 Sales: 682-263-8363