3 Hands Date Automatic Caliber SEIKO NH05

1. HOW TO SET THE TIME

1) Pull out crown A to the second click position.

2) Turn crown A to set hour and minute hands. (Check that AM/ PM is set correctly.)

3) Push crown A back into the normal position.

2. HOW TO SET THE DATE

- 1) Pull out crown A to the first click position.
- 2) Turn crown A to the left for date setting. *Do not set the calendar between 10:00 PM and 1:00 AM as this will cause a malfunction.

3) Push crown A back into the normal position.


3. HOW TO WIND THE MAINSPRING

a) Manual winding (Rotate crown A clockwise at normal position) Fully wound by turning the crown for minimum 55 times.

6

b) Wind with a watch winder. Full wind conditions (Reference information) - Rotary speed : 30 rpm

- Operating time : 60 minutes

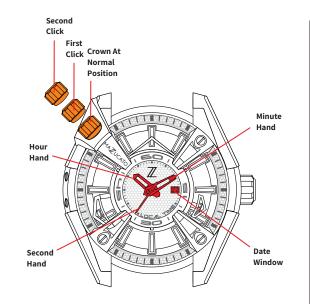

3 Hands Automatic Caliber SEIKO NH35


1. HOW TO SET THE TIME

1) Pull out crown B to the second click position.

- 2) Turn crown B to set hour and minute hands. (Check that AM/ PM is set correctly.)
- 3) Push crown B back into the normal position.

2. HOW TO WIND THE MAINSPRING

- a) Manual winding (Rotate crown B clockwise at normal position) Fully wound by turning the crown for minimum 55 times. It will start to move naturally after shaking slightly.
- b) Wind with a watch winder. Full wind conditions (Reference information) - Rotary speed : 30 rpm - Operating time : 60 minutes

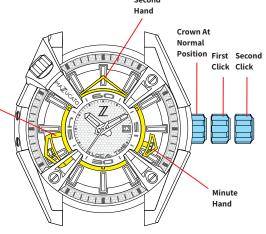




7

Hand

MAZUCATO NEVER BORING

Second

INSTRUCTION MANUAL

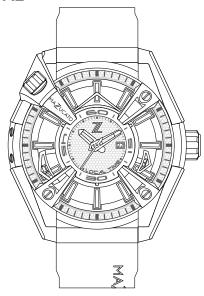

q

MAZZUCATO LAX: Components





INSTRUCTION MANUAL

INDEX

P.4 MAZZUCATO LAX: Components

P.6 3 Hands Date Automatic Caliber SEIKO NH05

P.8 3 Hands Automatic Caliber SEIKO NH35


1 Crown A

- 2 Hands Group A
- 3 Crown B

3

4 Hands - Group B

4

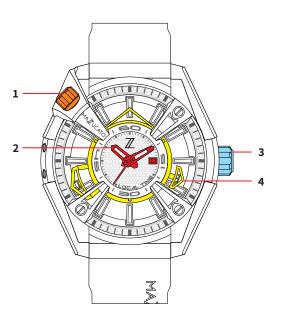



www.mazzucatowatches.com

follow us on (f)