

DECORATIVE FIREPLACE DOOR:

DDF36CCPD-1

FOR USE ON DVCT36 SERIES FIREPLACES

DDF40CPD-1

FOR USE ON DVCT40 SERIES FIREPLACES

NOTE: Remove any fasteners securing the doors to the frame before installation (if applicable).

1. Lift and remove both doors from the frame. **See Figure 1.**

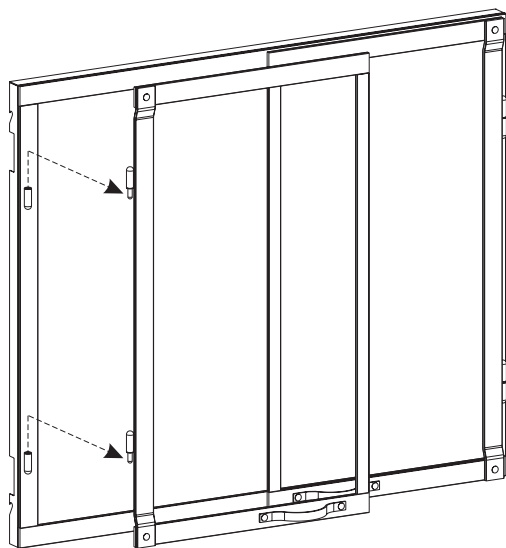


Figure 1

2. Hang the decorative frame onto the glass frame over the barrier screen so the notches hang on the four screws. **See Figure 2.**

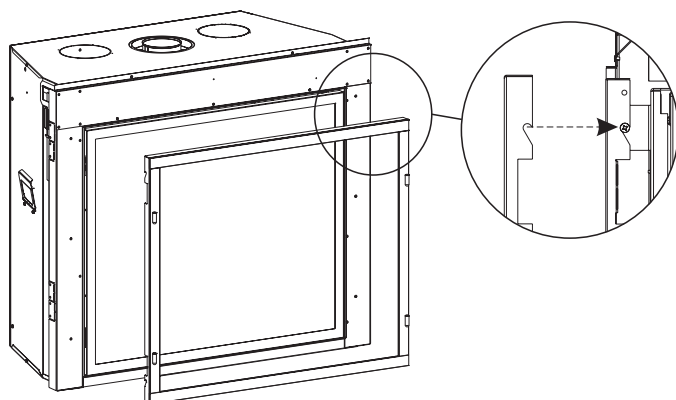


Figure 2

3. Reattach doors removed in Step 1. **See Figure 3.**

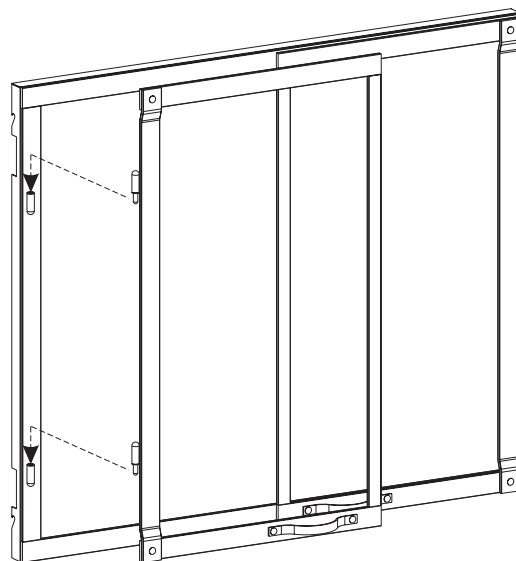


Figure 3