

HearthRite

RADIANT & BLUE FLAME VENT-FREE GAS HEATERS

RADIANT VENT-FREE GAS HEATERS



HRW060, HRW10 (shown)



HRW17, HRW18



HRW25, HRW30

BLUE FLAME VENT-FREE GAS HEATERS



HRW06, HRW10



HRW17, HRW18



HRW25, HRW30

- 99.9% efficiency – turns more gas into heat
- Heats even when electric power fails
- Available in Propane and Natural Gas
- Choose manual or thermostat control

- Wall-mount (included) or floor stand available*
- Three-year limited warranty on parts and labor
- Equipped with Oxygen Depletion Sensor

*Must be installed to wall or floor; not a portable unit

ACCESSORIES



Blower



Floor Stand

RADIANT VENT-FREE GAS HEATERS

Model	Description	BTUs	Fuel Type	Product Size	Product Weight	UPC
HRW060ML	RADIANT GAS HEATER, MANUAL	6,000 BTU	Propane	7.44 x 16.29 x 23	16.31	720968960931
HRW060MN	RADIANT GAS HEATER, MANUAL	6,000 BTU	Natural	7.44 x 16.29 x 23	16.31	720968960924
HRW10ML	RADIANT GAS HEATER, MANUAL	10,000 BTU	Propane	7.44 x 16.29 x 23	17.20	720968960900
HRW10MN	RADIANT GAS HEATER, MANUAL	10,000 BTU	Natural	7.44 x 16.29 x 23	17.20	720968960917
HRW10TL	RADIANT GAS HEATER, THERMOSTAT	10,000 BTU	Propane	7.44 x 16.29 x 23	15.87	720968960856
HRW10TN	RADIANT GAS HEATER, THERMOSTAT	10,000 BTU	Natural	7.44 x 16.29 x 23	15.87	720968960849
HRW17ML	RADIANT GAS HEATER, MANUAL	16,800 BTU	Propane	7.44 x 19.84 x 23	18.30	720968960894
HRW17TL	RADIANT GAS HEATER, THERMOSTAT	17,100 BTU	Propane	7.44 x 19.84 x 23	18.30	720968960832
HRW18MN	RADIANT GAS HEATER, MANUAL	18,000 BTU	Natural	7.44 x 19.84 x 23	18.30	720968960887
HRW18TN	RADIANT GAS HEATER, THERMOSTAT	18,000 BTU	Natural	7.44 x 19.84 x 23	18.30	720968960825
HRW25ML	RADIANT GAS HEATER, MANUAL	25,000 BTU	Propane	7.44 x 27.16 x 23	25.57	720968960870
HRW25TL	RADIANT GAS HEATER, THERMOSTAT	25,000 BTU	Propane	7.44 x 27.16 x 23	25.57	720968960818
HRW30MN	RADIANT GAS HEATER, MANUAL	30,000 BTU	Natural	7.44 x 27.16 x 23	25.57	720968960863
HRW30TN	RADIANT GAS HEATER, THERMOSTAT	30,500 BTU	Natural	7.44 x 27.16 x 23	25.57	720968960801

BLUE FLAME VENT-FREE GAS HEATERS

Model	Description	BTUs	Fuel Type	Product Size	Product Weight	UPC
HBW06ML	BLUE FLAME GAS HEATER, MANUAL	6,000 BTU	Propane	7.44 x 16.29 x 23	15.87	720968961099
HBW06MN	BLUE FLAME GAS HEATER, MANUAL	6,000 BTU	Natural	7.44 x 16.29 x 23	15.87	720968961082
HBW10ML	BLUE FLAME GAS HEATER, MANUAL	10,000 BTU	Propane	7.44 x 16.29 x 23	15.87	720968961075
HBW10MN	BLUE FLAME GAS HEATER, MANUAL	10,000 BTU	Natural	7.44 x 16.29 x 23	15.87	720968961068
HBW10TL	BLUE FLAME GAS HEATER, THERMOSTAT	10,000 BTU	Propane	7.44 x 16.29 x 23	15.87	720968961051
HBW10TN	BLUE FLAME GAS HEATER, THERMOSTAT	10,000 BTU	Natural	7.44 x 16.29 x 23	15.87	720968961044
HBW20ML	BLUE FLAME GAS HEATER, MANUAL	20,000 BTU	Propane	7.44 x 19.84 x 23	18.90	720968961037
HBW20MN	BLUE FLAME GAS HEATER, MANUAL	20,000 BTU	Natural	7.44 x 19.84 x 23	18.90	720968961020
HBW20TL	BLUE FLAME GAS HEATER, THERMOSTAT	20,000 BTU	Propane	7.44 x 19.84 x 23	18.90	720968961013
HBW20TN	BLUE FLAME GAS HEATER, THERMOSTAT	20,000 BTU	Natural	7.44 x 19.84 x 23	18.90	720968961006
HBW30ML	BLUE FLAME GAS HEATER, MANUAL	30,000 BTU	Propane	7.44 x 27.16 x 23	24.20	720968960993
HBW30MN	BLUE FLAME GAS HEATER, MANUAL	30,000 BTU	Natural	7.44 x 27.16 x 23	24.20	720968960986
HBW30TL	BLUE FLAME GAS HEATER, THERMOSTAT	30,000 BTU	Propane	7.44 x 27.16 x 23	24.20	720968960979
HBW30TN	BLUE FLAME GAS HEATER, THERMOSTAT	30,000 BTU	Natural	7.44 x 27.16 x 23	24.20	720968960962

ACCESSORIES

Model	Description
HABLR	BLOWER – THERMOSTAT AND MANUAL CONTROL
HABF	FLOOR STAND – Fits HRW15, HRW18, HRW25, HRW30, HBW20, HBW30
HASF	FLOOR STAND – Fits HRW060, HRW10, HBW06, HBW10

WARRANTY

All Parts carry a 3-year limited warranty with a 3-year limited labor warranty.

HearthRite is committed to continuous product improvement. Specifications are subject to change without notice. Imported for Empire from China.

Empire Comfort Systems is committed to continuous product improvement; specifications are subject to change without notice. Flame size, shape, and color will vary from photos.

These heaters have a pilot light safety system that turns the heater off if not enough fresh air is available. Do not tamper with this safety system. If the heater shuts off, do not re-light until you provide fresh air. If the heater keeps shutting off, have it serviced. Keep the burner and control compartment clean.

These heaters are design certified in accordance with American National Standards Institute Z21.11.2a (latest standard) by the Canadian Standards Association as Unvented Room Heaters.

The installation must conform to local codes. In the absence of local codes, the installation must conform with American National Standard (National Fuel Gas Code) known as NFPA 54 and ANSI Z223.1 (latest edition) available from the American National Standards Institute, Inc., 11 West 42nd St., New York, N.Y. 10036, or from the National Fire Protection Association, Batterymarch Park, Quincy, Massachusetts 02269.

HearthRite

A Division of
Empire Comfort Systems
918 Freeburg Ave.
Belleville, IL 62220-2623
E-mail: info@empirecomfort.com

