


Crystal Fire® Plus Burner Quick-Start Guide




- THIS GUIDE IS ONLY TO BE USED AFTER YOU READ AND UNDERSTAND THE FULL INSTALLATION INSTRUCTIONS SUPPLIED WITH YOUR CRYSTAL FIRE® PLUS BURNER.
- THIS GUIDE ONLY APPLIES TO 20LB. SELF-CONTAINED PROPANE INSTALLATIONS. ALL OTHER INSTALLATIONS ARE FOUND IN FULL INSTALLATION INSTRUCTIONS.


1 Secure the control panel in place.

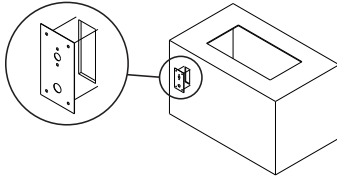


2 Secure the sparker box to the control panel.

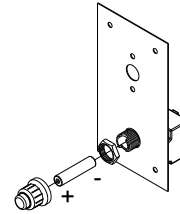


3 Using two adjustable wrenches, ensure all plumbing connections are tight.

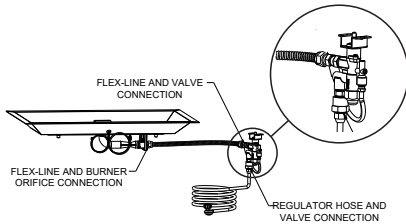


4 Secure the control valve to the control panel with the two screws provided.

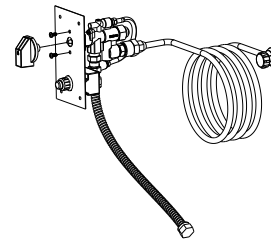


5 Connect igniter and ground wire to sparker box.

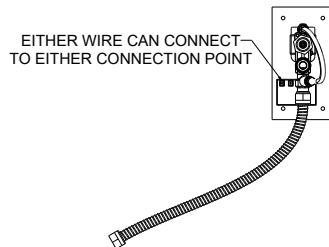


6 Carefully uncoil the thermocouple lead. Connect to the valve first by hand then tighten with a 10mm wrench. One thread should be visible when properly installed. **DO NOT** cross-thread thermocouple connection.

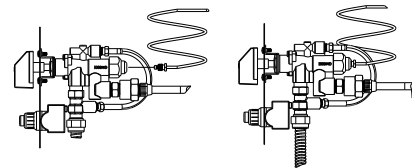


7 Carefully place burner into enclosure location. Place media in burner **DO NOT GET ANY MEDIA INSIDE THE IGNITION WIND GUARD.** Remove the cardboard from ignition wind guard.

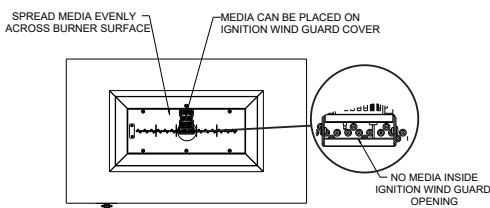

8 Connect hose and regulator to self-contained propane cylinder.

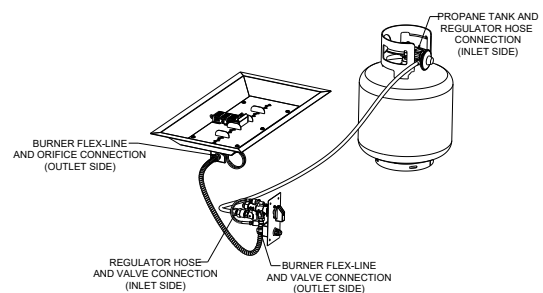

9 Test fire unit and check for leaks prior to full operation.

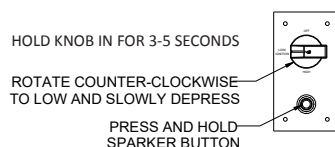

10 If no leaks are present, your system is ready to use.