


Fix your Fireplace

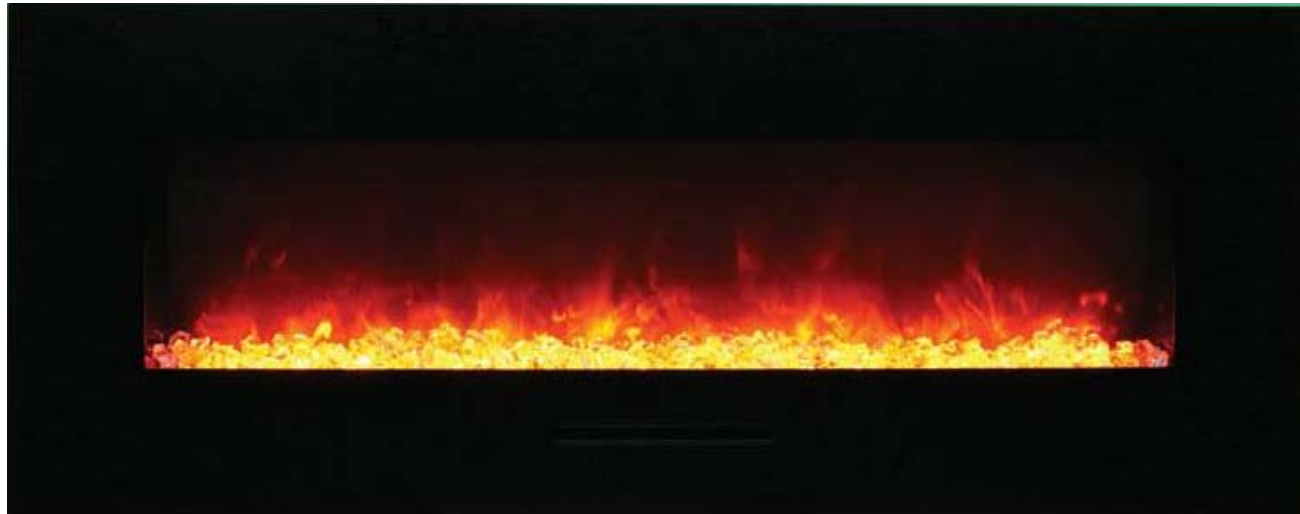

Amantii
Electric Fireplaces

Contents

- [How to replace LED light](#)
- [How to replace flicker motor](#)
- [How to replace the heating element](#)
- [How to replace the PCB board](#)

 
Replace LED light

Item No.:FS-26-922

Step 1



Hold tightly and push upwards, then you can remove the **front glass panel**



Step 2



Unscrew two screws on the top of each side (red dots) to remove inner side panels and ember bed glass panel



Left



Right

Remove screws → remove side panels → remove ember bed glass panel




Step 3

Now, you can replace ember bed LED light




Ember bed LED light locates here

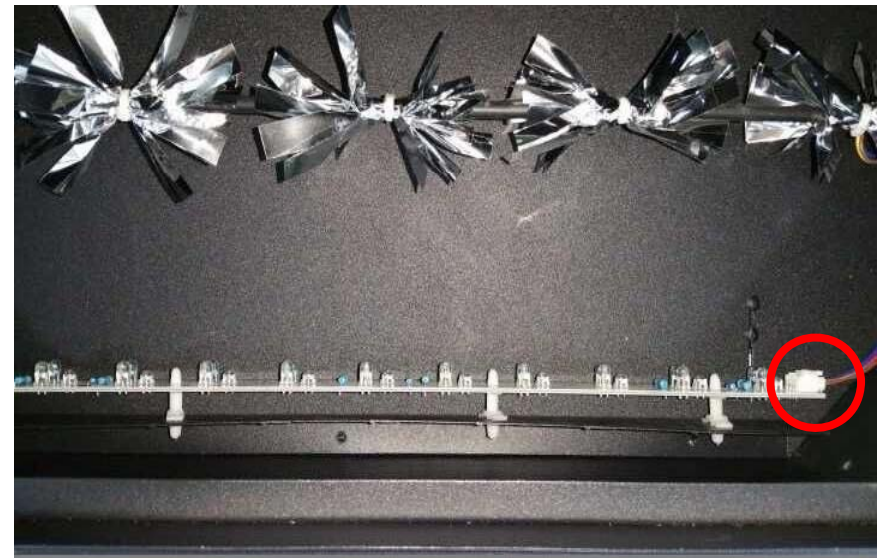


Unplug the red circled socket and replace The old LED light with a new one

Change flame light, see step 4

Step 4

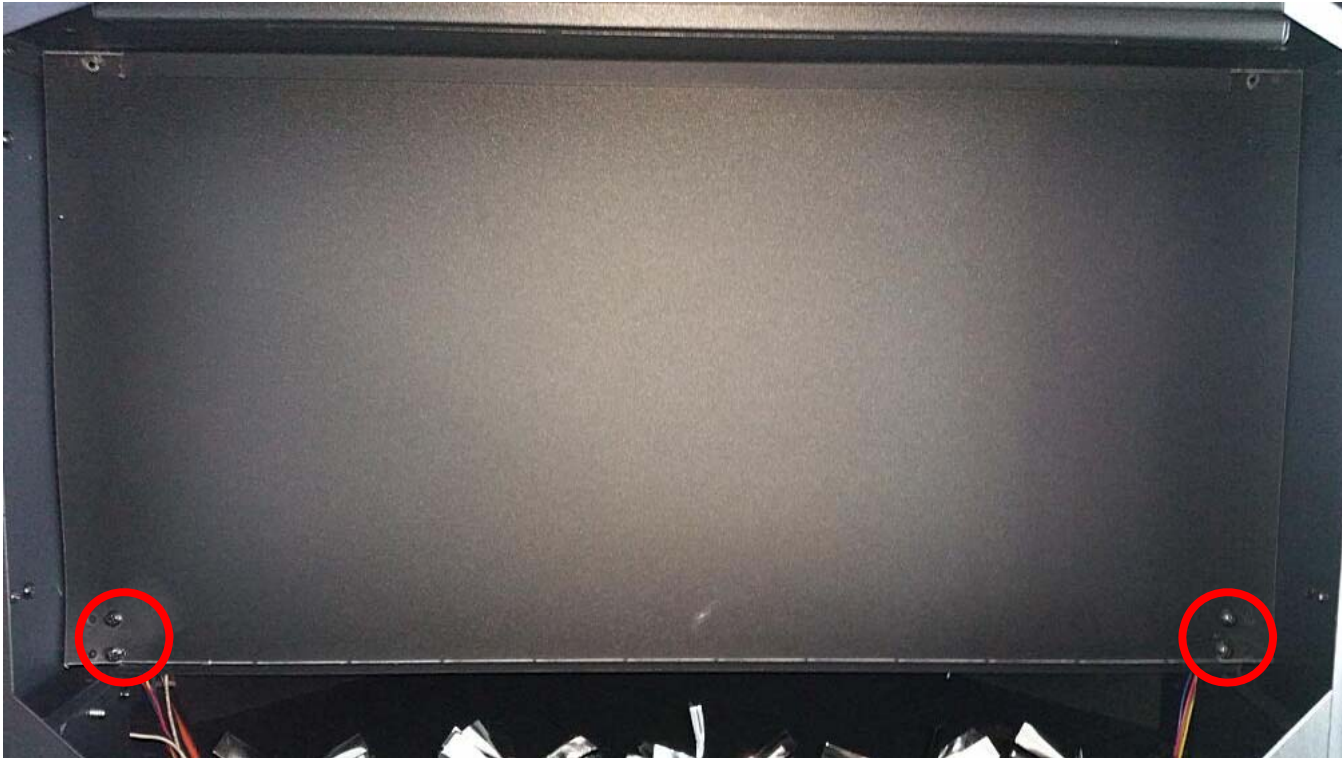


Unscrew 4 screws on both sides (circled in red) to remove the plastic board

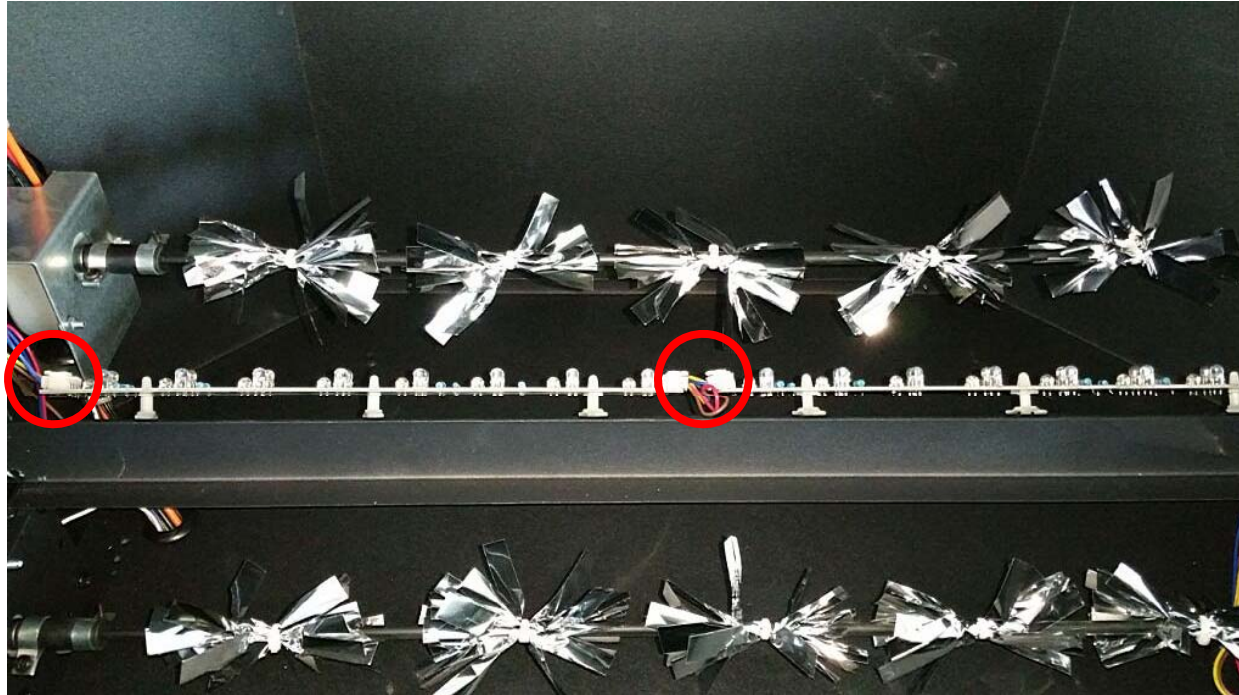

Now you can replace the flame light.


Replace flicker motor

Please follow [Step1](#) and [Step2](#) in replace LED light, then you arrived here

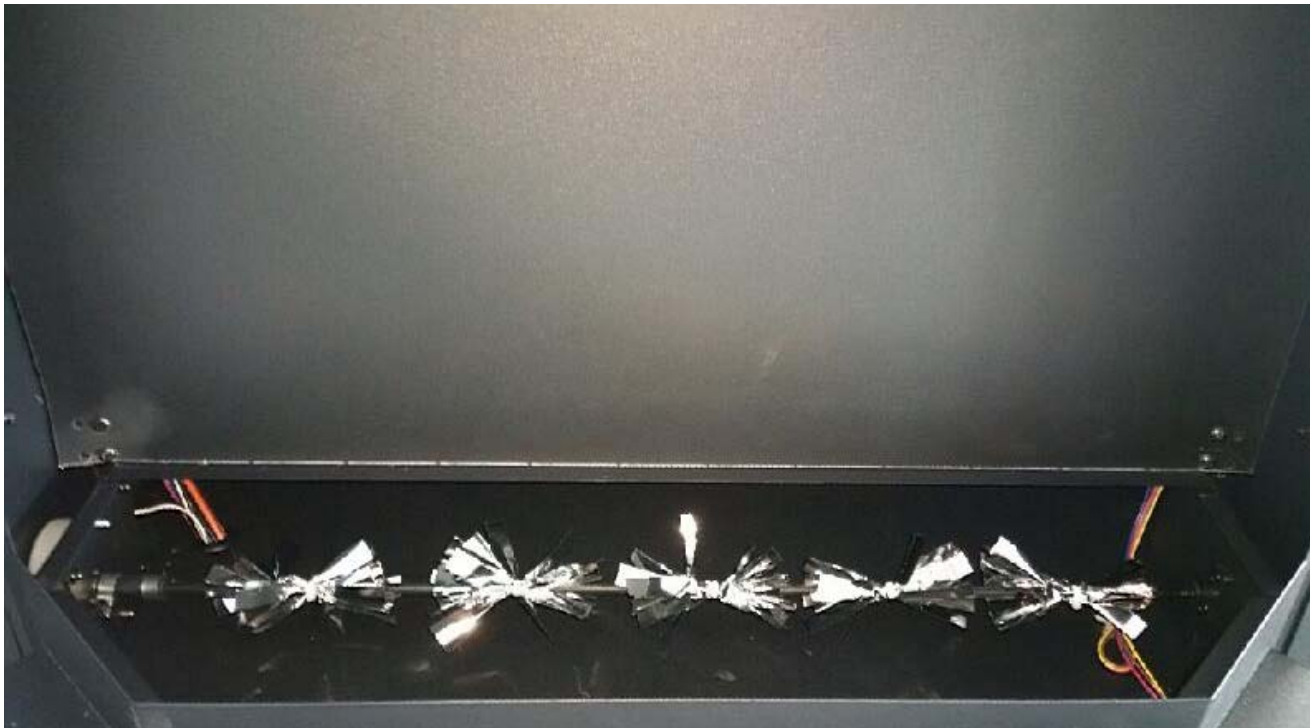

Replace ember bed flicker motor


Step 1

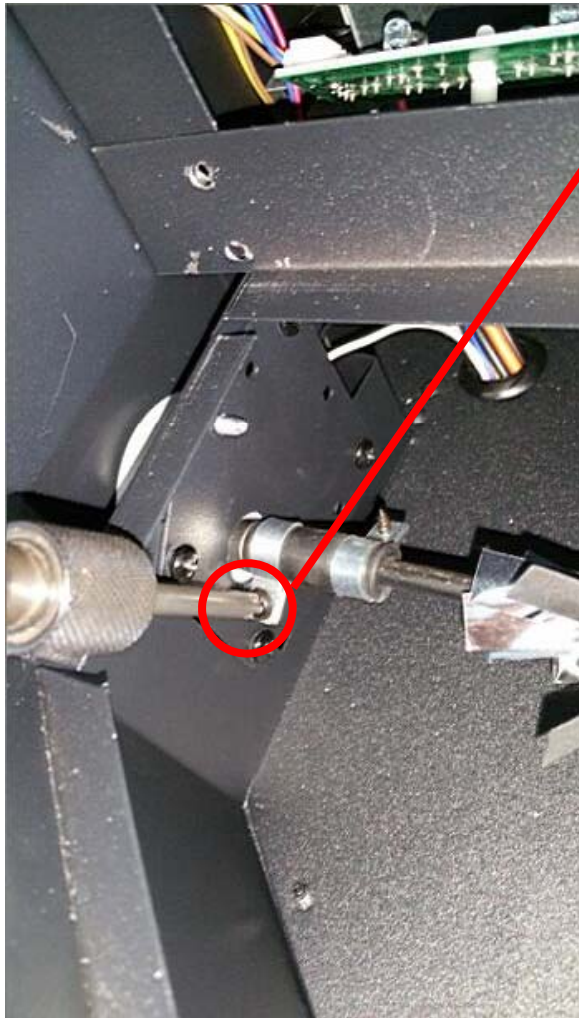

Unscrew the screw to separate the motor and the flicker rod



Step 2

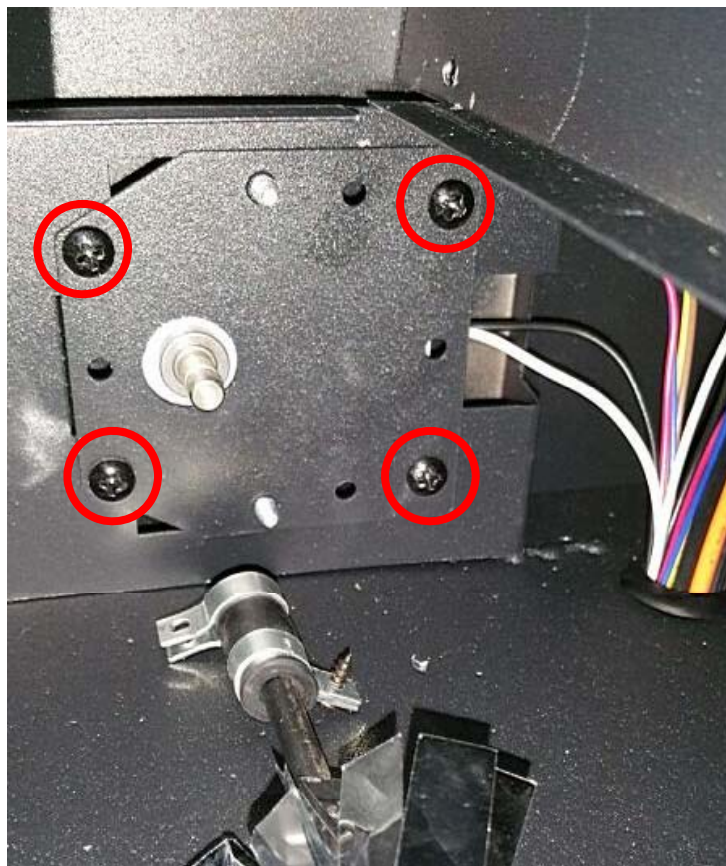


Unscrew the four screws circled
In red to remove the motor



Now you can change the motor


Replace flame effect flicker motor

Step 1

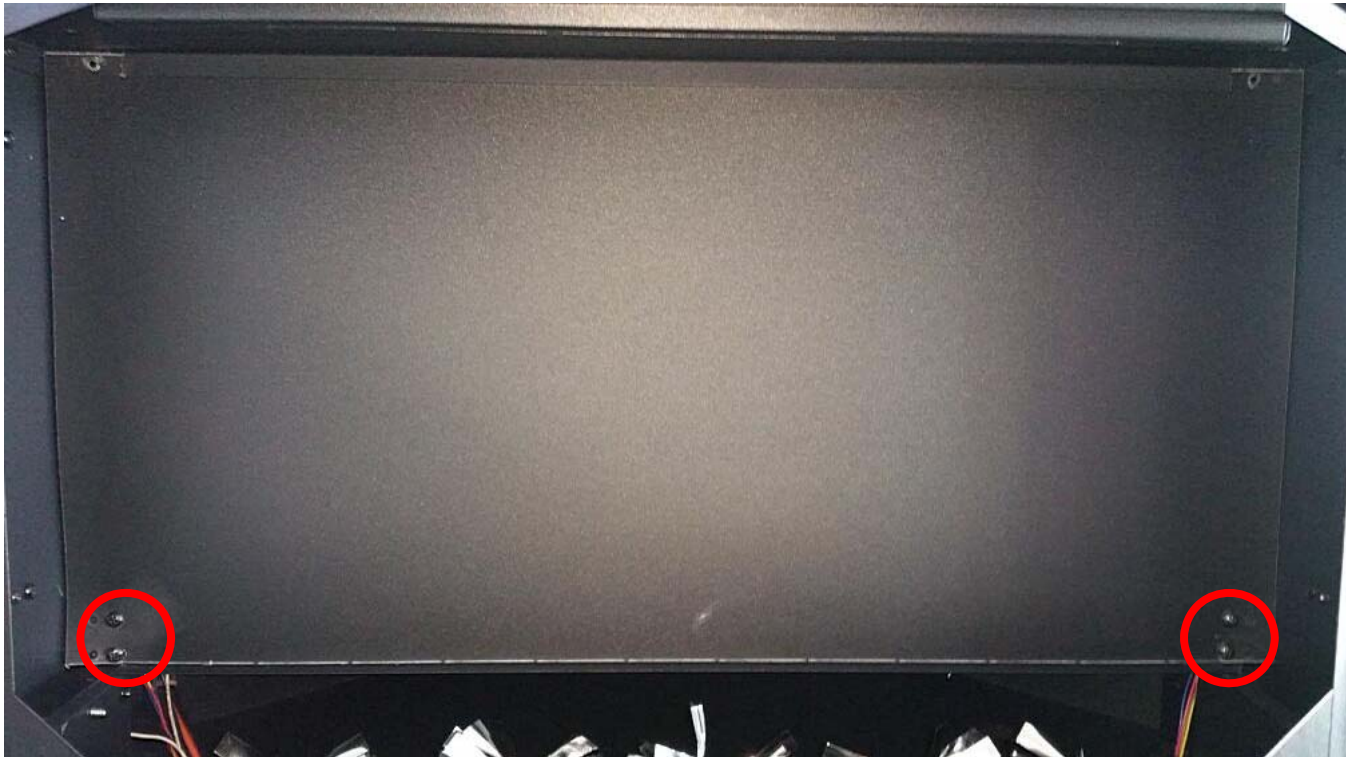


Unscrew 4 screws on both sides (circled in red) to remove the plastic board

Step 2

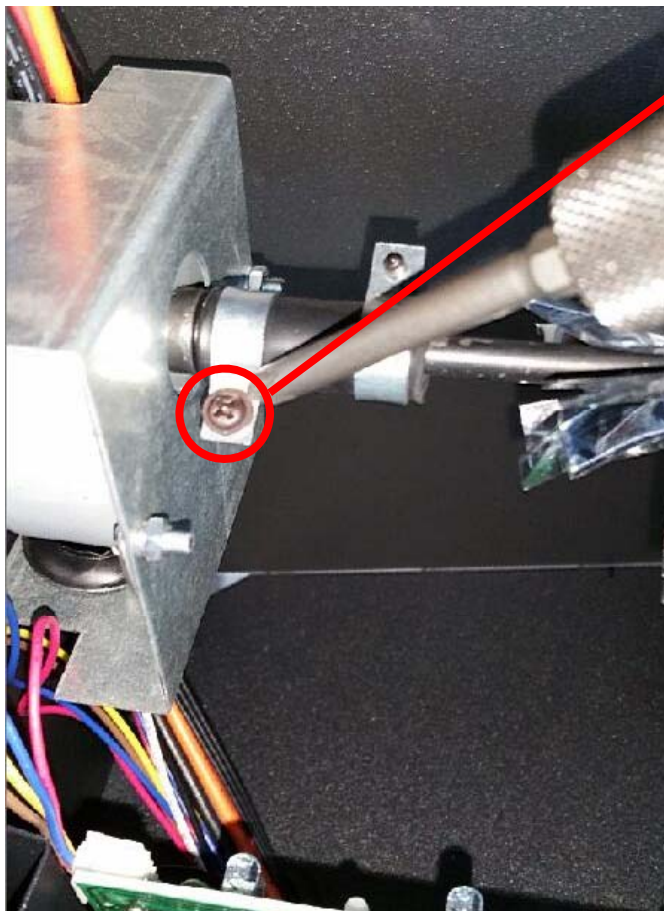

Unscrew the screw to separate the motor and flicker rod

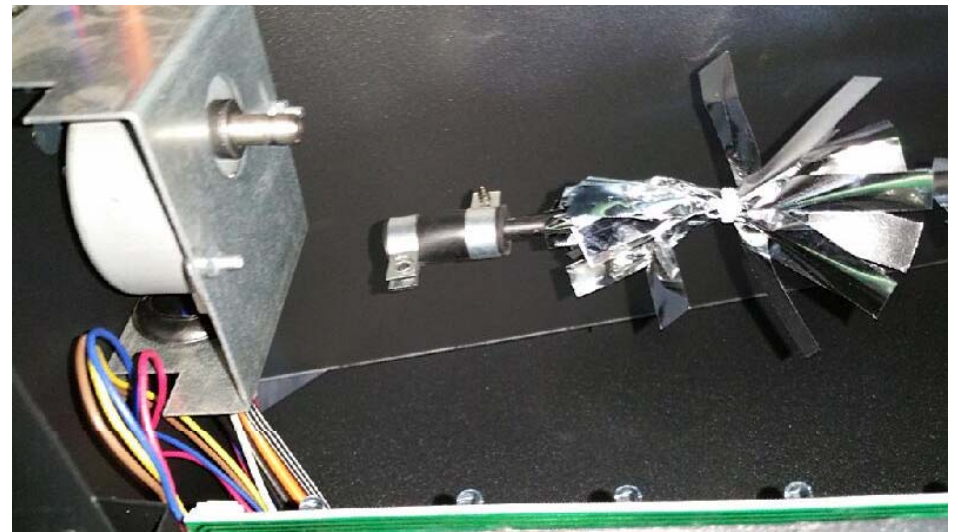

Step 3



Right

Unscrew the four screws on both side(circled in red, comparative bigger ones)

 


Left

Step 4



Unscrew the six screws circled in left picture, then you can remove the main body cover



Step 5

Unscrew the screws and then you can remove the flicker motor for flame effect



Replace the heating element


Please follow [Step1](#) and [Step2](#) in replace LED light, and [step3](#) and [step4](#) in Replace flame effect flicker motor

Step 1 Remove the upper cover



Right


Unscrew the four screws circled in pictures, on right and left sides of the fireplace body, then you can remove [upper cover](#)

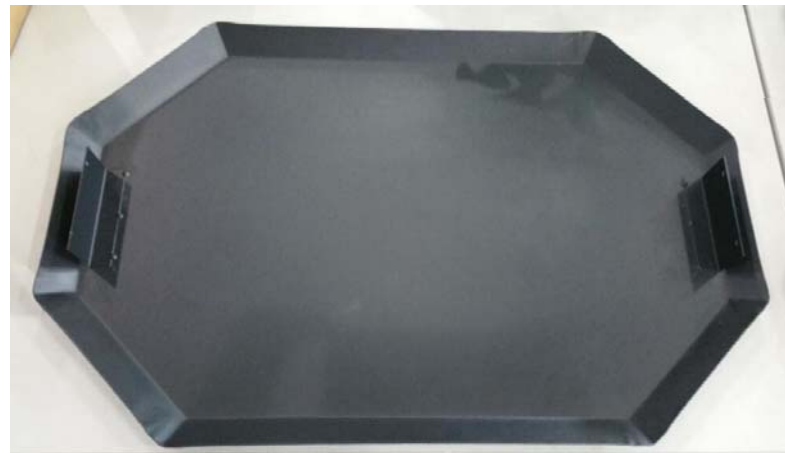

Left

Step 2

After the upper cover is removed, you can see heating element like bellow. Unscrew 3 screws.

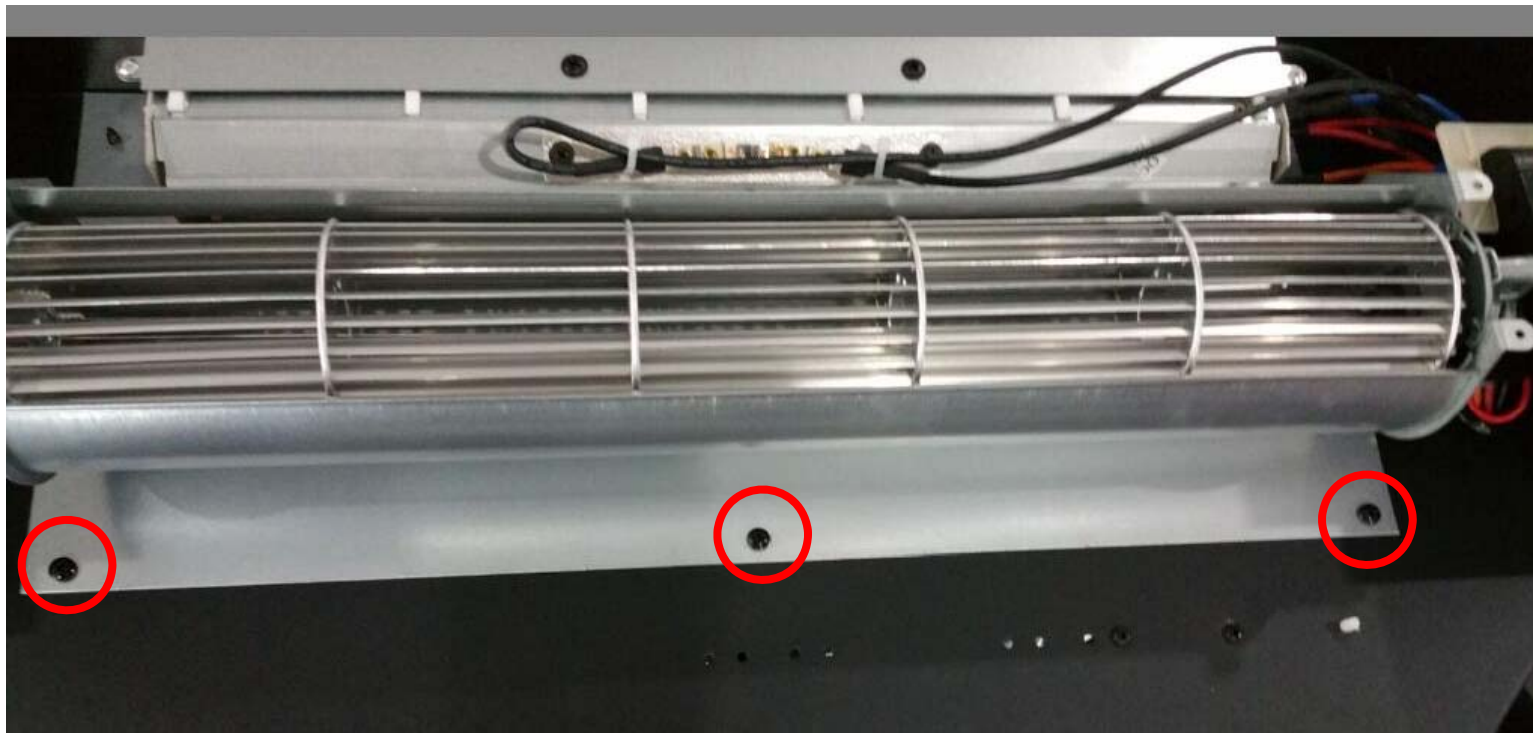

Step 3

In order to remove the heating element, you need to unscrew 4 more screws which are beneath the heating element, opposite to the three screws you Removed at the Srep2.



In details
→




Right



Left

Step 4

Unplug the heating element and then you can remove it.

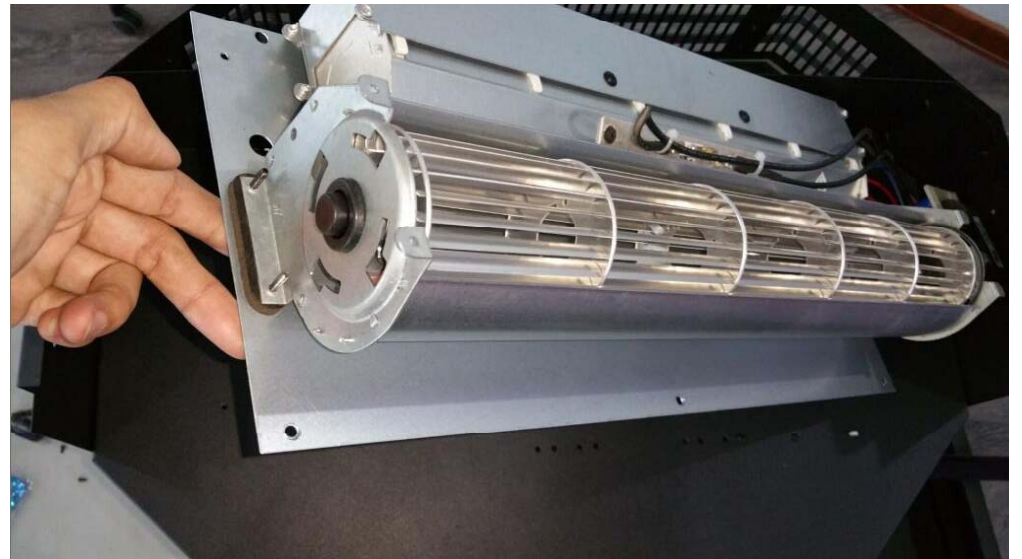

Replace the PCB board

Step 1