


Electronic Speed Controller Range With TP Contacts

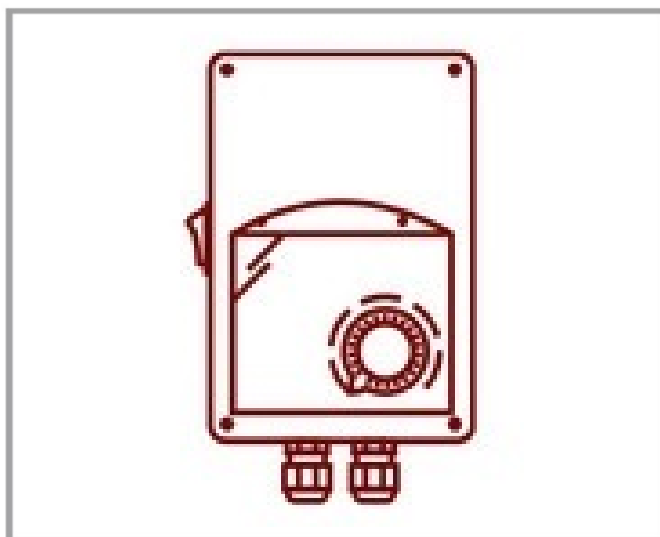

Stock Ref. N°

SC5030TK

SC5050TK

SC5060TK

SC5010TK

Vent-Axia[®]

UK
CA
CE

Table of contents

SAFETY AND PRECAUTIONS	3
PRODUCT DESCRIPTION	4
STOCK REF NUMBERS	4
INTENDED AREA OF USE	4
TECHNICAL DATA	4
STANDARDS	5
WIRING AND CONNECTIONS	5
OPERATIONAL DIAGRAMS	5
MOUNTING INSTRUCTIONS IN STEPS	6
VERIFICATION OF INSTALLATION INSTRUCTIONS	8
TRANSPORT AND STORAGE	8
WARRANTY AND RESTRICTIONS	8
MAINTENANCE	8

SAFETY AND PRECAUTIONS

Read all the information, the datasheet, mounting and operating instructions and study the wiring and connection diagram before working with the product.

For personal and equipment safety, and for optimum product performance, make sure you entirely understand the contents before installing, using, or maintaining this product.

For safety reasons, unauthorised conversion and / or modifications of the product are inadmissible.

The product should not be exposed to abnormal conditions, such as: extreme temperatures, direct sunlight or vibrations. Long-term exposure to chemical vapours in high concentration can affect the product performance. Make sure the work environment is as dry as possible; avoid condensation.

All installations shall comply with local health and safety regulations and local electrical standards and approved codes. This product can only be installed by an engineer or a technician who has expert knowledge of the product and safety precautions.

Avoid contacts with energised electrical parts. Always disconnect the power supply before connecting, servicing or repairing the product.

Always verify that you apply appropriate power supply to the product and use appropriate wire size and characteristics. Make sure that all the screws and nuts are well tightened and fuses (if any) are fitted well.

Recycling of equipment and packaging should be taken into consideration and these should be disposed of in accordance with local and national legislation / regulations.



In case there are any questions that are not answered, please contact your technical support or consult a professional.

PRODUCT DESCRIPTION

The electronic speed controllers regulate the speed of single-phase (110—240VAC /50—60Hz) voltage controllable motors by varying the supplied voltage. The controllers offer automatic power supply detection, thermal contacts (TK) for motor overheating protection, an alarm output, NO (open contact) and NC (closed contact) inputs for remote start / stop. The minimum and maximum speed are internally adjusted via trimmers. The series features an unregulated output for connecting a valve, lamp, damper, etc. The output is regulated by a potentiometer in the range between the minimum output voltage and the supply voltage. There are two start-up modes - kick start and soft start, selectable via a jumper.

Stock Ref. Nos

Stock Ref Nos	Rated max. current (A)	Fuse (5*20mm), (A)
SC5030TK	3,0	F5,0 AH 250 VAC
SC5050TK	5,0	F8,0 AH 250 VAC
SC5060TK	6,0	(6,3*32) F10,0 AH 250 VAC
SC5010TK	10,0	(6,3*32) F16,0 AH 250 VAC

INTENDED AREA OF USE

- Fan speed control of voltage controllable motors in ventilation systems
- For indoor use only

TECHNICAL DATA

- Supply voltage: 110—240 VAC / 50—60 Hz
- Power switch with LED indication
- Automatic supply voltage detection
- Regulated output current rating: I_{max.} = 3 A / 5A / 6 A / 10 A, depending on the product version
- Unregulated output current rating: I_{max.} = 2 A
- Alarm output current rating: I_{max.} = 0,5 A
- Soft start or kick start mode
- Trimmers for minimum and maximum output voltage adjustment
- Normal operation green LED indication
- Alarm operation red LED indication
- Enclosure:
 - ▶ plastic R-ABS, UL94-V0
 - ▶ grey colour (RAL 7035)
- Protection standard: IP54 (according to EN 60529)
- Storage temperature: -40—50 °C
- Operating ambient conditions:
 - ▶ temperature: -20—35 °C
 - ▶ rel. humidity: 5—95 % rH (non-condensing)
- Storage temperature: -40—50 °C

STANDARDS

- Low Voltage Directive 2014/35/EC
- EMC 2014/30/EC: EN 61000-6-2: 2005/AC:2005, EN 61000-6-3:2007/A1:2011/AC:2012, EN 61326-2-3:2013
- WEEE Directive 2012/19/EC
- RoHS Directive 2011/65/EC


WIRING AND CONNECTIONS

L	Line, power supply (110—240 VAC / 50—60 Hz)
N	Neutral
L1	Unregulated output, $I_{max.} = 2 \text{ A}$
PE	Earth terminal
U2	Regulated output to the motor - neutral
U1	Regulated output to the motor - line
TK	Thermal cut-out contact
AL	Alarm output, $I_{max.} = 0,5 \text{ A}$
NO	Normally open contact
NC	Normally closed contact


Cable cross section: max. $2,5 \text{ mm}^2$
 Connections Cable gland clamping range: 5—10 mm
 (SC5060TK & SC5010TK) 3—6 mm

OPERATIONAL DIAGRAMS


Control curve

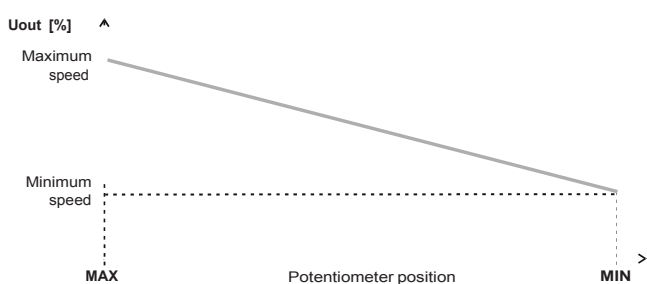


Kick start mode

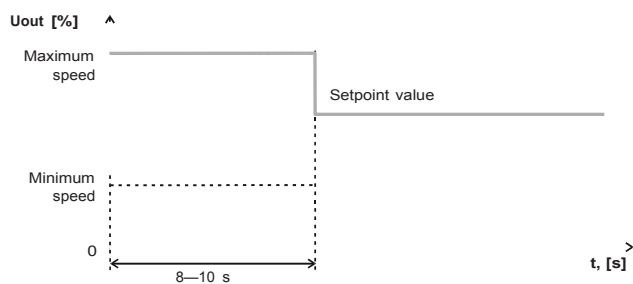

Ranges of minimum and maximum output voltage adjustment trimmers

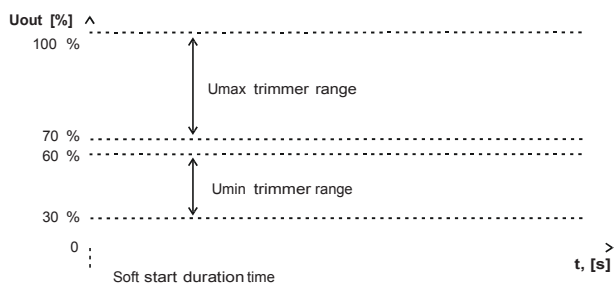

Soft start mode

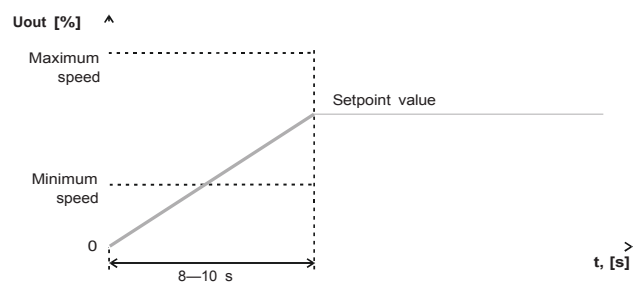

MOUNTING INSTRUCTIONS IN STEPS

Before you start mounting the controller, read carefully “**Safety and Precautions**”. Choose a smooth surface for installation (a wall, panel, etc.).

Follow these steps:

1. Make sure that the controller is switched off.
2. Unscrew the front cover and open the enclosure. Mind the wires that connect the potentiometer with the printed circuit board.
3. Fix the unit to the wall or panel using the provided screws and dowels. Mind the correct mounting position and unit mounting dimensions. (See **Fig. 1** *Mounting dimensions* and **Fig. 2** *Mounting position*.)

Fig. 1 Mounting dimension


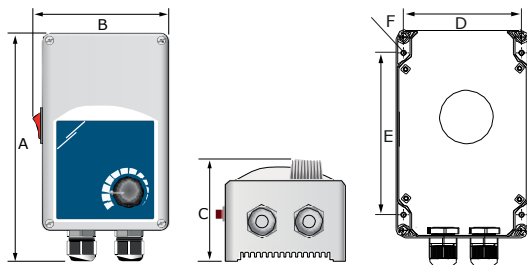


Fig. 2 Mounting position

Correct

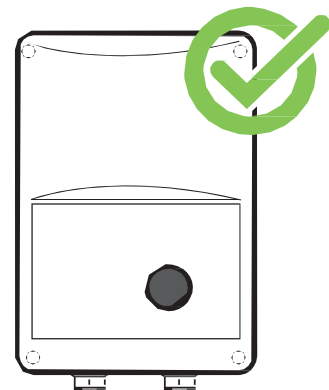


Stock Ref Nos	A	B	C	D	E	F
SC5030TK	162mm	96mm	75mm	71mm	108.8mm	Ø4.2
SC5050TK	162mm	96mm	93mm	71mm	108.8mm	Ø4.2
SC5060TK SC5010TK	205mm	124mm	97mm	102mm	140mm	Ø4.6


4. Insert the cables through the cable glands and do the wiring according to the wiring diagram (see **Fig. 3**) while adhering to the information from section “**Wiring and connections**” above.
 - 4.1 Connect the motor / fan (terminals U2, U1 and PE);
 - 4.2 Connect the power supply terminals (terminals L and N);
 - 4.3 If applicable, connect the unregulated output (terminals L1 and N). It can be used to supply a 230 VAC valve, lamp, etc. L1 is powered while the regulated output is active and connecting an item to it is optional.
 - 4.4 Connect the motor overheating protection (terminals TK). If no motor overheating protection is available, the two TK connection points must be connected via a bridge. As standard, there is a bridge between the TK terminals.
 - 4.5 If applicable, connect the alarm output (terminals AL).
 - 4.6 If applicable, connect the normally closed and normally open contacts for external or remote ON / OFF switching (terminals NO, NC).

Fig. 3 Wiring and connections


SC5030TK

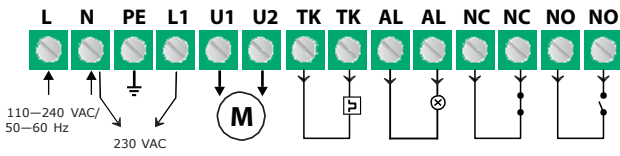

SC5050TK

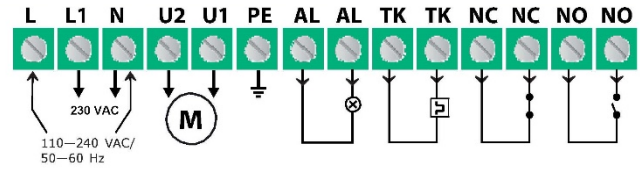

SC5060TK & SC5010TK

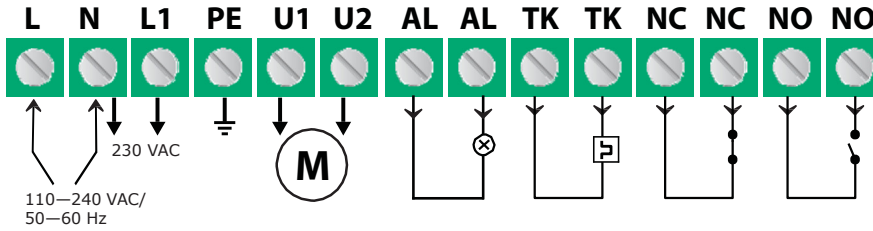

Make sure you use cables with an appropriate diameter.




Make sure the connections are correct before you power the unit.

5. Adjust the minimum output voltage using the minimum speed trimmer (if necessary). The factory pre-set is 45 % and it can vary within the range 30—60 % of the supplied voltage. See **Fig. 4 Min. speed trimmer**.
6. Adjust the maximum output voltage using the maximum speed trimmer (if necessary). The factory pre-set is 100 % and it can vary within the range 70—100 % of the supplied voltage. See **Fig. 5 Max. speed trimmer**.

Fig. 4 Min. speed trimmer



Fig. 5 Max. speed trimmer

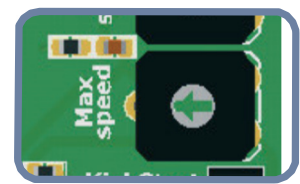

7. Select kick start or soft start using the jumper shown in **Fig. 6 Kick start jumper**. The kick start duration time is 8—10 s. By default the jumper is connected, i.e. the pre-set mode is kick start. Keep the jumper installed or remove it depending on your start mode selection.

Fig. 6 Kick start jumper



Kick start selection jumper		Kick start is enabled
		Soft start is enabled

() indicates closed position of the jumper

8. Close and fix the cover.
9. Switch on the power supply.

VERIFICATION OF INSTALLATION INSTRUCTIONS



Use only tools and equipment with non-conducting handles when working on electrical devices.

1. Close the NC (normally closed) contact pair.
2. Open the NO (normally open) contact pair.
3. Close the TK (thermal) contact pair.
4. If “Kick start” mode has been selected, i.e. the jumper is connected, make sure that the motor runs at maximum speed for 8—10 seconds. After this period, it will run according to the potentiometer position. If “Soft start” mode has been enabled, the motor goes from minimum speed to the speed selected by the potentiometer during the first 8—10 seconds.
5. If this is not the case, check the connections and the settings again.

LED indications

The two LEDs on the controller cover indicate the following:

1. If the green LED is ON, it indicates normal operation.
2. Blinking green LED indicates activated NC or NO contact. The controller stops.
3. If the red LED is ON, it indicates TK detection. The motor is overheated, therefore the controller stops because alarm is activated. In this case, you must restart the controller via the illuminated ON/OFF switch.
4. If both LEDs blink, the potentiometer is disconnected and the controller stops.

TRANSPORT AND STORAGE

Avoid shocks and extreme conditions; stock in the original packing.

WARRANTY AND RESTRICTIONS

Two years from the delivery date against defects in manufacturing. Any modifications or alterations to the product after the date of publication relieve the manufacturer of any responsibilities. The manufacturer bears no responsibility for any misprints or mistakes in this data.



Use only fuses of the type and rating specified above; otherwise, loss of warranty will ensue.

MAINTENANCE

In normal conditions this product is maintenance-free. If soiled, clean with a dry or damp cloth. In case of heavy pollution, clean with a non-aggressive product. In these circumstances the unit should be disconnected from the supply. Pay attention that no fluids enter the unit. Only reconnect it to the supply when it is completely dry.

Vent-Axia

Head Office: Fleming Way, Crawley, West Sussex, RH10 9YX. Tel: 01293 526062 Fax: 01293 551188

EU Authorised Representative: Vent-Axia Bedrijvenweg 17 7442 CX Nijverdal Nederland authorisedrep@vent-axia.nl

UK NATIONAL CALL CENTRE, Newton Road, Crawley, West Sussex, RH10 9JA

SALES ENQUIRIES: Tel: 0344 8560590 Fax: 01293 565169

TECHNICAL SUPPORT: Tel: 0344 8560594 Fax: 01293 539209

Web:-www.vent-axia.com

Email:- info@vent-axia.com

As part of the policy of continuous product improvement Vent-Axia reserves the right to alter specifications without notice.