

QUARTZ TIMER

ALARM CLOCK

 
MODEL NO. CT-102



MODEL CT-102


KEY FUNCTION DEFINITION

DISPLAY	S1	S2	S3	S4	S5	DIGIT (0-9)	
CLOCK NORMAL TIME	MODE	ALARM	ON/OFF	ALARM	SET	PM	SET CLOCK
			CHIME				
ALARM TIME	MODE	ALARM	ON/OFF	CLOCK	SET	PM	SET ALARM TIME
			CHIME				
TIMER STOP	MODE	START	RESET	up/down	Memory		SET TIMER
START	MODE	STOP	---	---	VIEW DATA	---	(NO working)

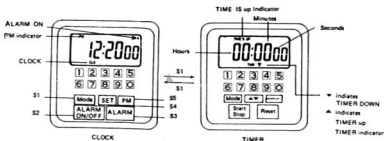

■ ERROR SOUND SYSTEM

 In "REAL TIME", ALARM SETTING Status, if HOURS SETTING more than 12, Minutes setting more than 59, then press S4 (SET) "E" will appear and sound for 5 seconds to remind ERROR SETTING.



In "TIMER" SETTING STATUS If HOUR Setting more than "99" MIN. SEC.-setting more than "59" then press S2 START "E" will appear and sound, for 5 seconds to remind ERROR SETTING



 
■ FEATURE

1. REAL TIME/ALARM CLOCK with Hourly CHIME.
2. COUNT UP / DOWN TIMER with STOPWATCH.
3. EASY SETTING BY KEY TONE BUTTONS.
4. ALARM SOUND FOR 4 MIN.
5. TIMER RECALL AND VIEW DATA FUNCTION
6. ERROR SOUND SYSTEM
7. OVER TIME RECORDING.
8. 1-SEC. STOPWATCH. CHRONO TO 100HR
9. DESIGNED W / MAGNET CLIP STAND

■ TIMER SETTING

(MAX. Can be set to 99^H 59^M 59^S)
 (Min. Can be set to 1 second)

- Press S₁, LCD show "TMR"
TIMER MODE indicator.
- Press S₄, Choose TIMER UP
or DOWN.
- TIMER Setting, EX. Press 1
- Press 2,
- Press 3
- Press 4
- Press 0
- Press 0
- a. IN Timer-Down mode,
press S₂, start count down.
- b. IN Timer-up mode, press
S₂, start count up.
- a. When time is down to
Zero, will start to count
automatically
- b. In TIMER up mode when
time is up to "the preset time
", will sound for 60 seconds.
- press any key Stop SOUND
press S₂, Stop counting
- press S₃, Time reset to Zero.
"TIME'S up" disappear.

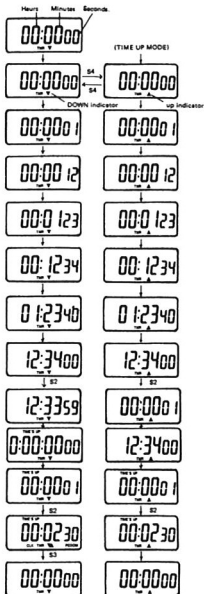

■ TIMER RECALL

At any time when timer stop, press S5 will show "the preset time" press S₂, start counting.

■ VIEW DATA

While the digits start to count up or Down, press S5 will show the "preset time" until key release, then return to running automatically.

■ SOUND STOP

When the sound is output, it is stopped by depressing any keyes in any mode, In this case, one press stop the sound.

■ HOW TO STOP COUNTING

Durning Sound, want to stop counting, must press-S2 (stop) twice immedeatly

■ NOTE

If the count-up TIMER is in RUN Status, the COUNT -DOWN TIMER will not be allowed. On the other hand, If the count-Down TIMER is in RUN status, the count-up timer will not be allowed, too.

When the battery is changed with new one or take off the battery, then re-insert it then will appeal blank LCD display or random wording LCD display.

 
It's normal conditions of IC features.

We should "re-start the IC circuit"-just press buttons S2, S3, S4, S5 at the same time.

The it will start working normally.

CLOCK SETTING

1. Press S₁ LCD shows



2. press S₄ (SET) LCD shows "SET" flashing.



3. press 1, LCD shows



4. press 2, LCD shows



5. press 3, LCD shows



6. press S₅ (PM), LCD shows



7. press D, LCD shows

 


8. press S₄ (SET), LCD shows "SET" disappear, then finish Setting, Seconds start counting.



■ ALARM TIME SETTING

1. press S3, LCD show
2. press S4, "SET" flash
3. press 1
4. press 2
5. press 0
6. press 0
7. press S5 (PM),
8. press S4, "SET" disappear, then finish setting. ALARM ON automatically
9. press S3, Mode change to "CLOCK".

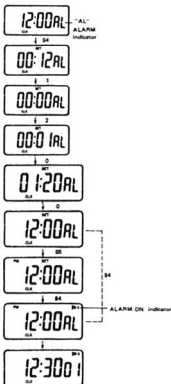

■ ALARM ON/OFF

1. press S2, Chodse ALAKN ON or OFF. The milk "(III A") indicates ALARM ON.

ALARM SOUND STOP

when the sound is output, it is stopped by depressing any switches in any mode. In this case a derressed switch only stops the sound. ALARM SOUND for 4 Minutes.



CHIME ON/OFF

"HOURLY CHIME" ONLY WORK, WHEN ALARM SETTING ON: