





Programming Remote Controls

- 1. Open the driver's door and turn the ignition key to the 'ON' Position.
- 2. Locate the emergency override button. Press and hold the override button until the siren chirps (3) three times then release.
- 3. Press the Arm Button on the Remote Transmitter. The siren will chirp once to confirm the code has been learnt.
- 4. Repeat step 3 to program additional remotes.

(Note: Up to 4 remotes can be programmed to this system)

To exit code learning, simply turn the ignition OFF.

Test remote operation