



TX-PT4 (CODE ALARM) Remote Control (433MHz)



Programming Remote Controls

1. Open the driver's door and turn the ignition key to the 'ON' Position.
2. Locate the emergency override button. Press and hold the override button until the siren chirps (3) three times then release.
3. Press the Arm Button on the Remote Transmitter. The siren will chirp once to confirm the code has been learnt.
4. Repeat step 3 to program additional remotes.

(Note: Up to 4 remotes can be programmed to this system)

To exit code learning, simply turn the ignition OFF.

Test remote operation