



TX-ZVS-250L Remote Control *(433MHz)*



Note: The TX-ZVS-250L Remote has a Red LED

Programming Remote Controls

The system can hold up to 3 remote controls. Just as easily, a lost or stolen remote can be deleted from the memory. Each time a new remote is programmed, it will automatically erase all the previous remote's that were programmed to the system.

1. Open the driver's door and turn the Ignition 'ON'.
2. Press the override / programming button seven times. (The parking lights or indicators will flash twice to indicate you are in programming mode)
3. Within 3 seconds press Button 1 on the first remote to be programmed. The parking lights or indicators will flash once to confirm the code has been learnt.
4. Within 5 seconds of programming the first remote, press button 1 on the second remote to be programmed. The parking lights or indicators will flash twice to confirm the remote has been learnt.
5. **Optional third remote** - within 5 seconds of programming the second remote, press button 1 of the third remote to be programmed. The parking lights or indicators will flash three times to indicate the remote has been learnt.

To exit program mode simply turn the ignition off.