


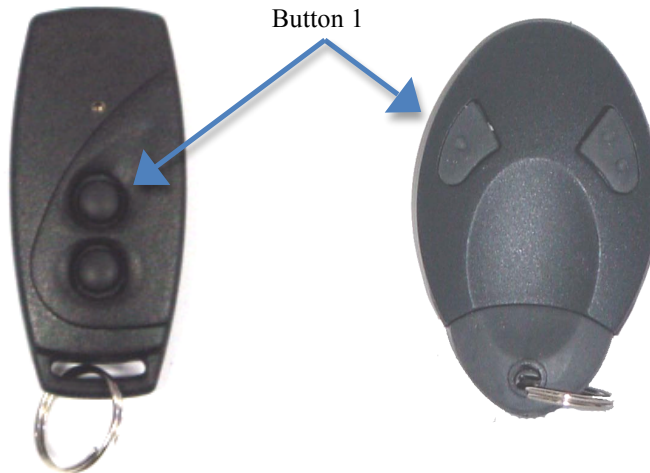

TX-ZVS-280 Remote Control (433MHz)

Note: The TX-ZVS-280 Remote has a Green LED



Note: This remote supersedes the TX-ZVS-280 Remote.

Programming Remote Controls

The system can hold up to 4 remote controls. Just as easily, a lost or stolen remote can be deleted from the memory. Each time a new remote is programmed, it will automatically erase all the previous remote's that were programmed to the system.

1. Open the driver's door and turn the Ignition 'ON'.
2. Press the override / programming button seven times. (The parking lights or indicators will flash twice (siren will chirp once) to indicate you are in programming mode)
3. Within 3 seconds press Button 1 on the first remote to be programmed. The parking lights or indicators will flash once (siren will chirp once) to confirm the code has been learnt.
4. Within 5 seconds of programming the first remote, press button 1 on the second remote to be programmed. The parking lights or indicators will flash twice (siren will chirp twice) to confirm the remote has been learnt.
5. **Optional third remote** - within 5 seconds of programming the second remote, press button 1 of the third remote to be programmed. The parking lights or indicators will flash three times (siren will chirp three times) to indicate the remote has been learnt.

To exit program mode simply turn the ignition off.