
 


Quick Reference Guide # 15

Pairing 1^{st} Gen Remotes with 2^{nd} Gen Ignition-Lock motor 4270P, using 217P (External Receiver RF Module):

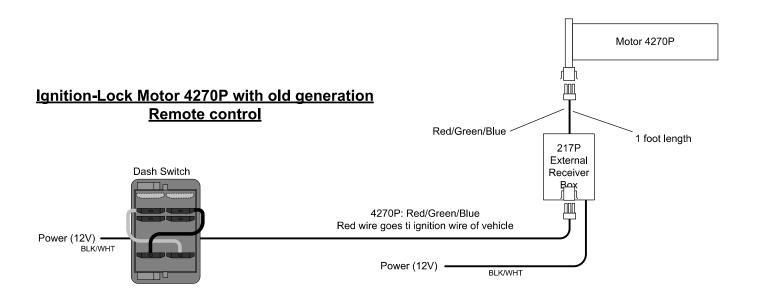


Note: This external Conversion Module 217P is only to be used with old generation AMS RF Remote Transmitters.



418: R-1:09/18 Effective Date: Sep 19, 2018



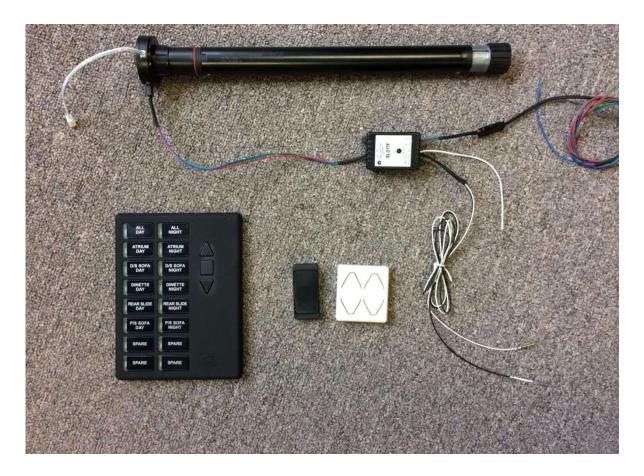

Pairing 217P Module with Old Gen RF Remote Transmitters:

- 1. Connect the Output Plug of the External Receiver Module 217P to Motor.
- 2. Ensure that the Module is connected to a 12VDC power supply (white wire to ground, black wire to 12V power). A green light on the Module should now be lit.
- 3. On the remote RF transmitter, select the appropriate channel, then on the left side of module press the "up" button until the light turns red; while this red light is on, you briefly press the triangular "up" button on the channel you selected on your remote transmitter, and release it; the red light on the Module 217P turns to green.
- 4. On the 217P Module press the "stop" (middle) button until the light turns red; following this you press the square "stop" button on the remote transmitter and immediately release it; the red light on the Module will now turn to green.
- 5. On Module 217P press the "down" button; the red light on your Module 217P comes on. Now press the triangular "down" button on the remote transmitter and immediately release it; the red light on the Module will now turn to green.
- 6. Your pairing process is done and you should now be able to control your shade by means of your existing Old Gen RF transmitter.

418: R-1:09/18 Effective Date: Sep 19, 2018



If, after you have completed above paring, you should change your mind about the channel you selected, you can clear the memory of the Module to start all over again.

Please follow the below instructions to clear the memory.

Receiver Module 217P was recently updated with new software.

If you have an updated Module it will have small green sticker on the front; in this case follow instructions as under b) below. If you still have Module with the older software, your Module does not have such a green sticker and you will have to follow instructions as under a) below.

Clearing of Module memory

- a. Module with older software:
 - 1. In order to clear your Module memory, you will need to repeat the pairing process exactly as shown above (point 1-6), but this time by using the single channel remote transmitter (EL-203).
 - 2. You have now cleared the Module memory on your multi-channel "Wizard" transmitter and you can restart the pairing process above (point 1-6) with your multi-channel "Wizard) remote transmitter.
- b. Module with new, updated software:
 - 1. To clear the 217P module, the only thing you need to do is to simultaneously press the "up" and "down" buttons on the left side of your new Module 217P and release. The memory of Module 217P is now cleared and you can restart the pairing process above (point 1-6) with your multi-channel "Wizard) remote transmitter.

418: R-1:09/18 Effective Date: Sep 19, 2018