

# project nursery® SoundSoother

## User Guide PNBEARNL

### Unpack

Make sure your package has the following items:

- (1) SoundSoother
- (1) Power Adapter


### Plug In

The Project Nursery SoundSoother offers 2 options for power:

- 4 AAA batteries (included and installed)
- power adapter (included)

**To use the power adapter:** Plug one end of the adapter into the DC IN jack on the back of the SoundSoother. Plug the other end into a power outlet or surge protector.


**IMPORTANT:** NEVER place the SoundSoother or cords of any kind inside the crib. NEVER place the SoundSoother or cords within reach of the baby.

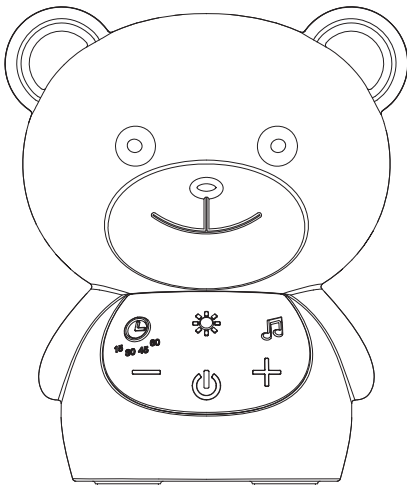

### **WARNING**

#### **Strangulation Hazard:**

Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 3ft (0.9m) away).

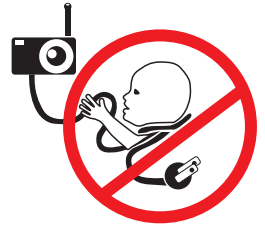

Never use extension cords with AC Adapters. Only use the AC Adapters provided.

### Using the SoundSoother



sets a sleep timer that automatically turns SoundSoother lullabies off after 15, 30, 45, or 60 minutes. Press repeatedly to change the length.



turns the nightlight on and off and adjusts its brightness.



has two functions: (1) when the SoundSoother is on, it turns lullabies on and off and cycles through the 6 sounds available, (2) when the SoundSoother is off, it goes into demo mode (turns on the nightlight and plays a lullaby).

**+** and **-** adjust the volume of the lullabies.



turns the SoundSoother on and off.