

Origo®

Origo® Global Limited

Originated from the great love of parents,
it inspires us to create the most reliable baby products,
pampering our babies like a Guardian Angel.



flexii

Distributed by Origo Global Limited.
Email: info@origoglobal.co.uk

入口商：奧域高環球有限公司
電郵：info@origoglobal.co.uk

Instruction Manual
產品說明書



INDEX 目錄

SAFETY INSTRUCTION & WARNINGS

PARTS LIST

1. UNFOLD AND FOLD
2. FRONT BAR
3. FRONT WHEELS
ORIENTATION AND SWIVEL
4. REAR WHEELS
LOCK AND UNLOCK
5. CANOPY
6. SECURING THE CHILD
7. BACKREST
8. LEGREST
9. CLEANING AND CARE
10. WARRANTY

安全指引及警告 P.4-5

組件圖 P.6

1. 展開及收摺車架 P.7-8

2. 前置扶手 P.8

3. 前輪 P.9

前輪定向及轉動 P.9

4. 後輪 P.10

後輪鎖定及解鎖 P.10

5. 太陽蓬 P.11-12

6. 安全帶 P.12-13

7. 靠背 P.14

8. 小腿腳靠 P.14

9. 清潔及產品護理 P.15

10. 產品保養服務 P.15

The applicable age of this stroller is 0 to 4 years old.
Please keep this instruction manual for future reference.

此嬰兒車適用年齡為0-4歲。請保存此使用說明書將來參考用。

SAFETY INSTRUCTION

Important - Keep these instructions for future reference

- This product is suitable for child up to 15 kg.
- The applicable age of this stroller is 0 to 4 years old.
- The maximum loading of this stroller is 20 kg.
- The most reclined position is recommended for new born babies or the seat angle must be larger than 150° for 0-6 months babies.
- The maximum loading of the storage basket is 3 kg.
- This product shall be used only for up to one child in the seat.
- Any accessories which are not approved by the manufacturer shall not be used.
- Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.

WARNINGS

- **WARNING:** Never leave your child unattended.
- **WARNING:** Ensure that all the parking devices are engaged when placing and removing child.
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** To avoid serious injury from falling or sliding out, always use the restraint system.
- **WARNING:** Any load attached to the handle and/or the back of the backrest and/or sides of the stroller will affect the stability of the product.
- **WARNING:** Ensure all parts and accessories are installed properly before use.
- **WARNING:** This product is not suitable for running or skating.
- **WARNING:** Plastic bags can be dangerous. To avoid danger of suffocation, keep this bag away from babies and children.

This product is made in compliance with EN1888:2012 standard.

安全指引

重要 - 請保存此使用說明書作將來參考用


- 本產品適合初生至15公斤兒童使用。
- 此嬰兒車適用年齡為0-4歲。
- 此嬰兒車最高承重量為20公斤。
- 請將嬰兒車背板調至最低斜度給初生嬰兒使用，如6個月以下嬰兒使用，必須將背板斜度調至超過150度。
- 購物底籃的最高承重量為3公斤。
- 此產品的座位設計只供給一位兒童使用。
- 不要於本產品上使用未經生產商批准的零件。
- 只可使用經由生產商或經銷商認可或提供的零件。

警告

- **警告:** 不應在無人看顧下讓嬰兒獨自留在嬰兒車上。
- **警告:** 把嬰兒放下或移離嬰兒車前，請確保嬰兒車之所有安全鎖掣已鎖上。
- **警告:** 當你打開或摺疊嬰兒車時，請保持你的孩子遠離嬰兒車以避免意外發生。
- **警告:** 不要讓兒童玩耍此產品。
- **警告:** 必須替嬰兒扣上安全帶，避免嬰兒滑落及跌出而受到傷害。
- **警告:** 任何物件負重於嬰兒車手柄、椅背或嬰兒車兩旁會影響嬰兒車的穩定性。
- **警告:** 使用前，請先檢查嬰兒車與任何附件已正確安裝。
- **警告:** 此產品不宜同時於跑步或溜冰時使用。
- **警告:** 請將包裝袋棄掉或遠離孩童，以免孩童拿來玩耍、套上頭部導致窒息。




此產品已通過 EN1888:2012 安全標準。

PARTS LIST 組件圖

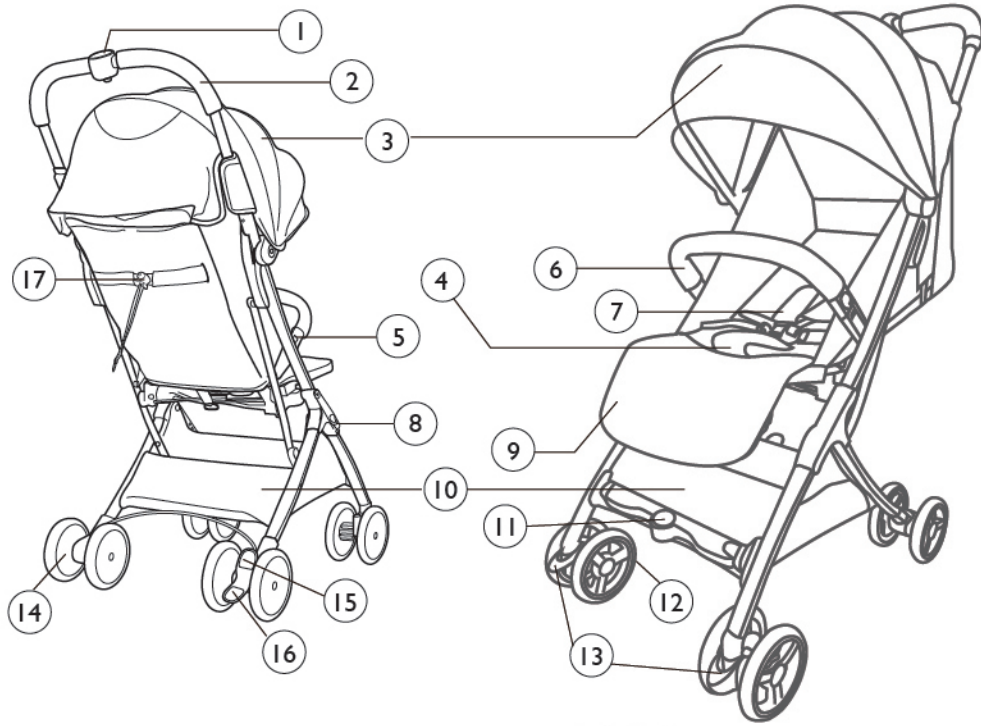

- 1 Folding button
- 2 Handle
- 3 Canopy
- 4 Harness strap
- 5 Front bar release button
- 6 Front bar
- 7 Shoulder pad
- 8 Folding Lock
- 9 Leg rest
- 10 Basket
- 11 Foot rest
- 12 Front wheel
- 13 Swivel lock
- 14 Rear wheel
- 15 Brake release bar
- 16 Brake lock bar
- 17 Recline adjustment lock

- 1 收車按鍵
- 2 推車扶手
- 3 太陽蓬
- 4 安全帶
- 5 前置扶手扣
- 6 前置扶手
- 7 肩帶軟墊
- 8 收車鉤
- 9 小腿腳靠
- 10 購物底籃
- 11 腳踏板
- 12 前輪
- 13 前輪轉動鎖
- 14 後輪
- 15 後輪解鎖掣
- 16 後輪鎖掣
- 17 靠背調節扣

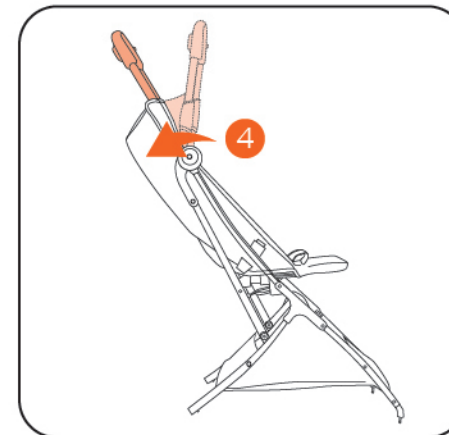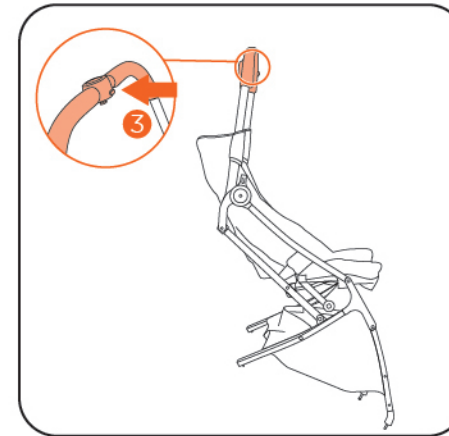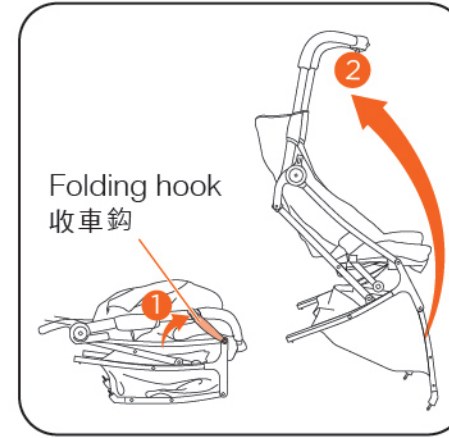

I. UNFOLD AND FOLD


I.1 Unfolding

- Remove and discard all plastic bags before unfolding the pushchair.
- Release the Folding Hook (1)
- Lift the stroller with strength (2). Push handle backward and make it flat, then lift the stroller until you can hear "CLICK" sound, ensure the push handle is opened fully (3).
- Ensure the upper part and lower part frame are locked, you may push the joint by hand to make them locking properly (4).

I. 展開及收摺車架

I.1 展開車架

- 請棄掉所有包裝塑料袋。
- 首先鬆開收車鉤(1)。
- 握緊推車扶手向上抽起(2)，直至車架完全展開及聽到「卡」一聲，確認推車扶手已完全展開(3)。
- 為確保車架上、下半部接合妥當，可以用手按壓接合(4)。

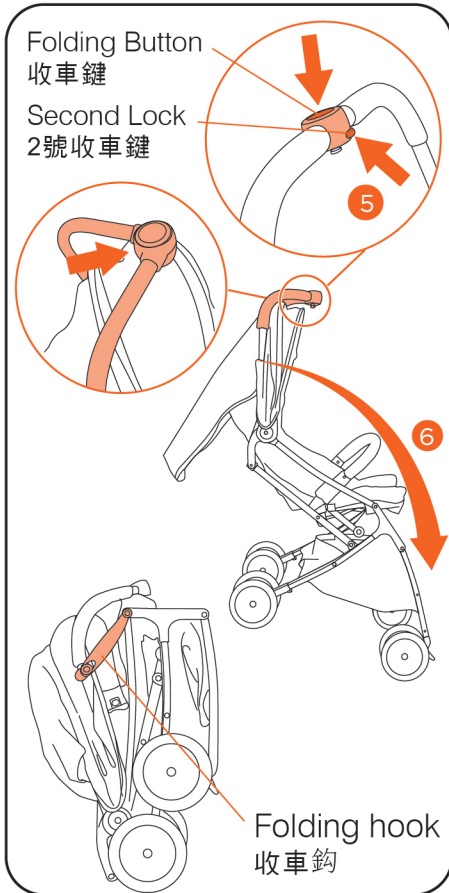

1. UNFOLD AND FOLD


1.2 Folding

- First lock the brake and fold the canopy.
- Press down the Fold Button and second lock of handle (5).
- Meanwhile push handle forward and press down to fold the stroller (6).
- Then fix the folding lock.
- This stroller can stand after folding as image shown.

1. 展開及收摺車架

1.2 摺合車架

- 先鎖上後輪及收合太陽篷
- 如圖中指示方向，先按下收車鍵然後再按2號收車鍵(5)。
- 同時將扶手向前推並向下壓(6)，摺合車架。
- 握緊推車扶手向下推直至完全摺合車架及鎖上收車鉤。
- 車架收摺後可自行企立。

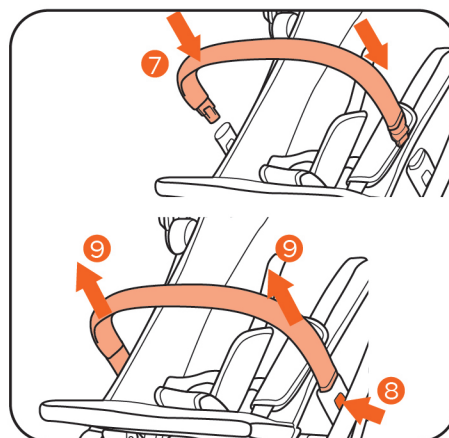

2. BUMPER BAR


2.1 Assemble and Disassemble

- Insert the two ends of bumper bar into the two slots of base (7) until you hear "CLICK" sound means it clicks into the correct place.
- Press down the two buttons of two ends of bumper bar (8), then pull up the bumper bar (9) and disassemble it.

2. 前置扶手

2.1 安裝及移除

- 把扶手的兩邊末端插入車架上的扶手接口(7)，直至聽到「卡」一聲。
- 按下扶手接口兩邊按掣(8)，把扶手兩邊的末端拉出(9)移除扶手。

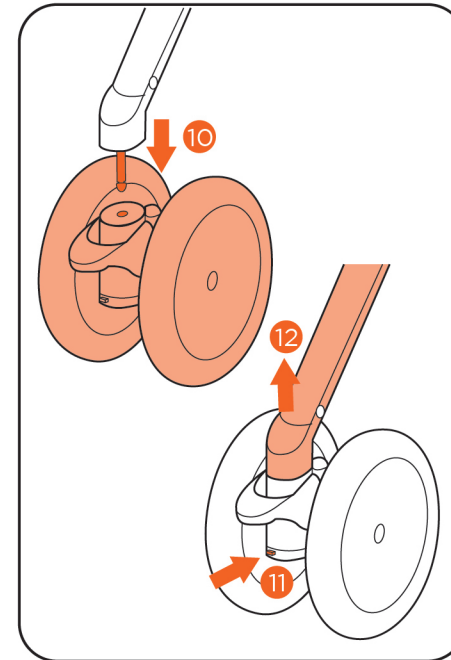

3. FRONT WHEELS

3.1 Assemble

- Insert the axle of front wheel stand into the wheel unit (10) until you hear "CLICK" sound means it clicks into the correct place as image shown.

3.2 Disassemble

- Press the Release Button (11) and pull up the Wheel Stand (12) to disassemble the front wheel.


3. 前輪

3.1 安裝

- 將前輪軸對準車架前面的支腳，插入支腳末端(10)直至聽到「卡」一聲。重覆另一邊後輪安裝。

3.2 拆卸

- 按下末端按鈕(11)，然後拉出整組後輪(12)。重覆另一邊後輪拆卸。

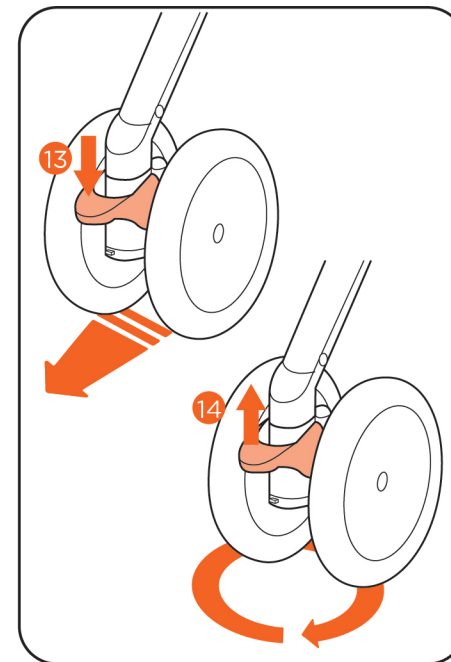

3.3 Front Wheel Orientation

- Press down swivel lock (13) until you hear "CLICK" sound means it clicks into the correct places.

3.4 Front Wheel Swivel


- Release Swivel Lock (14), front wheels can be swiveled.

3.3 前輪前向固定

- 按下/踏下前輪轉動鎖掣(13)，直至聽到「卡」一聲，即可固定前輪只向前轉動。

3.4 前輪旋轉設定

- 向上解開前輪轉動鎖掣(14)，即可令前輪可360度旋轉。

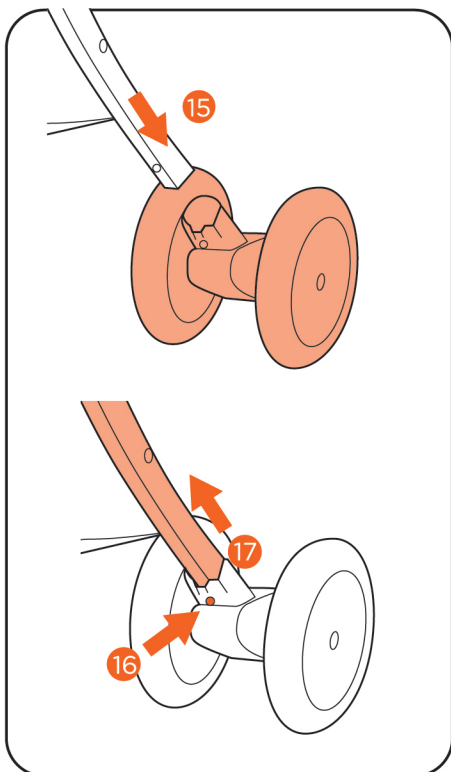

4. REAR WHEELS

4.1 Assemble

- Insert the wheel unit into the wheel stand (15) until you hear “CLICK” sound means it clicks into the correct place as image shown.

4.2 Disassemble

- Press the pin (16) and pull up the wheel stand (17) to disassemble the Rear Wheel.


4. 後輪

4.1 安裝

- 將後輪軸對準車架後面的支腳，插入支腳末端(15)直至聽到「卡」一聲。

4.2 移除

- 按下末端彈弓按鈕(16)，然後拉出整組後輪(17)。

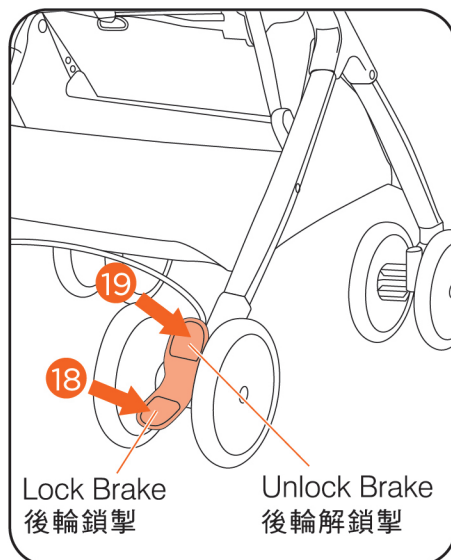

4.3 Lock and unlock the brake


- Press the point at (18), brake is locked.
- Press the point at (19), brake is released.

4.3 後輪鎖定及解鎖

- 按下/踏下後輪鎖掣(18)，即可鎖定後輪。
- 按下/踏下後輪解鎖掣(19)，即可解開後輪鎖。

WARNING: Make sure brakes are locked when the stroller isn't move.

警告：無需推動嬰兒車時，請確定後輪已經妥善鎖上。

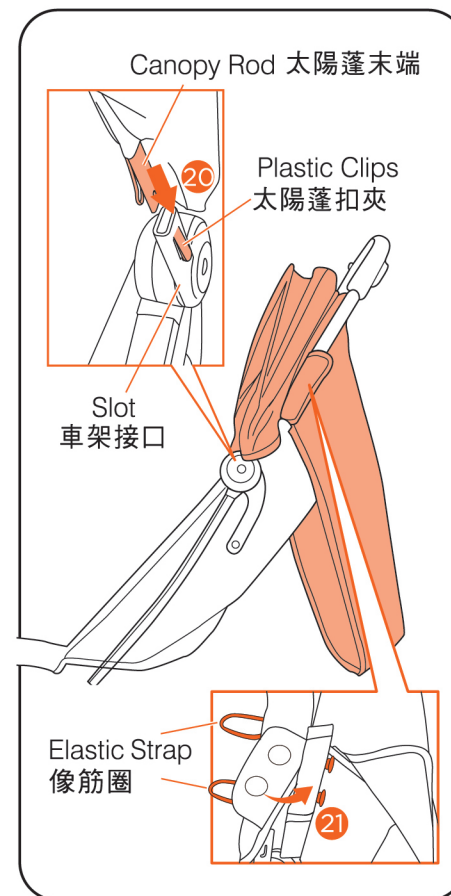

5. CANOPY

5.1 Assemble

- Zip up the canopy with the back of the backrest, and then insert the canopy rod into the slot (20) on both sides.
- Fasten 2 button eyelets and then hang the elastic strap on the button (21).
- Repeat on the other side.

5.2 Disassemble

- Release elastic strap and the eyelet, pull the plastic clips on the base outwards then pull out the canopy rods to release the canopy, unzip to remove the canopy.

5. 太陽蓬

5.1 安裝


- 接合拉鏈
拉上拉鏈把太陽蓬與靠背接合，把太陽蓬的末端插入車架上接口(20)。先把兩個扣眼扣上圓釘，再把像筋圈綁到圓釘(21)。
- 重覆完成另一邊的安裝。

5.2 移除

- 解開像筋圈及扣眼，然後把位於接口外方的夾往外拉起，把太陽蓬的末端從接口中抽出，並解開拉鏈。


5.3 Use

- Move the front canopy rod forward or backward to unfold the canopy (22).
- Open the window of canopy by unzipping and rowing up, easy to care baby in the stroller.

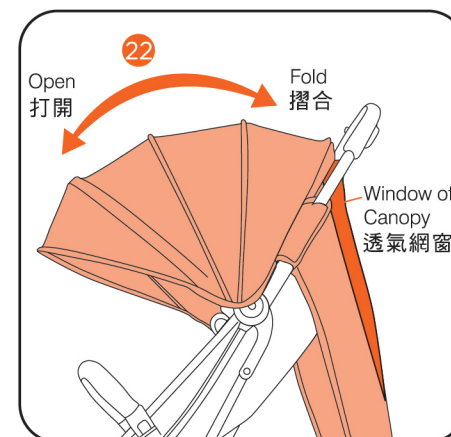

5.3 使用

- 沿著蓬骨幹向前或後方推，把太陽蓬調節前後(22)。
- 拉開背後的拉鏈然後捲起布覆，打開小窗，方便察看照顧寶寶。

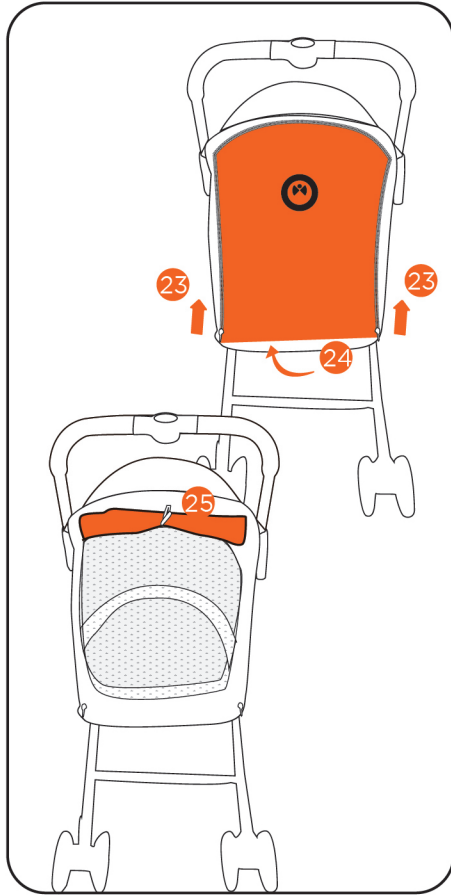


5.4 Mesh Window

- Unzip the canopy back cover (23).
- Roll up the canopy back cover (24).
- Fasten the rubber band on the button (25).

5.4 透氣網窗

- 拉開太陽蓬背後的拉鏈(23)
- 然後捲起太陽蓬背面布覆(24)。
- 把橡筋扣上鈕扣(25)，打開透氣網窗更方便照顧寶寶。

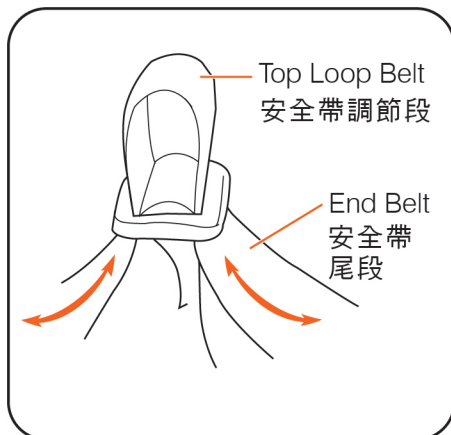

6. SECURING THE CHILD


6.1 Adjust Safety Harness

- Lengthen the top loop belt, then lengthen or shorten the end belt to fix.

6. 固定保護孩子

6.1 調節安全帶

- 可以透過滑動肩帶上的扣來調節安全帶的長度至合適、舒適的長度。

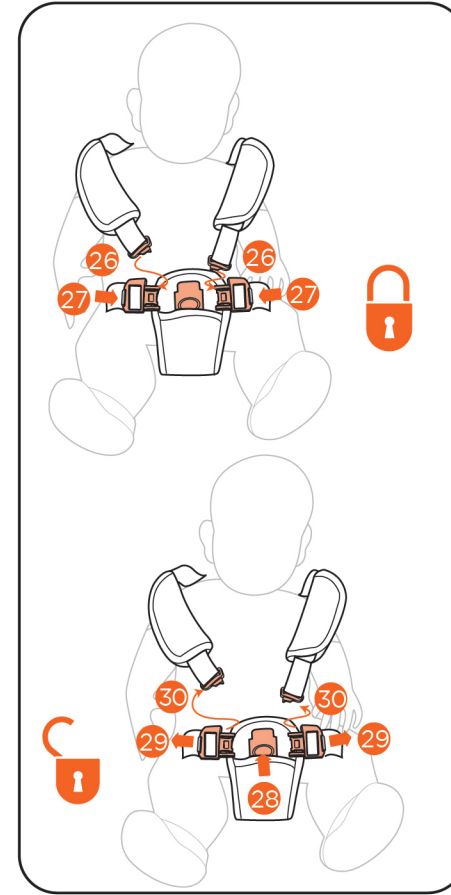

6.2 Securing the child

- Make sure the harness is unbuckled.
- Place the child on the seat.
- Make sure the child is not sitting on any of the harness components.
- Pass the child arms through the shoulder harness.
- Insert the tongues on waist straps into the buckle attached to crotch strap (26)(27).

6.2 使用安全帶


- 先確定安全帶是完全解開。
- 把孩子放上座位上。
- 確保孩子沒有壓住安全帶任何一部份。
- 把孩子雙臂穿過肩帶部份。
- 把五點式安全扣左右兩邊腰帶突出的部份，插進胯部安全帶扣中(26)(27)。

6.3 Removing the child

- Push the button at the middle of buckle (28) to release the harness(29)(30).
- Move the shoulder harness away from the child's shoulder.
- Remove the child from the seat.

6.3 解開安全帶

- 按下中間按鈕(28)，鬆開五點式安全扣(29)(30)。
- 把孩子兩臂從肩帶穿出。
- 把孩子移離座位。

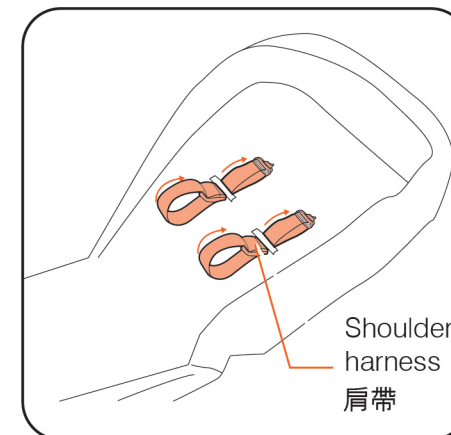


6.4 Adjust the height of Shoulder Harness

- Take in or out the Shoulder Harness in or out the slot of seat unit to shorten and lengthen the Shoulder Harness as baby need.

6.4 調節安全帶

- 把兩邊肩帶各自穿過扣眼來調低安全帶，或者把肩帶從扣眼拉出來調高安全帶。

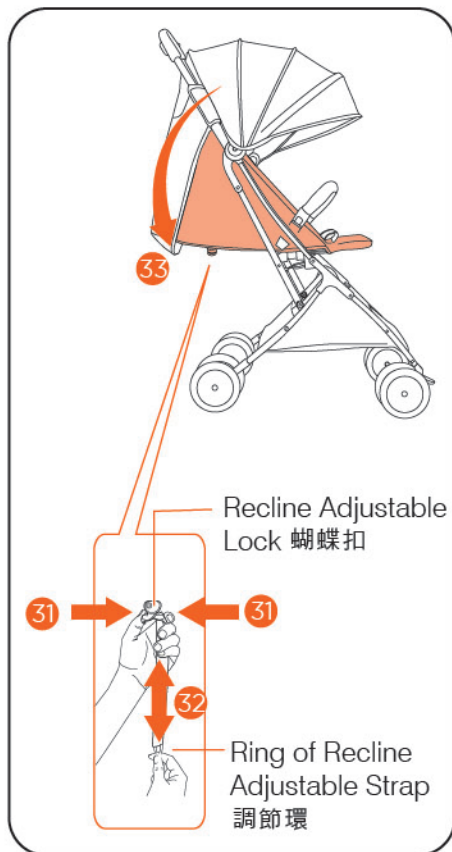

7. BACKREST

7.1 Adjust

- Use one hand to press the Recline Adjustment Lock and hold it (31), use other hand to pull the end ring of adjustment strap (32) to adjust the angle of back rest (33) as you want.

7. 靠背

7.1 調節角度

- 擠壓蝴蝶扣的兩邊(31)，一邊按住扣一邊用手推/拉末端的調節環(32)，直至靠背調至理想的高度(33)及達致左右兩邊平衡。

8. LEG REST ADJUSTMENT

8.1 Adjust the leg rest down (35)

- Use one hand to hold the side of the leg rest.
- Use another hand to pull out the lever (35) underneath to release the lock. Then do the same steps on the other side (34) Adjust the leg rest downward.

8. 小腿腳靠

8.1 放下腳踏(35)

- 用左手扶着腳靠位置。
- 再用右手將一邊調節(35)掣拉出，然後再在另一邊一次，小腿腳靠(34)便可垂下。



9. CLEANING AND CARE

- Use a damp cloth to clean the frame.
- The textiles can be hand washed at temperature not exceeding 30°C / 85°F.
- Never use strong detergent or bleach. From time to time check your pushchair for loose fasteners, worn parts or torn material. Excessive exposure to the sun or heat could cause fading or warp of the parts.

9. 清潔及產品護理

- 使用濕布抹淨車架。
- 紡織類、布料部份可以30°C / 85°F 水溫手洗清潔。
- 切勿使用強力清潔化學劑、漂白水等清洗。請定期檢查及注意應無任何部份鬆脫、耗損、撕裂等。過度曝曬或熱力可致部件退色或剝落。

10. WARRANTY

- A one-year warranty applies from the date of purchase for manufacturing or material defects. Claims may only be asserted upon production of the sales receipt. The warranty is limited to pushchairs that have been correctly used and which are returned in a clean and proper condition.
- The warranty does not cover natural wear and tear, damage due to excess strain or damage due to unsuitable or improper use.
- Material: All our fabrics fulfill high requirements in terms of colour fastness. However, fabrics may become bleached by UV radiation. This is not a material defect, but simply a normal sign of wear for which no warranty can be given.
- Customer Service Centre
Add: Unit 1901, 19/F, Tower II, Metroplaza, 223 Hing Fong Road, Kwai Fong, N.T.
Tel: +852 2612 1390 / +852 3105 0278

10. 保修服務

- 生效日期: 自購買或收貨當天起12個月內計算。
- 閣下必須出示購買發票正本或送貨單。保修服務只限於正常使用之產品及狀況整潔之產品。
- 以下情況不列入保修範圍內: 日常使用所導致的自然損耗、過度勞損引致的損耗，及因疏忽或錯誤使用該產品而引起的損毀。
- 坐墊布料通過固色測試，但仍有機會受紫外線導致退色。這不屬於品質問題，只屬正常之自然損耗，因此不列入保修範圍內。
- 客戶服務中心
地址: 香港新界葵芳興芳路223號新都會廣場2座19樓1901室
電話: +852 2612 1390 / +852 3105 0278