
1 YEAR WARRANTY INCLUDED

to register: access.peplink.com

USER MANUALS

peplink.com/manual

DEVICE MANAGEMENT

incontrol2.peplink.com

MOBILE APP

peplink.com/ic2-app

PEPLINK COMMUNITY

forum.peplink.com

WARRANTY POLICY

peplink.com/warranty



@peplink



PeplinkChannel



peplink



company/peplink


MAX SERIES UBR SERIES SFE SERIES SURF SOHO



02-150061-00

© Peplink | Pepwave. All rights reserved.

Last update: Mar 2021

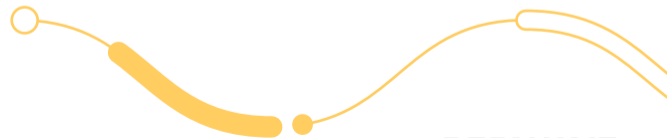


PEPWAVE

1 Plug in Power



PEPWAVE

2 Connect to Computer BY Ethernet Cable OR Wi-Fi

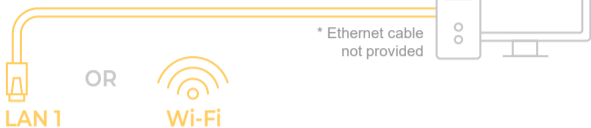


XXXXXXXX
XXXXXXXXXX
Serial No: 1234-56AB-CDEF
LAN MAC: A1-B2-C3-D4-E5-F6
XXXXXXXX

Wi-Fi name (SSID):
Pepwave-CDEF
Password:
C3D4E5F6

* Check the Silver label at the bottom of the device

Types of Antenna Connectors:

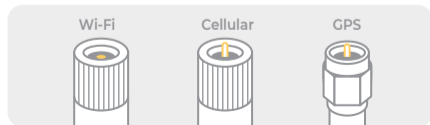

* Please refer to antenna or cable ends

3 WAN Set Up BY Ethernet OR USB OR SIM card




PEPWAVE



Insert to SIM slot 1

4 Open a Web browser

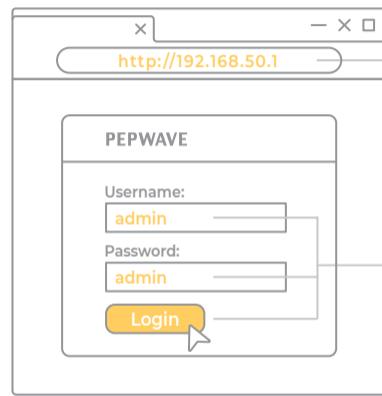

5 Router IP address

6 Login