

Fitting Instructions for the Bipod Friction Lock

In order to fit the friction lock you will need a hot air gun or hair dryer. First remove the small roll pin in the head of the bipod which passes through the spigot then heat the head of the bipod/spigot as this is held in with “Loctite”. As you heat the spigot this will soften the Loctite and by putting the spigot in a vice you can twist off the bipod. Clean out the hole in the bipod head, put the friction lock through the head and align the slot with the hole in the side of the bipod head, replace the roll pin. The friction lock will slide in and out by about ¼” and when you fit the bipod to the rifle as you tighten the thumb wheel it will pull the bipod in against the bipod block.