

LONGBRIDGE



Charles Hutton

MOVEMENT: VX43E | AA




SETTING THE TIME

1. Normal **A** position.
2. Pull the crown to the **C** position.
3. Turn the crown to set the hour and minute hands.
(Check that AM / PM is set correctly)
4. Push the crown back to the **A** position.

SETTING THE DATE

1. Normal position **A**
2. Pull the crown to the **B** position.
3. Turn the crown anti-clockwise to set the date.
4. Push the crown back to the **A** position.

MOVEMENT: VX43E | AA

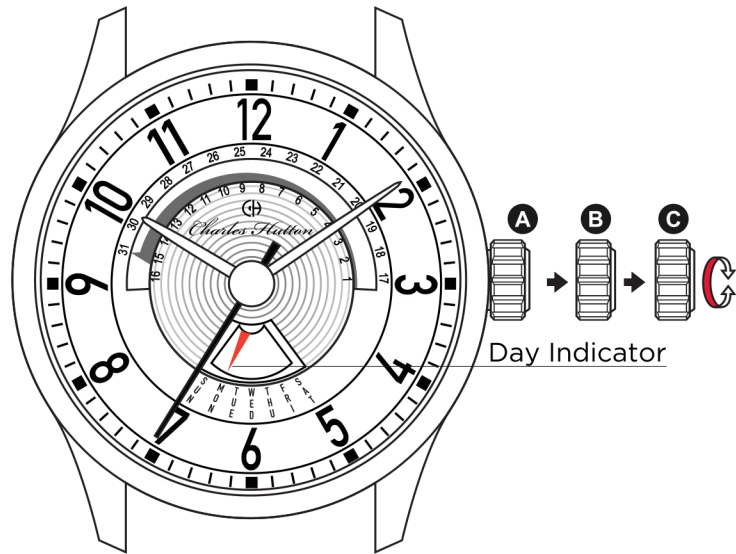


SETTING THE DAY


1. Normal position **A**
2. Pull the crown to the **B** position.
3. Turn the crown clockwise to set the day.
4. Push the crown back to the **A** position.

*Do not set the date and the day between 9:00 PM and 4:00 AM.


Tips: If the date and day indicator changes at 12PM instead of 12AM, please advance the hour hand by 12 hours to ensure that the day indicator changes overnight.

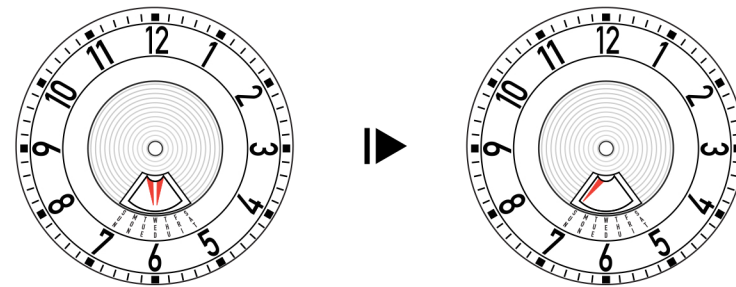


The two indicators shown illustrate that the day-change will occur between 1:20 AM and 3:10 AM daily.

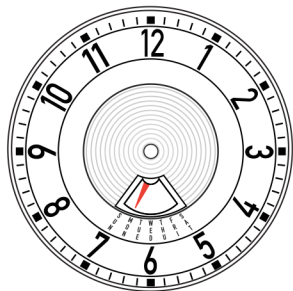


The Day indicator will show the correct day Monday, between 3:10 AM and 12:00 PM

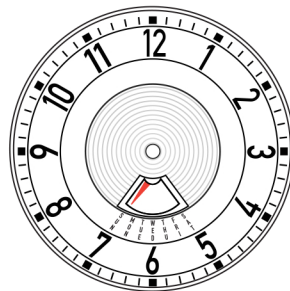

The Day indicator will move backwards between 1:20 AM and 3:10AM

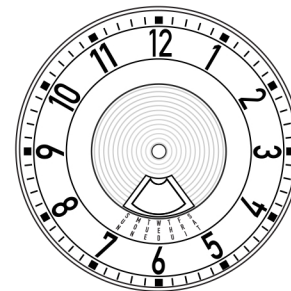

The Day indicator will be blank at 1:20 AM

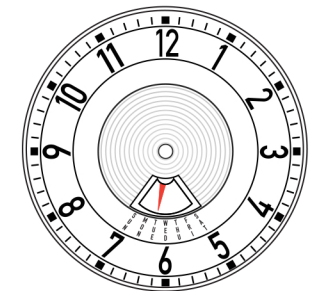

The Day indicator will show the correct day Tuesday, between 3:10 AM and 12:00 PM

PRECAUTIONS AND PREVENTIVE MEASURES

Temperature

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

Shocks

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock please have your watch checked by a reputable jeweler.

Harmful Products

Avoid direct contact with solvents, detergents, and perfumes, cosmetic products, etc. since they may damage the bracelet, the case and/or the gaskets.

Care and Checks

Your watch should be cleaned with a soft cotton cloth that is not impregnated with any cleaning material. It is advisable to polish your watch with a soft cotton cloth regularly. All water resistant watches can be cleaned with a toothbrush and soapy water, and then dried with a soft cloth. After being worn in the sea, the watch must be rinsed with warm fresh water, and then dried completely.

Water Resistance

1. **[5atm / 50m / 165ft]**
Watches water resistant to 50 meters / 165 feet.
2. **[10atm / 100m / 330ft]**
Watches water resistant to 100 meters / 330 feet.
3. **[20atm / 200m / 660ft]**
Watches water resistant to 200 meters / 660 feet.

According to the water resistance 1, 2 or 3 listed above, watches are protected against:

- | | |
|-------|----------------------------|
| 1-2-3 | Water splashes / Rain |
| 1-2-3 | Surface swimming |
| 1-2-3 | Shower |
| 2-3 | Free diving / Water sports |
| 3 | Scuba diving |

The water resistance of a watch cannot permanently be guaranteed. It may be affected by the aging of gaskets or by accidental shock to the crown. Never activate the time-setting crown and the pushers while the watch is underwater and make sure that the crown is pushed /screwed down tightly after every operation. Do not under any circumstances open the watch yourself. We do not recommend subjecting our watches to hot tub or jacuzzi use.

Limited Warranty

Your CHARLES HUTTON watch is warranted for a period of TWELVE (12) MONTHS from the date of purchase under the terms and conditions of this warranty. The international CHARLES HUTTON warranty covers material and manufacturing defects. The warranty only becomes active if the warranty certificate is dated, fully and correctly completed. In the event that repairs are improper to restore the normal conditions of use of your CHARLES HUTTON watch, CHARLES HUTTON guarantees its replacement by a CHARLES HUTTON watch of identical or similar characteristics. The warranty for the replacement watch is TWELVE (12) MONTHS after the date the replacement is issued.

This manufacturer's warranty does not cover:

1. The life of the battery
2. Wear and tear and aging (e.g. scratched crystal; alteration of the color and/or material of non metallic straps and chains, such as leather, textile, rubber; peeling of the plating).
3. Any damage on any part of the watch resulting from abnormal/abusive use, lack of care, negligence, and accidents (nicks, dents, crushing, broken crystal, etc.). Incorrect use of the watch and non-observance of the use directions provided by CHARLES HUTTON. The CHARLES HUTTON watch not handled by a reputable jeweler (e.g., for battery replacement, services or repairs) or which has been altered in its original condition beyond CHARLES HUTTON's control.