

AVI-8

📷 AVI_8

For more details on operating this timepiece
please refer to the enclosed booklet or visit:

AVI-8.COM



DAMBUSTER

GIBSON
DUAL TIME CHRONOGRAPH

For more information
Pour plus d'informations
Para más información
Per maggiori informazioni
Für mehr Informationen
想要查询更多资讯
詳細については



Instruction Manual

Vol. 1.107A EN

AV-4107



DUAL TIME CHRONOGRAPH WATCH

This watch is powered by a quartz Chronograph movement capable of micro measurements of time.

With pinpoint accuracy you may use this watch to measure separate periods of elapsed time while simultaneously reading the current time.


For more details on operating this timepiece please refer to the enclosed booklet or visit:

AVI-8.COM

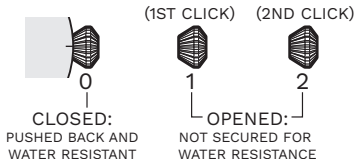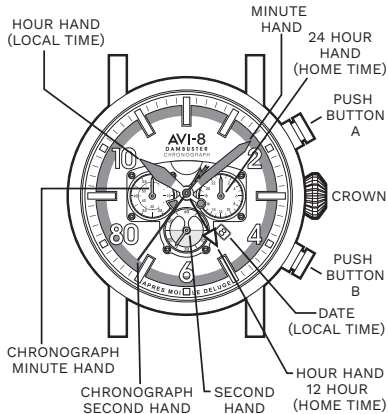

HOW TO SET THE HOME TIME


1. Put the crown to position [2]-(2nd click).
2. Turn the crown to set the current time, paying attention to the motion of 12 hour hand and 24 hour hand and minute hand.
3. 24 hour hand correspondingly with Hour hand (**Home Time**).

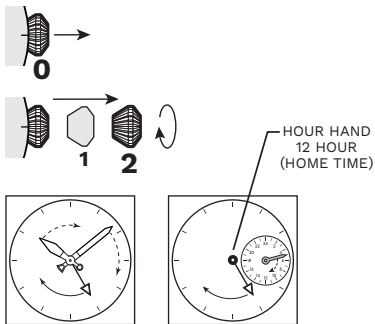

3

HOW TO SET THE LOCAL TIME


1. Put the crown to position [1]-(1st click).
2. Turn the crown anti-clockwise to set the correct time.
3. Push the crown back to position [0].

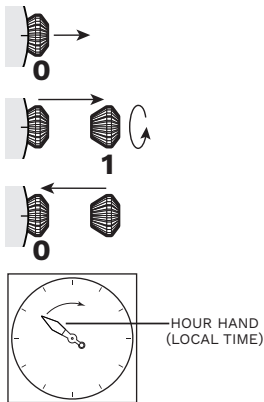

4


HOW TO SET THE DATE

1. Put the crown to position [1]-(1st click).
2. Turn the crown clockwise to set the correct date.
3. Push the crown back to position [0].

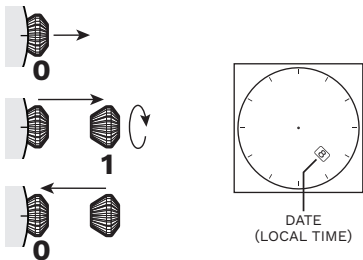

* Do not set the date between 9:00 P.M. and 1:00 A.M.

HOW TO READ THE WATCH

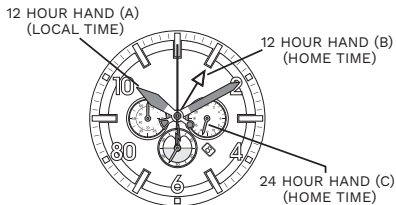

When the watch hands appear in the diagram;

- Home time is 13:10:35 (12 hour hand (B) and 24 hour hand (C) display)
- Local time in Tokyo is 10:10:35 (12 hour hand (A) display).


Note:

- The minute and second hands are the same under home and local time.
- The 24 hour hand (C) is synchronized with 12 hour hand (B)
- The date is synchronized with 12 hour hand (A) (local time)


STOPWATCH FUNCTION

- The stopwatch can measure up to 60 minutes.

STANDARD MEASUREMENT

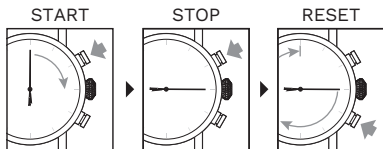

ACCUMULATED ELAPSED TIME MEASUREMENT

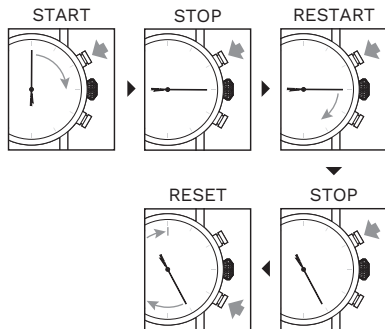

Restart and stop of the stopwatch can be repeated by pressing the button A.

ADJUSTING THE STOPWATCH SECOND HAND POSITION


This procedure should be performed when the chronograph second hand does not return to the Zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the [2]-(2nd click).
2. Press the button “A” once to set the chronograph second hand to the Zero position.


* The chronograph hands can be advanced rapidly by continuously pressing button “A”.

3. Once the chronograph hands been set at Zero position, readjust the normal hour and minute hands to the correct time and return the crown to its normal position.

* Do not return crown to normal position while chronograph second hand returns to 12:00 (ZERO) position. Hand stops on the way when crown is returned to normal position and these positions are recognized as 12:00 (ZERO) position.

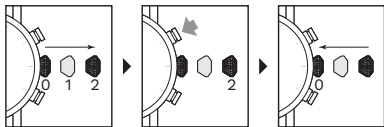

STOPWATCH
HANDS
ZERO POSITIONS

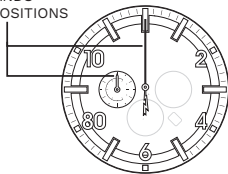

WATER RESISTANCE

Note that the water resistance chart serves only as a guide (please refer to the water resistance chart on the next page). Actual water resistance may vary depending on a number of factors including water temperature, water salinity and use under water. The water resistance of your timepiece may eventually be compromised over time with general wear and tear and use of your timepiece under adverse conditions.

Note that you should *NEVER* wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the watertight seals used to protect your watch. This may cause condensation inside your watch, which may affect and damage the inner workings of your watch.

WATER RESISTANCE CHART	50M/ 5ATM
SPLASH/ SHOWERING	
SWIMMING/ BATHING	
BRIEF SWIMMING/ WATER SPORTS	
PROLONGED SWIMMING/ FREE DIVING	
SCUBA DIVING	
PROFESSIONAL DEEP SEA DIVING	

Represented By: (for EU/UK)
 Authorised Rep Compliance Ltd.,
 Ground Floor, 71 Lower Baggot Street,
 Dublin, D02 P593, Ireland.

⚠ WARNING	
<ul style="list-style-type: none"> • INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN. • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body. 	