

DANGER

- Failure to follow the Dangers, Warnings, and Cautions contained in this Owner's Manual may result in serious bodily injury, death, or fire, as well as damage to property.
- DO NOT use indoors! This Grill is designed for outdoor use only. If used indoors, toxic fumes will accumulate and cause serious bodily injury or death.
- DO NOT use this Asado or Grande Grill within 2 meters of any combustible material.
- DO NOT use this Asado or Grande Grill against a house.
- DO NOT overfill the Ember Maker
- Ensure a spark will not reach anything flammable
- Ensure your Asado or Grande Grill is out before leaving it unattended.
- Never use charcoal or wood impregnated with charcoal lighter fluid.
- DO NOT add charcoal lighter fluid or charcoal impregnated with charcoal lighter fluid to hot or warm coals.
- DO NOT use lighter fluid, gasoline, alcohol, or other highly volatile fluids to ignite or re-ignite charcoal.
- DO NOT use or store lighter fluid, gasoline, alcohol, or other highly volatile fluids within 2 meters of the Asado or Grande Grill.
- Always put wood in ember maker or on top of the fire bricks and not directly onto the bottom of the grill.
- Always use seasoned hardwood logs DO NOT use wet wood or softwood or any wood that has been chemically treated.
- DO NOT leave infants, children, or pets unattended near a hot Asado or Grande Grill.
- ATTENTION! Never touch any part of Asado or Grande Grill, to see if is hot.
- ATTENTION! This Asado Or Grande Grill will become very hot; do not move it during operation.
- ATTENTION! This Asado Or Grande Grill will become very hot, Barbecue mitts or hot pads should always be used to protect hands while using the Asado or Grande Grill, especially when opening the door
- Keep the Asado or Grande Grill in a level position at all times.
- DO NOT use this Asado or Grande Grill unless all parts are in place.
- DO NOT remove ashes until all embers are completely burned out and are fully extinguished.
- DO NOT wear clothing with loose flowing sleeves while lighting or using the Glastonbury Asado Grill.
- DO NOT use the Asado or Grande Grill in high winds.
- Keep electrical cords away from the hot surfaces of the Asado or Grande Grill. Route all electrical cords away from traffic areas.
- Using sharp objects to clean the cooking grate or remove ashes will damage the finish.
- Using abrasive cleaners on the cooking grate or the Asado or Grande Grill itself will damage the finish.

WARNING! Keep children and pets away.