




TechShark™


XL Pop Up Beach Tent
With UV Protection

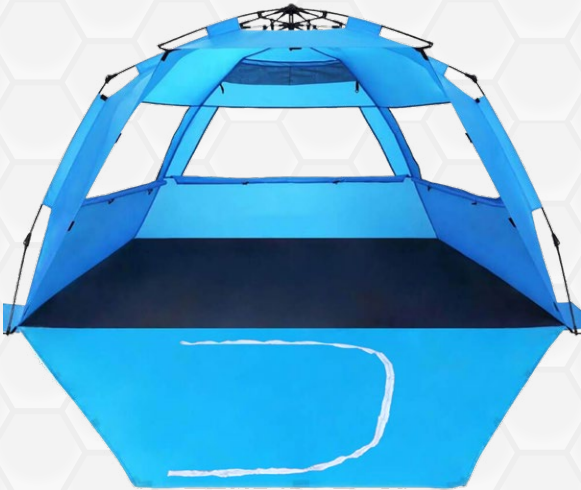


Manual

Assembly Instructions

1. Take the Techshark Beach Tent out of its packaging and place it on a flat surface. Then Unfold the poles and ensure that the two lockable joints (marked with orange arrows) lock in place.


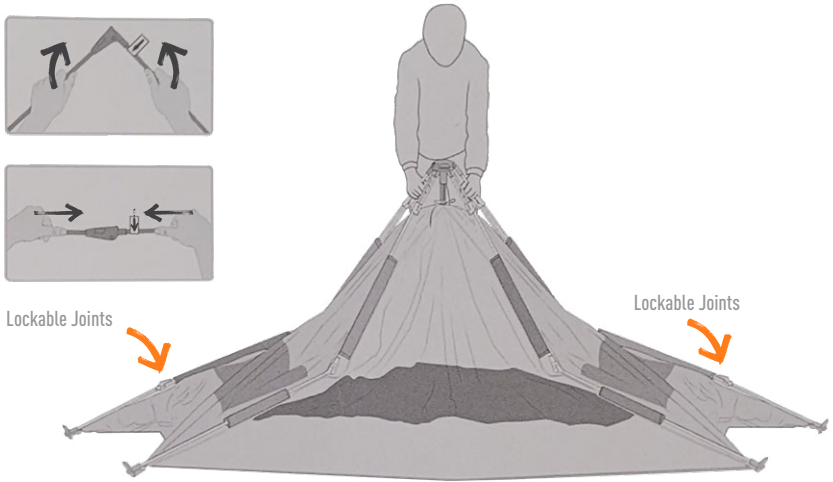


2. Make sure the end of the poles goes through the dedicated sockets.

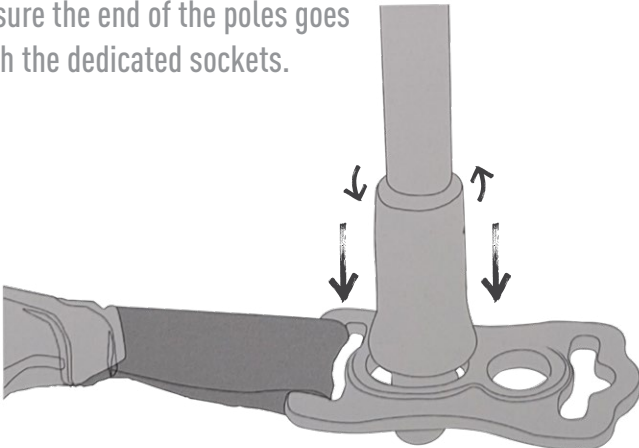


Assembly Instructions

3. Raise the Techshark Beach Tent by pushing the bottom part downwards.

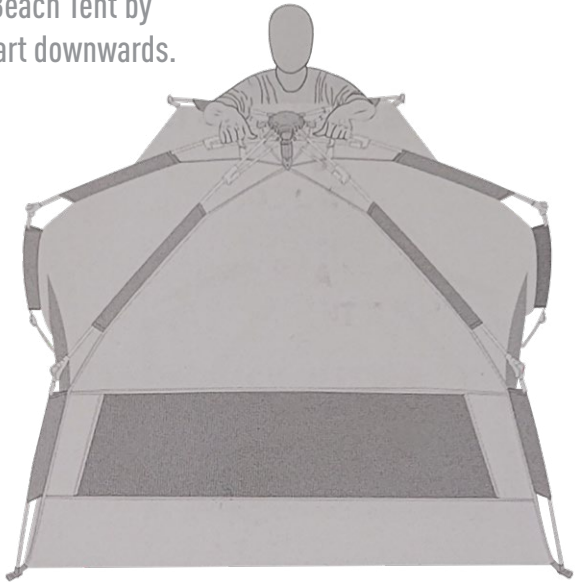
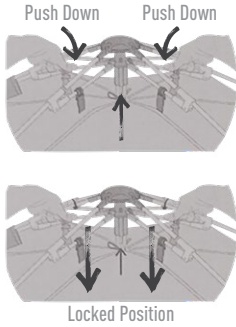


4. Secure the placement of the Techshark Beach Tent using the tent pegs or by filling the sand bags.

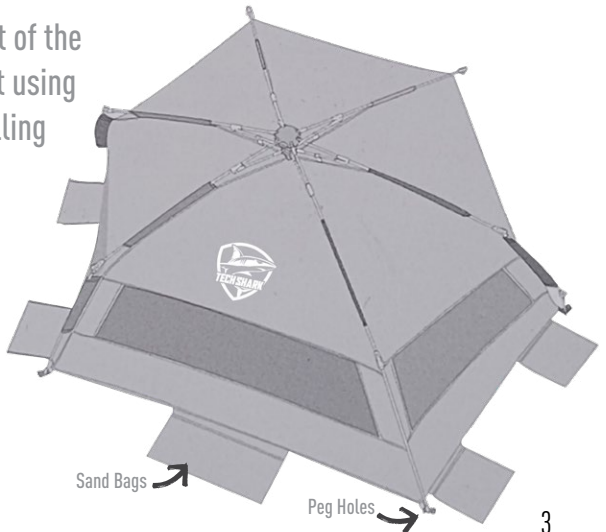


Disassembly Instructions

1. Collapse the tent by pulling the poles upwards and undoing the locking joints as shown below (step 2.)

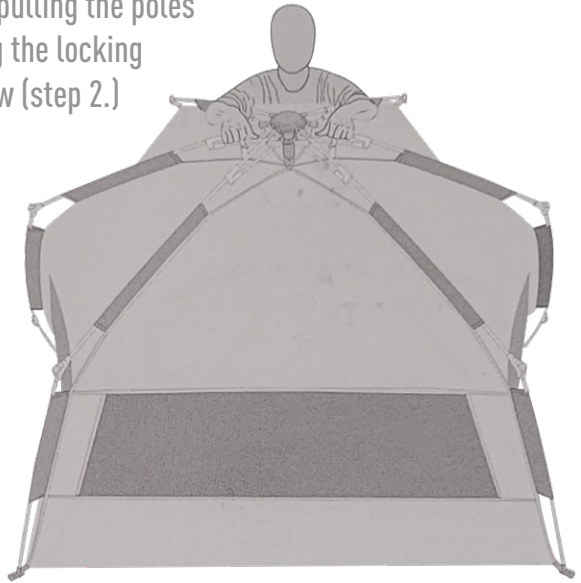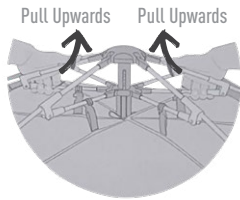

2. To collapse the locking joints pull down on the lower tent pole and the joint should unlock, then fold up to collapse the pole.

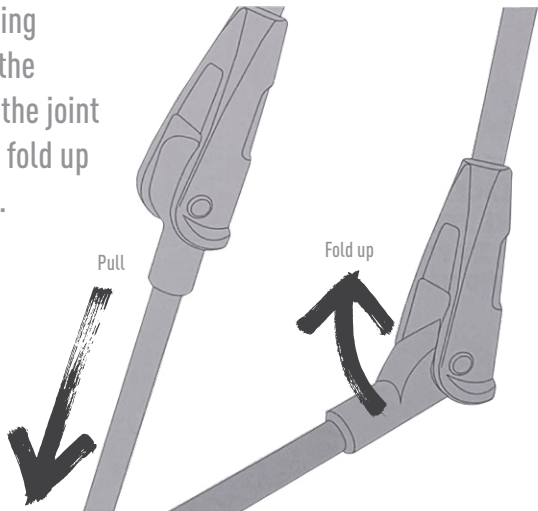

Disassembly Instructions

3. Pull the poles together tightly and wrap any loose tent material around the poles, securing it with the provided tent strap. Then put the tent back in its dedicated carrying bag.



2. Ensure that all the tent pegs and ties are put back in their storage pouch. The accessories pouch should also be stored in the tent carrying case.


Important Information




TechShark™

XL Pop Up Beach Tent
With UV Protection

Two Colour Options

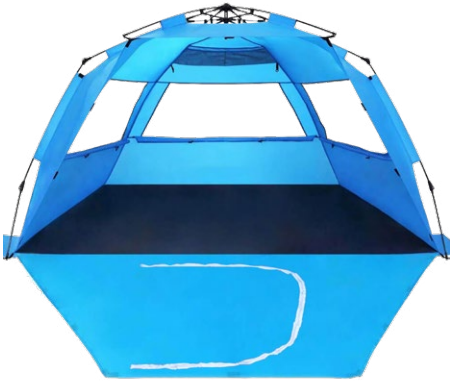

Beachside Blue

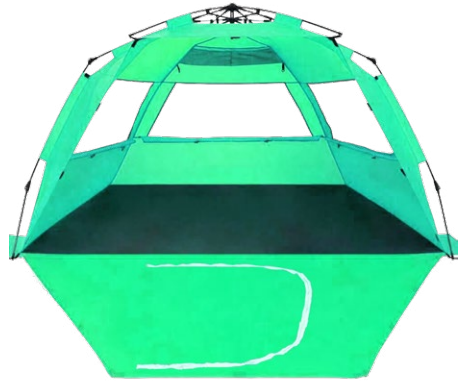

Ocean Green



**SCAN FOR
SUPPORT &
WARRANTY
REGISTRATION**