# ΝΪΤΗΟ



### Thank you for purchasing Echo

 
This Quick Start Guide is designed to help you through installation

#### Please register your product to benefit ONE ADDITIONAL YEAR WARRANTY EXTENSION.

To benefit your warranty extension please visit https://www.nitho.com/registration and follow the instructions on the screen

### CONTROLS


This headset has been designed to work with devices using a standard 3.5mm headset port.





### **PLAYSTATION® 4**

Settings > Devices > Audio Devices > Output to headphones > 'All Audio'. Set Input and Output Device to 'Headset Connected to Controller'.

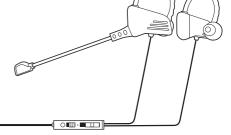



### **XBOX ONE®**

## All Settings > Display & sound > Volume > Chat mixer > Mute all other sounds > Party chat output > Headset.

\*Controller has a headset port: Headset Adapter Not Required



\*Controller has no headset port: Headset Adapter Required

 



her sounds >







### SWITCH<sup>™</sup> LITE



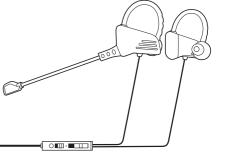


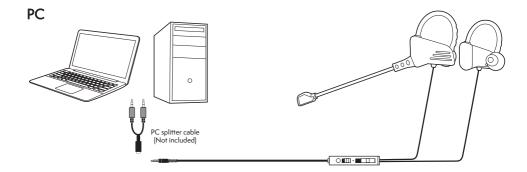

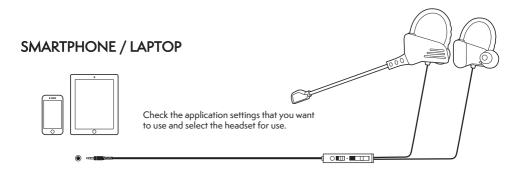

### MICROPHONE

Detachable and Adjustable microphone to suit you

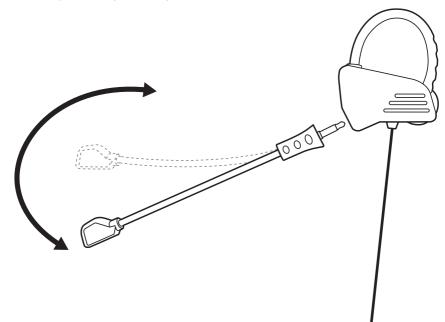

### SERVICE & SUPPORT

#### For any question and support request, contact us on support@nitho.com or visit our website www.nitho.com







WWW.NITHO.COM





Despite careful review of the contents, errors and omissions are excepted. All specifications are subject to change without notice.

PlayStation4/PS4, and PlayStation Move are registered trademarks of Sony Interactive Entertainment Inc. XBOX ONE is registered trademarks of Microsoft Inc. Nintendo Switch is registered trademarks of Nintendo Inc.

The products enclosed are not sponsored, endorsed by, or manufactured for Sony Computer Entertainment Inc., Microsoft Inc., or Nintendo Inc. respectively.

NiTHO GmbH - Victoriastrasse 3b - 86150 Augsburg - Germany