





SEEMEE 30 TL/FL USER MANUAL

ACCESSORY/STRUCTURE

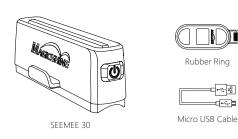

HOW TO INSTALL

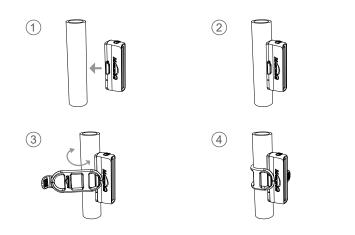

BATTERY INDICATOR

In the standby mode, click the power button to activate power indicator for three seconds.




HOW TO RECHARGE






FEATURES

Smart Mode(ambient light sensor)

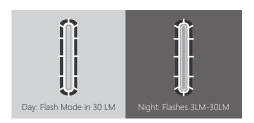

OPERATION INSTRUCTION

- 1. Short click to activate battery indicator;
- 2. Long press to turn on/ off the light;
- 3. Double clicks to switch among constant, flash, and smart mode;
- 4. In constant/flash mode, short click to change brightness levels/flash modes;
- 5. Mode memory features will save the last selected brightness level automatically.

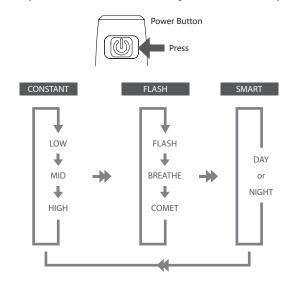

LUMENS/RUN TIME

Front Light

CONSTANT	LOW	MID	HIGH
LUMENS	8	17	35
h:min	14:00	06:00	03:30
FLASH	FLASH	BREATHE	СОМЕТ
LUMENS	8	0-35	35-0
h:min	55:00	06:00	07:30
SMART	DAY	NIGHT	
LUMENS	35	3-35	/
h:min	22:00	16:00	/

CONSTANT

314

LUMENS

h:min

31/2

LUMENS

h:min SMART

31/2

LUMENS

SPECIFICATION

1. Size : 65(L)*14(W)*21(H) mm 2. N.W : 24 g

















LOW

7

09:30

FLASH

7

40:00

DAY

30

15:30

MID

14

04:00

BREATHE

0-30

04:30

NIGHT

3-30

10:30

HIGH

30

02:00

СОМЕТ

30-0

05:30



IN WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty.

Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69 Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com online store)

service@magicshine.com (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.