

Accessing the fan – Inbuilt woodfire.

This document follows the PDF directions of how to access the fan in your inbuilt woodfire.

Before commencing the below, it is recommended you turn the isolation switch for the fan OFF.

1. Remove top mantle of fireplace by unscrewing the screws on either side of the side panels.
2. Remove air slide knob by unscrewing the wooden knob off and then lifting upwards the component should unclip from the unit.
3. Remove the door by swinging the door fully open and lifting it off the hinge.
4. Once the door is removed, remove the grill by lifting upwards and unclipping it.
5. Now remove the fan cover from the bottom of the fireplace by lifting the part to remove it from the heater.

If you wish to fully remove the fan from the woodfire after you can access it, you can do this by unplugging the fan from the 3-speed loom and removing the wing nuts that hold the fan to the heater.

The 3-speed loom is connected to the fan motor itself; you do not need to disconnect the fan from the control switch.

