

# Bonsenkitchen

## Coffee Maker Operation Instructions Model: CM8003



[www.bonsenkitchen.com](http://www.bonsenkitchen.com)



# Contents

- IMPORTANT SAFEGUARDS ..... 1-2
- KNOW YOUR COFFEE MAKER ..... 3
- CONTROL PANEL ..... 3
- BEFORE THE FIRST USE ..... 4
- USING YOUR COFFEE MAKER ..... 4-5
- DELAY FUNCTION..... 5
- CLEANING AND MAINTENANCE ..... 5
- REMOVING MINERAL DEPOSITS ..... 6
- HINTS FOR GREAT-TASTING COFFEE ..... 6
- WARRANTY CLAIM PROCEDURE ..... 7
- ENVIRONMENT FRIENDLY DISPOSAL ..... 7

# IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions. Save these instructions for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cooling before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not clean container with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Never leave the empty carafe on the heat insulation plate.
17. Never use the appliance if the thermal carafe shows any signs of cracks or has a loose or weakened handle. Only use the thermal carafe with this appliance.
18. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.

20. Do not set a hot container on a hot or cold surface.

21. Do not let the coffee maker operate without water.

22. **SAVE THESE INSTRUCTIONS**

 
23. **HOUSEHOLD USE ONLY**

## **NOTES ON THE CORD PLUG**


This appliance has a polarized plug, To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, If the plug does not fit fully into the outlet, reverse the plug, If it still does not fit, contact a qualified electrician, Do not attempt to modify the plug in any way.

# KNOW YOUR COFFEE MAKER

1. Nylon filter
2. Funnel
3. Control panel
4. Vacuum jug
5. Top cover
6. Water tank
7. Heat insulation plate

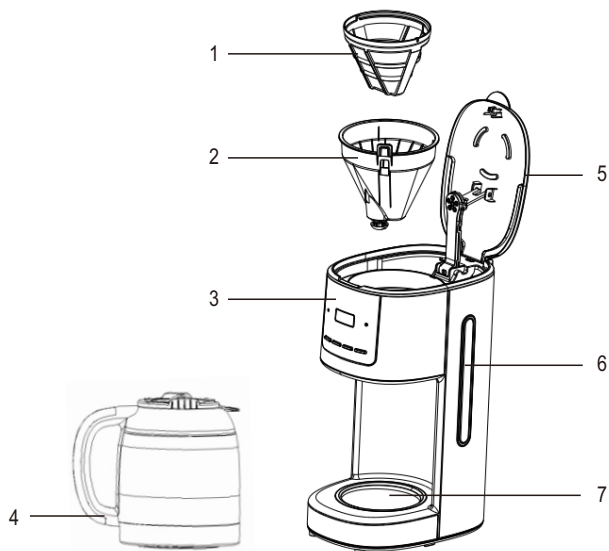

## CONTROL PANEL

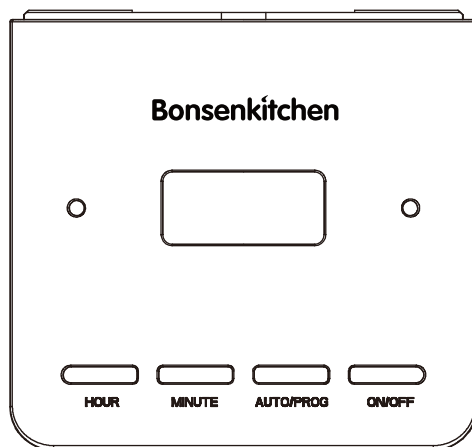 

## BEFORE THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the MAX level of water gauge and brew water for several times without coffee grounds, then discard the water. Clean all detachable parts thoroughly with warm water.

## USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated in the water tank.
2. Place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top cover cannot be closed. Place the nylon filter or a paper filter (10 cup) in the funnel according to your preference.
3. Add coffee grounds into filter. Usually a cup of coffee need a level spoon of coffee grounds, but you may adjust according to personal taste. Close the top cover completely.
4. Insert the thermal carafe on base horizontally.
5. Plug the power cord into the outlet. The LCD will display "AM12:00" together with the " : " flickers.
6. Pres ON/OFF button, the red indicator will come on, The appliance will begin working.
7. The brewing process can be interrupted by pressing the ON/OFF button at any time, and red indicator will go out. The appliance will continue brewing once ON/OFF is pressed again.

**Note:** You can take out thermal carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8. Remove out thermal carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

**Note:** The coffee you get will less than the water you have added, as some water is absorbed by coffee grounds.

9. The appliance will be cut off power automatically at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.

**Note:** Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

## DELAY BREW

If you do not want the coffee maker to start operation immediately, for example now it is 8:10 am, you hope that the coffee maker will automatically start at 1:10 pm, first follow steps 1 to 5 of above section, then you can set the automatic start function as follows:

1. Press AUTO/PROG button once, LCD will show the automatic starting time and green indicator will flash.
2. Press the HOUR and MINUTE button to set the automatic starting time, that is 1:10pm;

**Note:** The time cycle is 12 hours.

3. Press AUTO/PROG button once again and green indicator will go out.
4. Press and hold AUTO/PROG button for 3 seconds, green indicator will keep constant on.
5. When the time is due, green indicator will go out and red indicator will come on, then the unit starts brewing. At the completion of brewing, 3 buzzer sounds will be heard.

## CLEANING AND MAINTENANCE

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot sudsy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.



## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use the appliance, the detail is as follows:

1. Fill the water tank with water and descaler to the MAX level as indicated in the water tank. (The scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Put the thermal carafe on the heat insulation plate and ensure it is placed in position.
3. Press the ON/OFF button once and red indicator will come on. After a while, water will drop out automatically.
4. After percolate the equivalent of one cup and then switch off the appliance by pressing the ON/OFF button again.
5. Leave the solution work for 15 minutes. Repeat the steps of 3-5 again.
6. Turn the appliance on by pressing the ON/OFF button once and run off the water until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

## HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’s flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

## WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase.

You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **1-888-965-8032**

[support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)

## ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.



Register your product at **[www.bonsenkitchen.com](http://www.bonsenkitchen.com)**  
to get more perks!



Follow us @bonsenkitchen

**Bonsen Electronics Inc.**

📍 : 5805C Peachtree Corners East  
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : [support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)