

Bonsenkitchen

Coffee Maker Operation Instructions

Model: CM8005



www.bonsenkitchen.com

Contents

IMPORTANT SAFEGUARDS	1-2
KNOW YOUR COFFEE MAKER.....	3
CONTROL PANEL	3
BEFORE USING COFFEE MAKER	4
MAKE DRIP COFFEE WITH COFFEE BEANS	4-5
MAKE DRIP COFFEE WITH COFFEE POWDER DIRECTLY	5-6
AUTOMATIC START FUNCTION	6
REMOVEL OF MINERAL DEPOSITS	6
CLEANING AND MAINTENANCE	6
CLEANING MINERAL DEPOSITS	7
HINTS FOR GREAT-TASTING COFFEE	7
WARRANTY CLAIM PROCEDURE	7

IMPORTANT SAFEGUARDS


When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
5. Not allow children to use without supervision
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Overfilling can also cause scalding.
10. Only ever use the coffee mill for grinding roasted coffee beans. Never use it for other granular foods.
11. Do not let cord hang over edge of table or counter, or touch hot surface.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not use a cracked container or a container having a loose or weakened handle.
14. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.


15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not use appliance for other than intended use.
17. Avoid contacting moving parts, as the blade is sharp.
18. Never use warm or hot water to fill the water tank. Use cold water only.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
21. **SAVE THESE INSTRUCTIONS.**

KNOW YOUR COFFEE MAKER

1. Filter
2. Funnel
3. Anti drip value
4. Funnel support
5. Glass carafe
6. Knob
7. Bean box cover
8. Bean box
9. Water tank cover
10. Funnel press key
11. Water gauge
12. Control panel

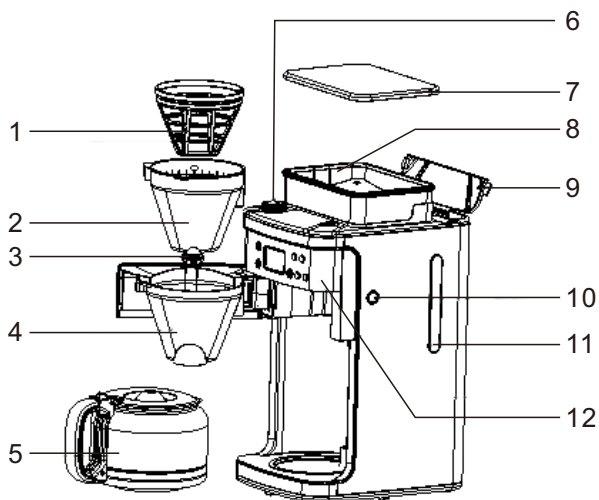

CONTROL PANEL

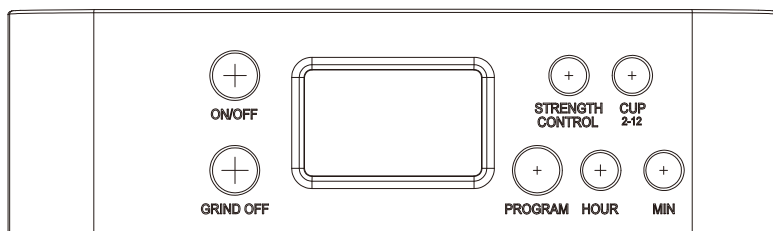

BEFORE THE FIRST USE

Inspect whether all the accessories are complete and the product is damaged. Ensure that the unit is at the OFF position. Rotate the funnel support to the left, remove the funnel and other detachable parts, clean them in warm water, if necessary you can add some detergents, then replace them. Pour cold drinking water into water tank until max water level, do not place coffee and filter paper. Plug the power outlet, boil water directly through press 'ON/OFF' button until no water is left. You can repeat 2-3 times to ensure the coffee maker is clean.

MAKE DRIP COFFEE WITH COFFEE BEANS

1. Open the tank cover, pour clean cold water into water tank until desired cups showed on water gauge.

Note:

- 1) The coffee you get would less than the water you pour in as some water has been absorbed by coffee powder.
- 2) Never pour hot water, milk, coffee powder or tea and so on into water tank.
2. Press Funnel Press Key once and rotate the funnel support to the left, ensure the filter is inside of the Funnel Support.
3. Turn the funnel support to the right until it is locked.
4. Put proper coffee beans (not more than 200g) into Coffee Bean Box, then cover its lid. To avoid the coffee beans turn moist, we suggest not placing too much coffee bean in Coffee Bean Box.
5. Plug in the power cord into the outlet. The display will show "12:00" (see "control panel"), and the number will flash, then press Hour and Min button to set correct time.

Note: Number will flash until Pressing Hour or Min button to set time, Automatic function cannot be available when number is flash.

6. Set the number of cup (2,4,6,8,10,12) through press "CUP" button (see "control panel"), if you do not press the "CUP" button to set the number of cup, the default number of cup is 12 cups.

Note: The marker “ ●●●● ” indicates that the coffee powder turns from coarse to fine, to general coffee we recommend you to use medium setting.

7. Press “STRENGTH CONTROL” to select coffee strength.
8. Press the ON/OFF” button one time, waiting for about 3 seconds, the grinder will start grinding, after grinding, wait for about 3 seconds, the LCD will display the letter of “BREW”, the brewing process begins.
9. After brewing, the letter of “BREW” on the LCD will disappear.
10. When finish brewing, if you do not unplug the power cord from the power outlet, the coffee can be warmed in the carafe for some time, after some time, the appliance will cut off power automatically. The whole process from brewing coffee to finishing warming lasts for 35-40 minutes.

MAKE DRIP COFFEE WITH COFFEE POWDER DIRECTLY

1. Open the Tank Cover, pour clean cold water into water tank until desired cups showed on water gauge.

Note:

1) The coffee you get would less than the water you pour in as some water has been absorbed by coffee powder.

2) Never pour hot water, milk, coffee powder or tea and so on into water tank.

2. Press Funnel Press Key once and rotate the funnel support to the left, ensure the filter is inside of the Funnel Support. Add desired coffee powder into the filter according to your experience, then turn the Funnel Support to the right until it is locked.
3. Plug in the power cord into the outlet. The display will show “12:00” (see “control panel”), and the number will flash, then press Hour and Min button to set correct time.

Note: Number will flash until Pressing Hour or Min button to set time, Automatic function cannot be available when number is flash.

4. Set the number of cup (2,4,6,8,10,12) through press “CUP” button (see “control panel”), if you do not press the “CUP” button to set the number of cup, the default number of cup is 12 cups.
5. Press the “Grind off” button once, the blue “Grind off” indicator will be illuminated, then press the ON/OFF button once, the LCD will display the letter of “BREW”, the coffee maker will brew directly.

6. After brewing, the letter of “BREW” on the LCD will disappear.
7. When finish brewing, if you do not unplug the power cord from the power outlet, the coffee can be warmed in the carafe for some time, after some time, the appliance will cut off power automatically.

AUTOMATIC START FUNCTION

1. Operate according to 1-7 steps at “make drip coffee with coffee beans or make drip coffee with coffee powder directly” section.
2. Set the current time, the number will stop flash, pressing “PROGRAM” button until the time into timer mode (the number flash again), setting the time of AUTOMATIC START you wanted through pressing “Min” and “Hour” button.
3. Press “PROGRAM” button again, the word “AUTO” will show on the display, the blue “PROGRAM” indicator will be illuminated, the appliance into automatic mode.

Note: The time cycle is 24 hours.

4. The coffee maker will start to brew at the preset time, the “PROGRAM” indicator will be extinguished and the “ON/OFF” indicator will be illuminated. The appliance will start to work automatically.

CANCEL THE PRESETTING PROGRAM

If the coffee maker is at the state of presetting (the “PROGRAM” indicator is on), but you want it to operate immediately, you just need to press “PROGRAM” button once, then the “PROGRAM” indicator will be extinguished, the automatic mode will be canceled.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.

- 1) Clean the funnel, filter and coffee carafe after each use in hot, sudsy water.
- 2) Wipe the ground container and the product’s exterior surface with a soft, damp cloth to remove stains.
- 3) Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.

CLEANING MINERAL DEPOSITS

1. Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Press “Grind off” button, the blue “Grind off” indicator will be illuminated, then press the “ON/OFF” button once, the appliance will start to brew directly.
3. Rinse by operating the appliance with clean water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee grounds since this will greatly reduce the coffee’s flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grounds.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase. You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: support@bonsenkitchen.com

Call service: **1-888-965-8032**

Register your product at **www.bonsenkitchen.com**
to get more perks!



Follow us @bonsenkitchen

Bonsen Electronics Inc.

📍 : 5805C Peachtree Corners East
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : support@bonsenkitchen.com