 


Bonsenkitchen

Hand Mixer Operation Instructions Model: HM3901

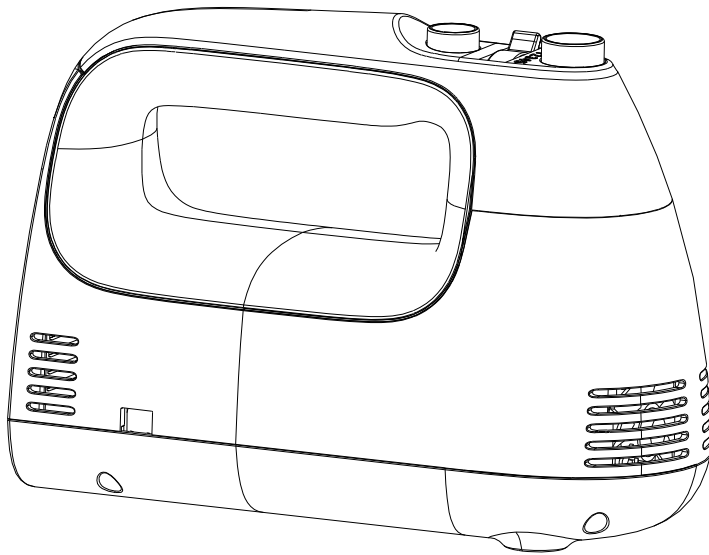

www.bonsenkitchen.com

Contents

- IMPORTANT SAFEGUARDS 1
- NOTES ON THE CORD PLUG 2
- PACKAGE CONTENTS 2
- TECHNICAL DETAILS 2
- KNOW YOUR HAND MIXER 3
- INSTRUCTION FOR HAND MIXER 4-6
- SPEED CONTROL GUIDE 7
- CLEANING AND MAINTENANCE 8
- TROUBLESHOOTING 9
- WARRANTY CLAIM PROCEDURE 9
- ENVIRONMENT FRIENDLY DISPOSAL 9

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put Hand Mixer in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug Hand Mixer from the outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from all accessories during operation to reduce the risk of injury to persons and/or damage to the Hand Mixer.
6. Do not operate the Hand Mixer with a damaged cord or plug, or after the Hand Mixer malfunctions, or is dropped or damaged in any manner. Return the Hand Mixer to the nearest Authorized Service Center for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
8. Do not use the Hand Mixer outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Remove any accessories from Hand Mixer before washing.
12. **SAVE THESE INSTRUCTIONS.**

NOTES ON THE CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

PACKAGE CONTENTS

- 1 motor unit
- 2 turbo beater
- 2 dough hooks

Check the delivery contents for completeness immediately after unpacking.

Remove all packaging materials and plastic film from the appliance.

 
TECHNICAL DETAILS

120VAC, 60Hz, 250W

NOTE:

This Hand Mixer has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. This product is designed for household use only.

KNOW YOUR HAND MIXER

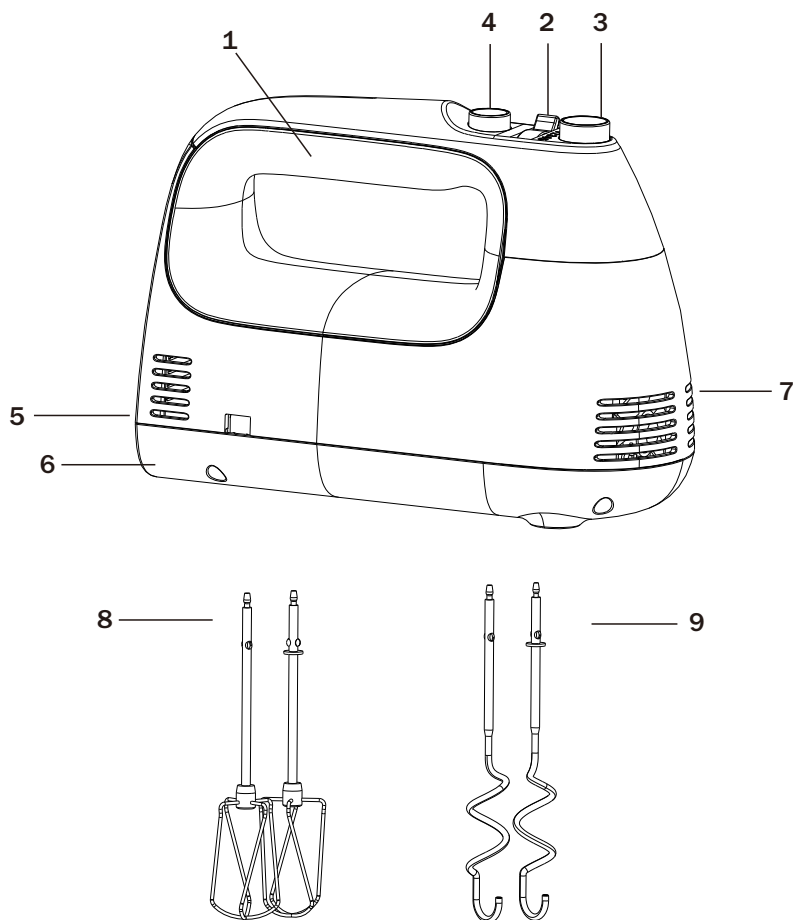

- 1. Comfort designed handle
- 2. Easy-to-use speed control
- 3. Oversized beater ejector button
- 4. Turbo button
- 5. Non-tip heel rest

- 6. Swivel lock power cord
- 7. Air vents
- 8. Stainless Steel Turbo Beater accessory
- 9. Stainless Steel Dough hook accessory

Turbo Beater is used for cookie dough and cake batter.

Dough Hooks is used for yeast bread doughs.

INSTRUCTION FOR HAND MIXER

WARNING

Unplug mixer before touching beaters.



Failure to do so can result in broken bones, cuts or bruises.

IMPORTANT:


Be sure to read and follow the specific instructions in this manual for proper use of the Hand Mixer.

1. Attaching the accessories

  
- 1) Make sure the Hand Mixer is unplugged from the electrical outlet.
- 2) Paired accessories (beaters, optional dough hooks) include one accessory with a collar (D), and one without (C). Single accessories come with a collar (D) (liquid blending rod) or without (C) (whisk).

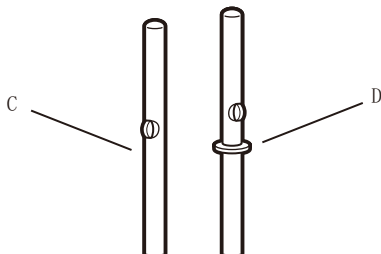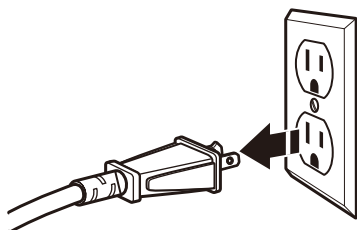

 3) Insert the accessory shaft with the collar (D) into the larger opening (B) of the hand mixer. Align the flanges on the shaft with the slots in the opening. Push to lock into place.

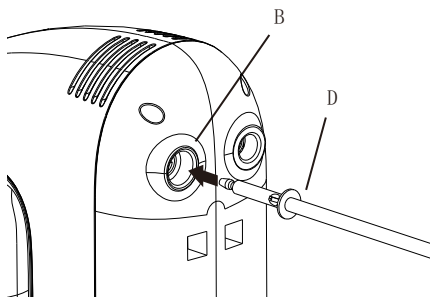

 4) Insert the accessory without a collar (C) into the smaller opening (A). Align and push to lock into place.

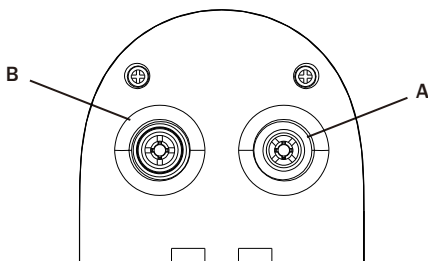


NOTE:


An accessory shaft without a collar may be used in either opening (A or B). Those with a collar may only be used in the larger opening (B).

2. Removing the accessories

 1) If the Hand Mixer is running, stop the Hand Mixer by sliding the Power switch to "0". Then unplug from the electrical outlet.

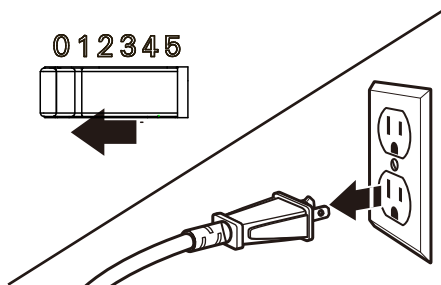

 
2) Press the ejector button to release the accessories from the Hand Mixer, then remove them.

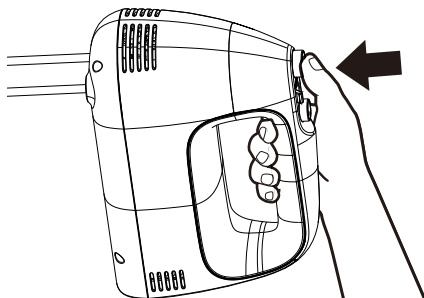


3. Operating the speed control

This bonsenkitchen Hand Mixer will beat faster and more thoroughly than most other electric hand mixers. Therefore, the beating time in most recipes must be adjusted to avoid over beating. Beating time is faster due to larger beater sizes. To help determine the ideal beating time, observe the batter or dough and beat only until it has the desired appearance described in your recipe, such as “smooth and creamy”. To select the best beating speeds, use the “Speed control guide” section.

 
- 1) Make sure the Speed Control is in the “0” position by sliding it towards the left as far as possible. Then plug the Hand Mixer into an electrical outlet.

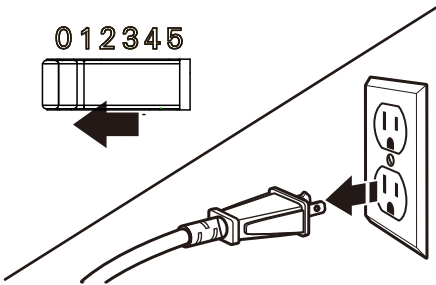

 
- 2) Start mixing at the lowest speed by sliding the Speed Control forward to the first position mark, which is Speed 1.

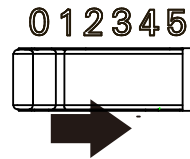

 - 3) To increase the Hand Mixer speed, slide the Speed Control towards the right. To decrease the Hand Mixer speed, slide the Speed Control towards the left. See “Speed control guide” section.





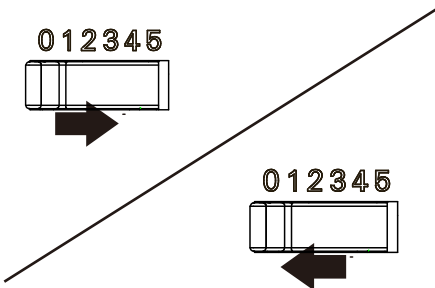


 - 4) When finished, slide speed control to “0”. Unplug the Hand Mixer before removing the accessories.

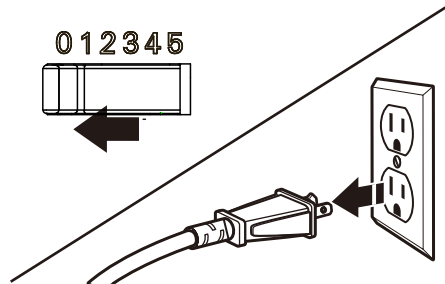

SPEED CONTROL GUIDE

     The 5-speed Hand Mixer should always be set on the lowest speed to start mixing. Move to higher speeds as needed.

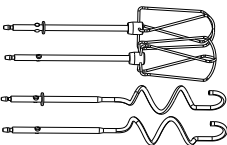Speed	Attachment	Description
0		Turn off the Hand Mixer.
1		For slow stirring, combining, and starting all mixing procedures.
2		Use this speed to stir in nuts, chocolate chips, shredded cheese, onions, olives, and other chunky ingredients. Mix flour and other dry ingredients with liquids or other moist mixtures. Helps avoid ingredient splash out.
3		Combine heavy cream cheese mixtures. Mash squash.
4		Combine heavy cream cheese mixtures. Mash squash. Blend butter and sugar. Mix muffins, quick breads, cake batters, and frostings.
5		Beat egg whites and meringue mixtures. Whip heavy cream and mousse mixtures.

NOTE:

The Turbo Beater accessories are not designed for mixing and kneading bread dough.

CLEANING AND MAINTENANCE

WARNING:

 
Electrical Shock Hazard Do not put in water. Doing so can result in death or electrical shock.

NOTE:


Do not immerse Hand Mixer in water.

1. Cleaning the Hand Mixer body

1) Always unplug Hand Mixer before cleaning. Wipe power cord and cord strap with damp cloth. Dry with a soft cloth.

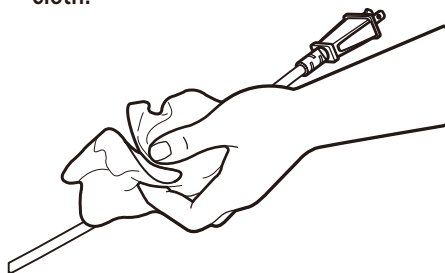

 2) Wipe Hand Mixer with a damp cloth. Dry with a soft cloth.

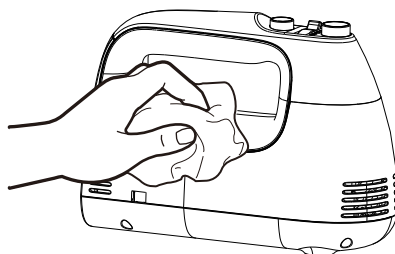

2. Cleaning the accessories

Always remove beaters from Hand Mixer before cleaning. Wash in dishwasher, or by hand in warm, soapy water. Rinse and wipe dry.

TROUBLESHOOTING

If Hand Mixer malfunctions or fails to operate, first try the solutions suggested here and possibly avoid the cost of service.

1. Is the Hand Mixer plugged in?
2. Is the fuse in the circuit to the Hand Mixer in working order? If you have a circuit breaker box, make sure the circuit is closed.
3. Try unplugging the Hand Mixer, then plug it back in.

If the problem cannot be fixed with the steps provided in this section, then contact bonsenkitchen.com or an Authorized Service Center.

See the “Warranty and service” section for additional details. Do not return the Hand Mixer to the retailer – they do not provide service.

WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase. You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: support@bonsenkitchen.com
1-888-965-8032

ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.

Register your product at **www.bonsenkitchen.com**
to get more perks!



Follow us @bonsenkitchen

Bonsen Electronics Inc.

📍 : 5805C Peachtree Corners East
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : support@bonsenkitchen.com