

Bonsenkitchen

Operation Instructions

Milk Frother

Model: MF8001



www.bonsenkitchen.com

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read all instructions before using.**
- 2. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the milk frother.**
- 3. The attached base can not be used for other than intended use.**
- 4. Do not operate the appliance without anything in it to avoid damaging the heat elements.**
- 5. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.**
- 6. Do not let the cord hang over the edge of a table or counter or touch a hot surface.**
- 7. Do not place on or near a hot gas or electric burner or in a heated oven.**
- 8. Ensure that the appliance is used on a firm and flat surface out of reach of children, this will prevent the appliance from overturning and prevent damage or injury.**
- 9. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.**
- 10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs, jar or base in water or other liquids.**
- 11. Close supervision is necessary when any appliance is used by or near children.**
- 12. Do not touch the hot surface. Use the handle or the button.**
- 13. Extreme caution must be used when moving an appliance containing hot milk.**
- 14. Avoid contacting moving parts.**

15. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
16. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
17. The appliance only used for frothing and heating milk. Do not use the appliance for other than intended use.
18. Always operate the appliance with cover in place.
19. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
20. Children should be supervised to ensure that they do not play with the appliance.
21. This appliance is for household and indoor use only. Don't use it outdoors!
22. Scalding may occur if the lid is removed during the brewing cycles.
23. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
24.
 - 24.1. A short power-supply cord (or detachable power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - 24.2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - 24.3. If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the

appliance;

- 2) If the appliance is of the grounded type, the extension cord should be a groundingtype 3-wire cord; and
- 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

25. Save these instructions.

PACKAGE CONTENTS

1 body

1 power base



1 frothing paddle

Check the delivery contents for completeness immediately after unpacking.

TECHNICAL DETAILS

120V DC, 60Hz, 600W

KNOW YOUR MILK FROTHER

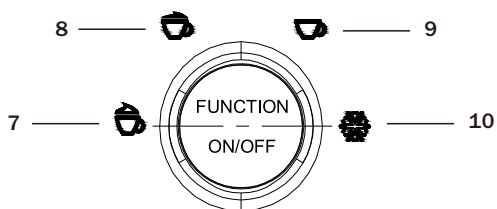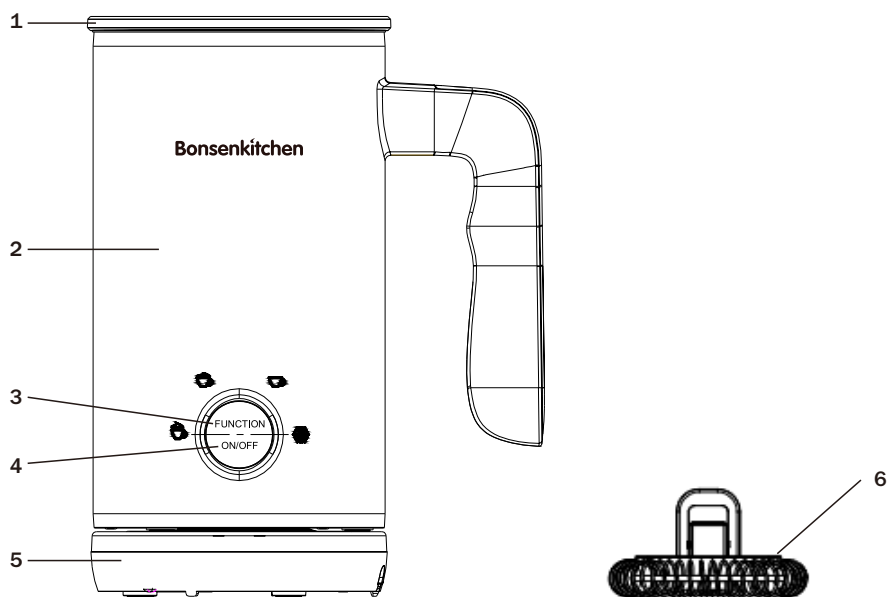

1. Jar cover

2. Body

3. Function button

4. ON/OFF button

5. Power base

6. Frothing paddle

7. Warm and thick foam

8. Warm and thin foam

9. Only warming separately, without frothing

10. Only frothing separately without warming

BEFORE THE FIRST USE

The appliance can be used for finishing the following tasks separately:

1. frothing and heating milk;
 2. only frothing separately, without heating;
 3. only heating separately, without frothing.
-
1. Before using your milk frother, clean all the parts according to the section "CLEANING AND MAINTENANCE".
 2. Important: do not wash any parts in the dishwasher, and do not immerse the jar in water. This may permanently damage the product and void the warranty.
 3. The amount of milk to be heated or frothed shall be complied with the requirement shown in Figure. 1.

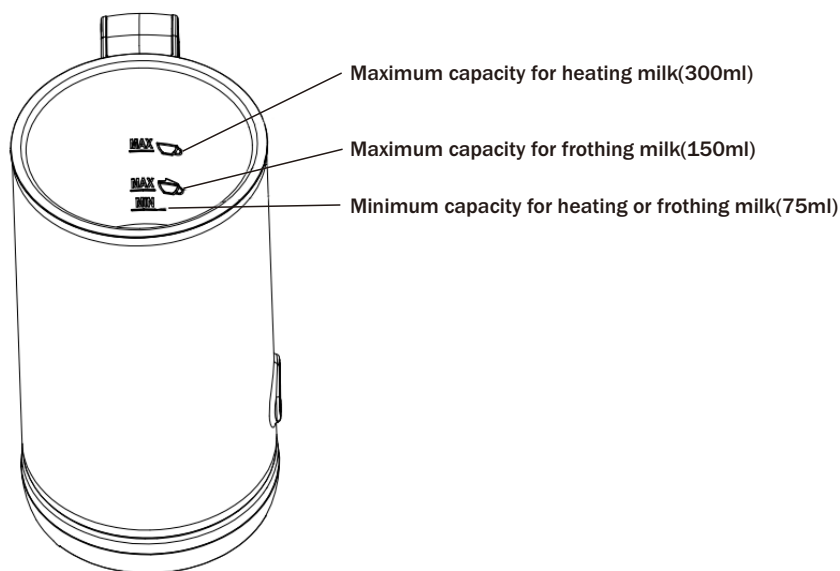


Fig. 1

OPERATION OF YOUR MILK FROTHER

Warm and thick foam

1. Place the appliance on a flat surface.
2. Then open the lid, insert the frothing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, and replace the lid.

NOTE: The max milk quantity permitted to add is 150ml(see Fig. 1), to avoid milk overflowing after frothing. The min milk quantity permitted to add is 75ml.

NOTE: Please use whole milk, frozen milk (7-9°C).

4. Connect the plug into a power outlet.
5. Press the FUNCTION button once, the working indicator of “Warm and thick foam” will blink. Then press the ON/OFF button once, the working indicator of “Warm and thick foam” will turn to illuminate solidly, the appliance will start to work. Once the temperature of milk has achieved the setting value, appliance will stop working;

Note: During operation, you can stop operating by pressing the ON/OFF button once.

6. When the appliance has stopped operating, open the lid, pour out the warmed and frothed milk to enjoy it.

Caution: Minimum 3 minutes rest time must be maintained between two continuous cycles, otherwise, the appliance will enter self-protection state automatically after working for 5 cycles continuously, the working indicator will flash and the switch button will not be activated, after about 5 minutes, the appliance will enter standby state and you can continue operating the appliance.

NOTE: Please clean the jar according to the section “CLEANING AND MAINTENANCE” between two continuous cycles.

7. Always turn off the milk frother and disconnect the power supply when not use.

Warm and thin foam

1. Place the appliance on a flat surface.
2. Then open the lid, insert the frothing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, and replace the lid.

NOTE: The max milk quantity permitted to add is 150ml(see Fig. 1), to avoid milk overflowing after frothing. The min milk quantity permitted to add is 75ml.

NOTE: Please use whole milk, frozen milk (7-9°C).

4. Connect the plug into a power outlet.
5. Press the FUNCTION button once, the working indicator of “Warm and thin foam” will blink. Then press the ON/OFF button once, the working indicator of “Warm and thin foam” will turn to illuminate solidly, the appliance will start to work. Once the temperature of milk has achieved the setting value, appliance will stop working;

Note: During operation, you can stop operating by pressing the ON/OFF button once.

6. When the appliance has stopped operating, open the lid, pour out the warmed and frothed milk to enjoy it.

Caution: Minimum 3 minutes rest time must be maintained between two continuous cycles, otherwise, the appliance will enter self-protection state automatically after working for 5 cycles continuously, the working indicator will flash and the switch button will not be activated, after about 5 minutes, the appliance will enter standby state and you can continue operating the appliance.

NOTE: Please clean the jar according to the section “CLEANING AND MAINTENANCE” between two continuous cycles.

7. Always turn off the milk frother and disconnect the power supply when not use.

Only warming separately, without frothing.

1. Place the appliance on a flat surface.
2. Then open the lid, insert the frothing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, and replace the lid.

NOTE: The max milk quantity permitted to add is 300ml(see Fig. 1), to avoid milk overflowing after mixing. The min milk quantity permitted to add is 75ml.

NOTE: Please use whole milk, frozen milk (7-9°C).

4. Connect the plug into a power outlet.
5. Press the FUNCTION button three times, the working indicator of “Only warming separately, without frothing” will blink. Then press the ON/OFF button once, the working indicator of “Only warming separately, without frothing” will turn to illuminate solidly, the appliance will start to work. Once the temperature of milk has achieved the setting value, appliance will stop working;
6. When the appliance has stopped operating, open the lid, pour out the warm milk and enjoy it.

Caution: Minimum 3 minutes rest time must be maintained between two continuous cycles, otherwise, the appliance will enter self-protection state automatically after working for 5 cycles continuously, the working indicator will flash and the switch button will not be activated, after about 5 minutes, the appliance will enter standby state and you can continue operating the appliance.

NOTE: Please clean the jar according to the section “CLEANING AND MAINTENANCE” between two continuous cycles.

7. Always turn off the milk frother and disconnect the power supply when not use.

Only frothing separately, without warming

1. Place the appliance on a flat surface.
2. Then open the lid, insert the frothing paddle onto the shaft on the bottom of jar.
3. Fill the jar with the desired amount of milk, and replace the lid.

NOTE: The max milk quantity permitted to add is 150ml(see Fig. 1), to avoid milk overflowing after frothing. The min milk quantity permitted to add is 75ml.

NOTE: Please use whole milk.

4. Connect the plug into a power outlet.
5. Press the FUNCTION button four times, the working indicator of “Only frothing separately, without warming” will blink. Then press the ON/OFF button once, the working indicator of “Only frothing separately, without warming” will turn to illuminate solidly, the frothing paddle will rotate for frothing milk separately, but the heating element will not heat. And the appliance will automatically stop rotating after operating.

Note: During operation, you can stop operating by pressing the froth button once.

6. When the appliance has stopped operating, open the lid, pour out the frothed milk and enjoy it.

Caution: Minimum 3 minutes rest time must be maintained between two continuous cycles, otherwise, the appliance will enter self-protection state automatically after working for 5 cycles continuously, the working indicator will flash and the switch button will not be activated, after about 5 minutes, the appliance will enter standby state and you can continue operating the appliance.

NOTE: Please clean the jar according to the section “CLEANING AND MAINTENANCE” between two continuous cycles.

7. Always turn off the milk frother and disconnect the power supply when not use.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and allow it cooling down before cleaning.

CAUTION: Never immerse the jar, power cord in water, or allow moisture to contact with these parts.

1. Wash lid with water and mild detergent. The lid is not dishwasher safe component. Rinse thoroughly and dry.
2. Remove the mixing paddle or frothing paddle, and wash them completely in warm water.
3. Wash the inner of jar with a combination of a mild detergent and water and then wipe clean with a soft damp cloth.
4. Wipe the appearance of jar with a soft damp cloth or cleaner, never use a poisonous cleaner.
5. Any other servicing should be performed by an authorized service representative.

NOTE: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the appliance to prevent the gloss loss.

WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase. You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **support@bonsenkitchen.com**
1-888-965-8032

ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.

Register your product at **www.bonsenkitchen.com**
to get more perks!



Follow us @bonsenkitchen

Bonsen Electronics Inc.

📍 : 5805C Peachtree Corners East
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : support@bonsenkitchen.com