

EN Thank you for purchasing the electric grinder set.

BEFORE USING FOR THE FIRST TIME

To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.


- Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.
- Use for pepper and salt only, please do not use for others purposes.
- Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Keep body parts (e.g. finger) and utensils away from the grinding head to avoid damage. Please hold the grinder tightly when using.
- Keep this product away from children.
- Do not dismantle the product by yourself, or otherwise warranty will be invalid.
- Please take out the batteries if do not use for a long time.
- Keep away from flammable, explosive gas, high temperature.



PACKING LIST

1. ELECTRIC SALT & PEPPER MILL SET *2
2. Storage Base*1
3. Product Manuals*1


PRODUCT DESCRIPTION

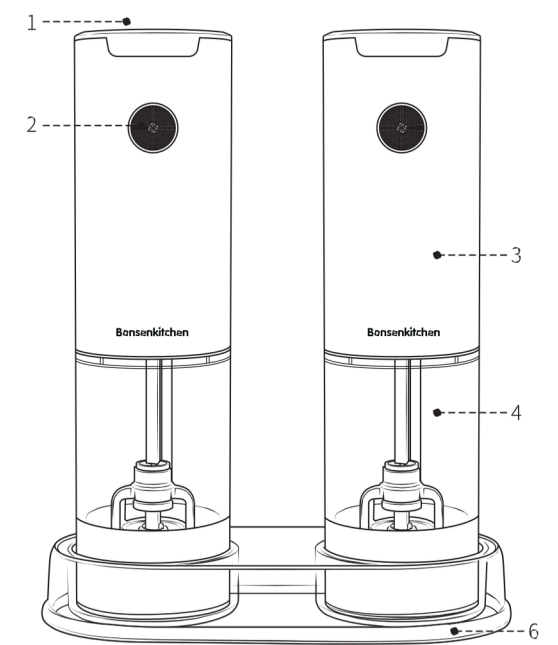



1. Battery Cover
2. On/Off Button
3. Upper Body
4. Container
5. Adjuster
6. Storage Base

HOW TO INSTALL THE BATTERIES

• Pull back the buckle of the battery cover with fingers to lift up the battery cover.

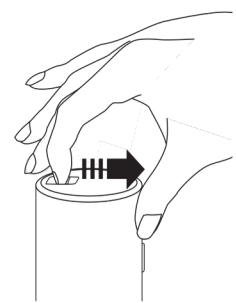


• Insert 4 pieces of AAA alkaline batteries (Not included) according to the positive and negative terminals. Close the battery cover.

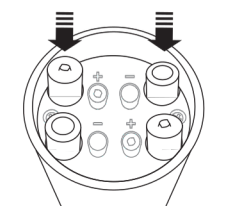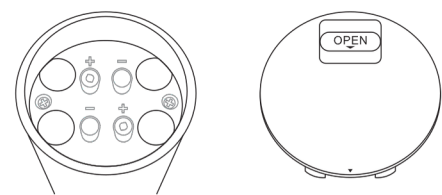


(Battery not included)

HOW TO USE


• Hold the grinder tightly, rotate and open the container according to the indication icons.

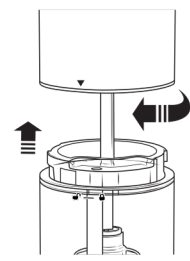


• Put pepper or salt into the container, attach and lock the upper body and container by rotating reversely.

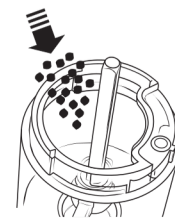

• According to the personal needs to rotate the adjuster.

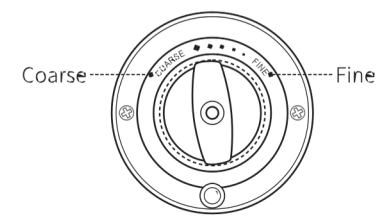

• Press and hold the on/off button to grind, release the button to stop.

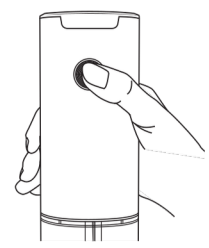


*This product adopts an adjustment knob. The adjuster could be rotated between the finest and the coarsest grinding.

• Adjust to Fine: Rotate the adjuster from "COARSE" to "FINE", continue to rotate until the desired fineness is achieved.

• Adjust to Coarse: Rotate the adjuster from "FINE" to "COARSE". If the adjuster loosens, it could be caused by some pepper grains stuck in the burr. Start the product to rotate, then the burr will be loosened and you can continue to adjust. This is a normal situation of ceramic burr and will not affect its normal use.

*With seasonings in the container, please do not turn the grinder upside down for a long time in case grains of seasonings might get into the battery compartment and cause battery corrosion.

*The container of the product can be cleaned by rinsing with clean water, but do not soak it or put it in a dishwasher. (Note: Do not rinse the main unit with water.)

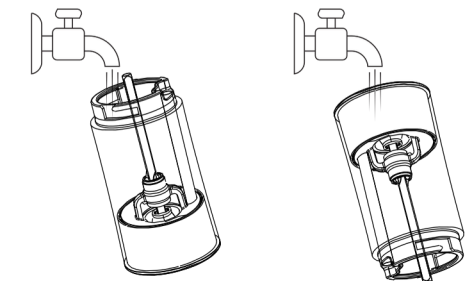

TROUBLESHOOTING

If the grinder does not work or stops during grinding:

- Please check that the batteries are alkaline batteries.
- Please check that the batteries are installed correctly.
- Please confirm there is sufficient battery power.
- Please adjust the adjuster with counter-clockwise direction.

If the above operations are all correct and the grinder still works abnormally, please contact the vendor for maintenance service.

FC This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manufacture: Bonsen Electronics Limited
 • No.11-12, Lun Pin Chong Industrial Zone San Tun Community, Hou Jie Town 523941 Dongguan City, Guangdong PEOPLE'S REPUBLIC OF CHINA
 • customer-service@bonsenkitchen.com
 • www.bonsenkitchen.com

Made in China