

01 SETUP





1. Remove the night light cover and clear round ring.





2. Peel the protective layer off the glossy side of the films. Bend rectangle film into a cylindrical shape and slot the tabs into place. Glossy side of film should be on the outside. Place film into the clear cylinder case.





3. Place circular film into clear round ring. Glossy side of film should touch the ring. Replace ring with film back onto the cylinder case.

OZ HOW TO



POWER INPUT

Corded Use: Connect included power

cable to a USB port.

Cordless Use: For portability, insert 3 x AA batteries (not included).

BUTTON A - Power Switch and Lighting Modes

No. of Presses	Function
1	Turn on - white light
2	Change colour to blue light
3	Change colour to warm light
4	Light fades through the 3 light colours
5	Light flashes through the 3 light colours
6	Tri-colour mode - all 3 light colours on at once
7	Turn off

BUTTON B - Brightness and Rotation

Short Press: Adjust brightness level (100%, 50%, 5%). Long Press: Activate and deactivate rotation mode.

03 LIGHTING OPTIONS



Leave the cover on to use as a night light. Let the gentle glow create a calm and soothing atmosphere, with artwork lit up on the casing.

Alternatively, remove inner film for a simple light with no pictures.



Remove cover to use as a projector. Watch this merry-go-round of light fill your walls with dancing creatures!

OPTIMAL LIGHT PROJECTION DISTANCE: 1.5m - 2m

