## changing cord exit position



### important safety instructions

#### read all instructions before starting

- 1 | Before beginning conversion make sure the iron is cold and unplugged from the outlet, and empty of water.
- 2 Only use the original parts of the iron to reassemble, do not substitute or modify the parts in any way, or add additional parts or material to the iron.
- 3 Be careful to not damage the power cord with the tools. If damage occurs stop and contact oliso customer service.
- 4 Be careful not to overly twist the cord when moving.
- 5 Ensure cord is fully under retainer before closing the cover.
- 6 Be careful when fastening the cover in place not to trap the cord between the retainer as it could damage the cord.
- 7 | If the cover does not fit snugly back in place, remove and check cord is in the right place.
- 8 Reassemble the cover completely and secure the screws before plugging the iron into the outlet again.
- 9 We recommend changing the cord exit position only once.

if cord is damaged or cover does not close properly, stop and contact customer service

# changing cord exit position

### what you will need



 





**3.** A tool with a soft durable point (like a pencil or tweezers).

#### 1.


Stable surface and a soft cloth or towel to protect the surface and the iron.



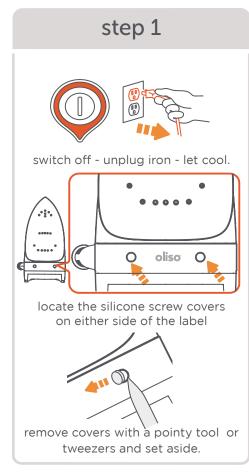


step 2

Locate Philips head screws.

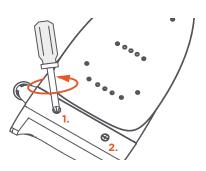


unscrew and set screws aside.

### step 3

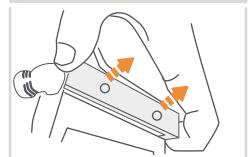

**Gently** loosen cover by lifting directly away from iron. Cable and cover will remain attached to iron.

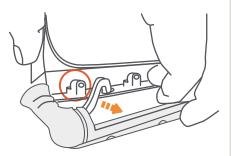

unhook cable from retainer.

## changing cord exit position

