

E-SOMMET (2021-2023)/E-ESCARPE (2023) BATTERY REMOVAL GUIDE



1. Using a 4mm allen key, loosen the bottom 2 bolts of the battery door around 1 full turn (no need to fully remove these bolts).



2. Loosen and fully remove the top battery door bolt.



3. Slide the battery door upwards and remove.



4. Using the 4mm allen key, gently turn the silver battery release bolt **CLOCKWISE** about ¼ turn.



5. The battery should drop down and stop in the position shown.



6. Push down the silver clip to fully release the battery.



7. The battery can now be removed from the frame.