



PAMBOX

Dynamic

LOCK RESET (Manager Reset)

Pambox does not reset the lock

1. Enter the Master password and navigate to Manager Reset and hit enter.
2. Retype the Master password and then.
3. Enter Password Manager.
4. Confirm with the enter key.
5. The LED will light and the lock message without programming will appear.

The lock cannot be opened after this procedure.

Dynamic

SCHEDULE LOCK

1. Connect InterGard cable to Pambox and lock (Rj and Rj - yellow side facing Pambox and gray to lock).
2. Navigate with the directional arrows to the option "PROG LOCK" and press enter. It will appear written in the "CRYPTOGARD / 80" module, press the directional arrow until "SMARTGARD DYNAMIC" appears and press enter again and CONECT LOCK will appear.
3. Wait until "Programming OK" message appears on module and lock.
4. Write down the serial number that will appear on the module (note this number and which lock it refers to).
5. Finally, unplug the cable and hit enter on Pambox.

The lock will be with the programming that is configured in the Pambox module under Settings.

Dynamic

COLLECT AUDIT

1. Connect InterGard cable to Pambox and lock (Rj and Rj - yellow side facing Pambox and gray to lock).
2. Navigate with the directional arrows to the option "COLLECT AUDIT." And hit enter. Will appear in Pambox module "READY TO RECEIVE".
3. At the lock, log in with the Master user and navigate to "LOG. AUDIT

"KEY (*) PRINT.

4. Key enter the lock and wait until it finishes (the process may vary from time to time depending on the number of events in each lock).
5. At the end will appear the serial number of the audited lock.
6. Write down the serial number that will appear on the module (note this number and which lock it refers to).
7. Finally, unplug the cable and hit enter on the Pambox.

Intelli Group

LOCK RESET (Manager Reset)

Pambox does not reset the lock

1. Enter Master password and hold on last digit until led remains lit
2. After the LED lights up press key 8
3. Enter Password Manager.
4. After a few seconds the lock will sound a long beep ending the reset process. Check that the lock is reset by pressing key 1.

If reset it will sound 2 beeps and the tab will be released for opening.

Intelli Group

SCHEDULE LOCK

1. Connect InterGard cable to Pambox and lock (hatchet)
2. Navigate with the directional arrows to the option "PROG LOCK" and press enter. It will appear written in the "CRYPTOGARD / 80" module, press enter again and "KEY 0 START" will appear.
3. Press "0" on the lock keypad and wait until the end of programming and the serial number will appear in the Pambox module.
4. Write down the serial number that will appear on the module (note this number and which lock it refers to).
5. Finally, unplug the cable and hit enter on Pambox.

The lock will be with the programming that is configured in the Pambox module under Settings.

Intelli Group

COLLECT AUDIT

1. Connect InterGard cable to Pambox and lock (hatchet)
2. Navigate with the directional arrows to the option "COLLECT AUDIT." And hit enter. Will appear in Pambox module "READY TO

RECEIVE".

3. Enter Master password and hold on last digit until led remains lit
4. After the LED lights up press key 7
5. Wait until it finishes when the led goes off (the process may vary according to the number of events in each lock)
6. At the end will appear the serial number of the audited lock.
7. Write down the serial number that will appear on the module (note this number and which lock it refers to).
8. Finally, unplug the cable and hit enter on the Pambox.

GENERAL OBSERVATIONS:

- Always use the Locks and Pambox manuals.
- To update, change or delete Pambox module settings, **Pambox View SQL** software is required.
- To transfer the audits collected through the Pambox module, LGView software is required.
- When programming Smartgard Dynamic Locks you can use either the 2 User or 8 User option, regardless. Dynamic CEF and BB versions will be programmed according to the number of users selected (2 or 8). In other versions will always be programmed according to their feature (check lock manual).
- The programming capacity of each module is up to 10 Locks or 10 Audits collected. It is necessary to reset (delete) Pambox module information before programming new locks and or collecting new audits.

