# - DRIVE





OPEN YOUR PREMIUM DRIVE BOX.

STEP 2:

REMOVE THE BOTTLE OF HAND SANITIZER AND THE MACHINE FROM THE BOX. UNDERNEATH THE PAPER INSERT YOU WILL FIND A CHARGING CORD.



ON THE TOP OF THE
DEVICE LOCATE THE CIRCULAR
MIDDLE COMPONENT.
FIRMLY PRESS DOWN.



AFTER FIRMLY PRESSING DOWN, RELEASE AND THE CENTER WILL POP UP.



REMOVE BLACK CAP FROM THE BOTTLE OF SANITIZER.



TAKE THE POPPED UP CENTER COMPONENT AND INSERT INTO THE BOTTLE OF SANITIZER.



TWIST CLOCKWISE UNTIL THE SANITIZER TANK IS SECURELY TIGHTENED TO THE CENTER COMPONENT.



PLACE THE FULLY ASSEMBLED SANITIZER TANK BACK INTO THE CENTER OF THE MACHINE. MAKE SURE THE WHITE ARROW LINES UP WITH THE POWER SYMBOL.



PUSH DOWN FIRMLY UNTIL IT CLICKS INTO PLACE.



UNRAVEL THE CHARGING
CORD. INSERT THE SMALL END
INTO THE CHARGING PORT AT
THE FRONT OF THE DEVICE
DIRECTLY UNDER THE POWER

\*ONLY ONE WAY TO INSERT \*.
INSERT USB END INTO YOUR
USB CHARGING BLOCK. THE
RED LIGHT INDICATES THAT THE
DEVICE IS CHARGING. THE RED
LIGHT WILL SHUT OFF WHEN
FULLY CHARGED. CHARGE FOR
6-8 HOURS FOR FIRST USE.

# DRIVE



# - INSTRUCTIONS -



SCAN TO WATCH SET-UP VIDEO

### **SPECIFICATIONS**

_				
ſ	PRODUCT NAME	DRIVE MISTER	CAPACITY	50ML
	VOLTAGE	DC SV LA	POWER	2W
	N.W	310G	G.W.	397G
	SIZE	69MM*138MM	CHARGING	TYPE-C
Ī	CHARGING	3-4 HOURS	SPRAY	256ML/HV
1	BATTERY	1000MA	SENSING DISTANCE	10-13CM

### SAFETY NOTICE

- Charge the machine for 30 minutes before the first use.
- If there is no liquid in the bottle, please do not trigger the sensing device as this may cause damage to the machine.
- Do not use at temperatures below -4 F of above 130 F.
- For external use only. When using this product do not use in or near eyes, In case of contact, rinse eyes thoroughly.
- Stop use and ask a doctor if irritation or rash appears and lasts.
- Children under 6 should be supervised when using this product.

   If swallowed, get medical help or contact Poison Control Center right away.
- FLAMMABLE. Keep away from fire or flames.

### **NEED ASSISTANCE?**

CONTACT US AT 844.402.4348 OR EMAIL ORDERS@SNAPWELLNESS.COM

### UNIT DOES NOT RESPOND. NO POWER.

- PLUG DEVICE INTO POWER WITH PROVIDED USB CHARGING CORD. CHARGE FOR 6-8 HOURS BEFORE FIRST USE.
- RED LIGHT INDICATES CHARGING. WHEN THE DEVICE IS FULLY CHARGED RED LIGHT WILL GO OFF. PRESS THE POWER BUTTON AND IT WILL TURN GREEN INDICATING THE DEVICE IS ACTIVE AND READY FOR USE.

### UNIT DOES NOT SPRAY.

- ENSURE SPRING IS PROPERLY IN PLACE TAKE OUT THE CARTRIDGE & CHECK TO SEE IF SPRING IS BELOW WHITE COTTON WICK.
- ENSURE WHITE COTTON WICK IS FULLY SATURATED.
- THE MACHINE IS AN INFRARED SENSING DEVICE, AND THE SENSING HEIGHT OF THE DEVICE IS RELATED TO THE INTENSITY OF LIGHT. IN PLACES WITH WEAK LIGHT, THE SENSING HEIGHT WILL INCREASE, AND IN PLACES WITH STRONG LIGHT, THE SENSING HEIGHT WILL DECREASE. TRY PLACING THE DEVICE IN THE SHADE AND SEE IF IT CAN BE ACTIVATED.
- MAKE SURE UNIT HAS CHARGED OVERNIGHT BEFORE FIRST USE.

### UNIT SPRAYS CONTINUALLY.

SENSOR ON TOP MAY BE BLOCKED— ENSURE NOTHING IS BLOCKING THE SENSORS ON EITHER SIDE OF THE POWER BUTTON. GENTLY WIPE THE TOP WITH SOFT CLOTH DAMPENED WITH WARM WATER.

- INSTRUCTIONS -