ITEMS INCLUDED IN YOUR **TOUCHLESS MIST SANITIZER**



STEP1

Remove clear plastic base on the bottom of PART A. Twist counterclockwise to open.



STEP 2

Remove all of the items stored inside of the base (Includes PARTS C, D, E, & F).



STEP 3

Remove pre-assembled tank insert from plastic bag. Confirm spring (Part D) is on the bottom and the cotton wick (Part E) is on top. The cotton wick should bounce freely on top of the spring.



STEP 6

Take the clear plastic piece of PART A and place on the bottom covering the tank. Twist clockwise until the clear bottom locks into place

CONTINUE TO BACK



STEP 7

Unravel charger (PART F). Insert the small end into the charging port located above the logo *only I way to insert*. Take the USB end and insert into a charging cube or USB charging port. Charge device overnight (6-8 hours).

The tiny red blinking light above the logo on back indicates charging. When the light turns solid red, device is fully charged.



STEP 8

After fully charging, **RAPIDLY DOUBLE-CLICK** the power button to turn the device on. Blue light around base indicates device is activated.

To turn blue light off, but keep device active, hold power button for 3 seconds. Let sit for 60 seconds before first use for the cotton wick to be fully saturated. Hold your hand above the device until it dispenses a fine mist of sanitizer.

To turn device off, click power button once.

*Charge nightly for best use or keep plugged in for your convenience.



NEED ASSISTANCE?

Unit does not respond. No power.

- Plug device into power with provided USB charging cord. Charge for 6-8 hours (tiny red blinking light indicates charging).
- To power on, RAPIDLY DOUBLE-CLICK until blue **LED light appears in base**. Do not delay between

Unit does not spray.

- Ensure spring is properly in place Take out the cartridge & check to see if spring is below white wick. Make sure the wick bounces freely up & down on top the spring when touched. If not, try reversing the direction of spring.
- · Make sure unit has charged overnight.

Unit sprays continually.

- · Spring may be stuck Remove cartridge & check that the wick is bobbing freely on the spring & is not stuck. If stuck, remove wick & pop out spring, then replace properly.
- Sensor on top may be blocked Ensure nothing is blocking the silver circle or either of the 2 sensors on top. Gently wipe the top with soft cloth dampened with Windex or warm water.



CONTACT US

STEP 4

Remove cap from

PART B (sanitizer

tank). Peel seal on

top of the tank.

Next, place fully

assembled insert

from Step 3 into

the sanitizer tank (PART B).



snappyscreen.com



orders@snappyscreen.com



844.402.4348



@snappyscreen

For exchanges or returns email us at orders@snappyscreen.com or call us at 844.402.4348

WARNING

For external use only. When using sanitizing device, do not approach open flame to prevent fire. Children should be accompanied by an adult to avoid unnecessary accidents. When cleaning the product, please do not wash it directly with water to avoid product short-circuit and damage to the equipment. It is recommended to wipe with a soft cotton cloth. While you might be tempted to smell our sanitizer up close, do NOT place face above mister device. Our Touchless Mister is designed for hands only, so a simple wave of a hand above device is all that is necessary for proper use.



STEP 5

Twist the white top portion of the device

(PART A) onto the fully assembled

sanitizer tank (PART B).

SNAPPYSCREEN

TOUCHLESS MIST SANITIZER SET-UP GUIDE

VISIT OR CODE TO WATCH SET-UP VIDEO

