



 
## ACTIVITY WALKER

 
Assembly instructions

## MARCHEUR D'ACTIVITÉ


Guide d'assemblage

---

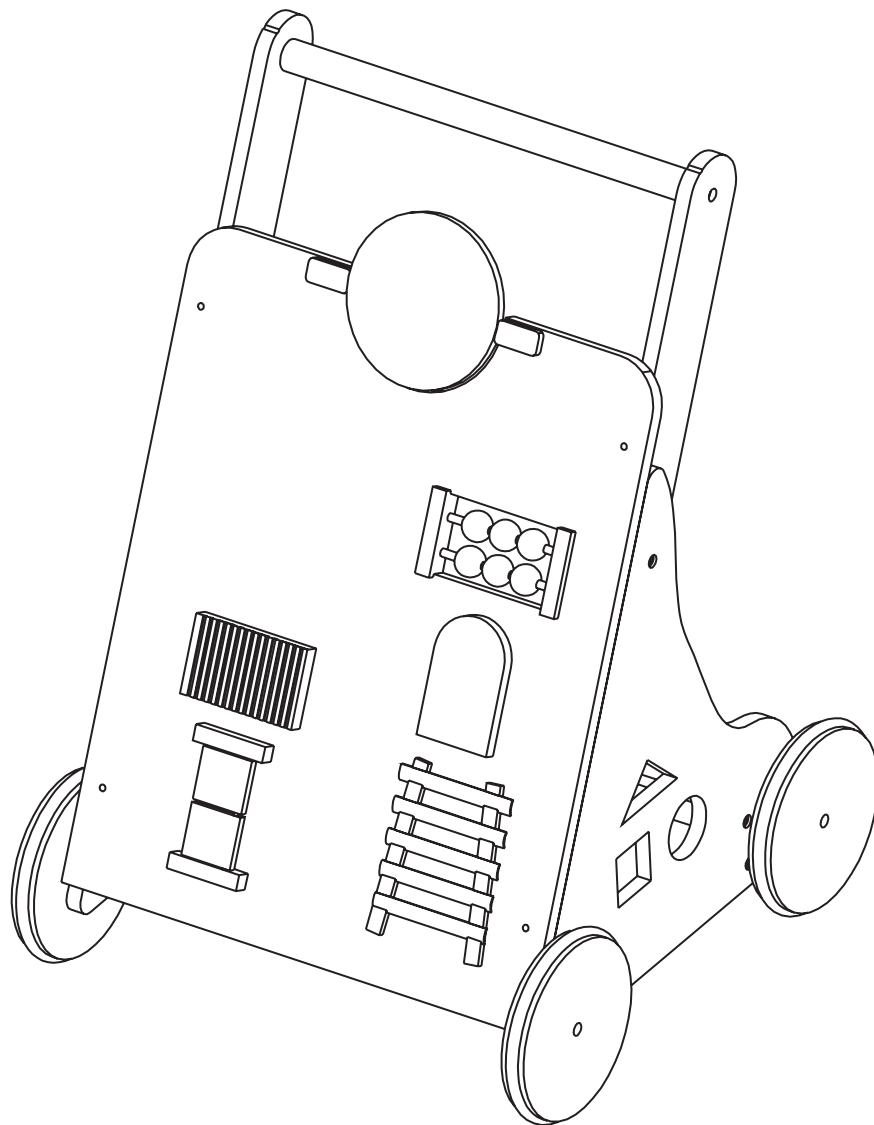


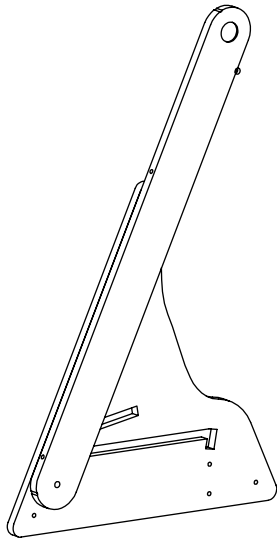


A - 1PC

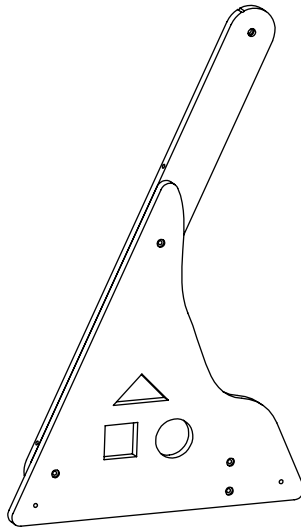 

B - 1PC

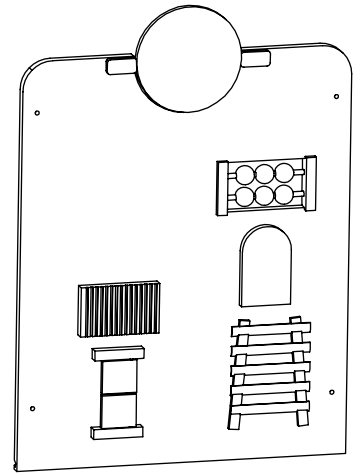 

C - 1PC

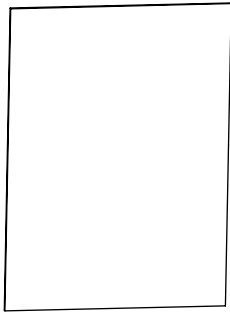 


D - 1PC



E - 1PC



 
F - 1PC

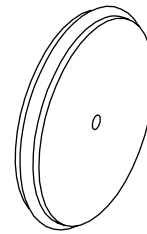


G - 4PCS



 H - 4PCS




I - 2PCS

 

J - 8PCS



 K - 4PCS






L - 1PC



 
 
M - 1PC

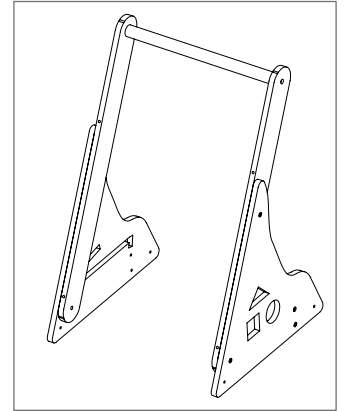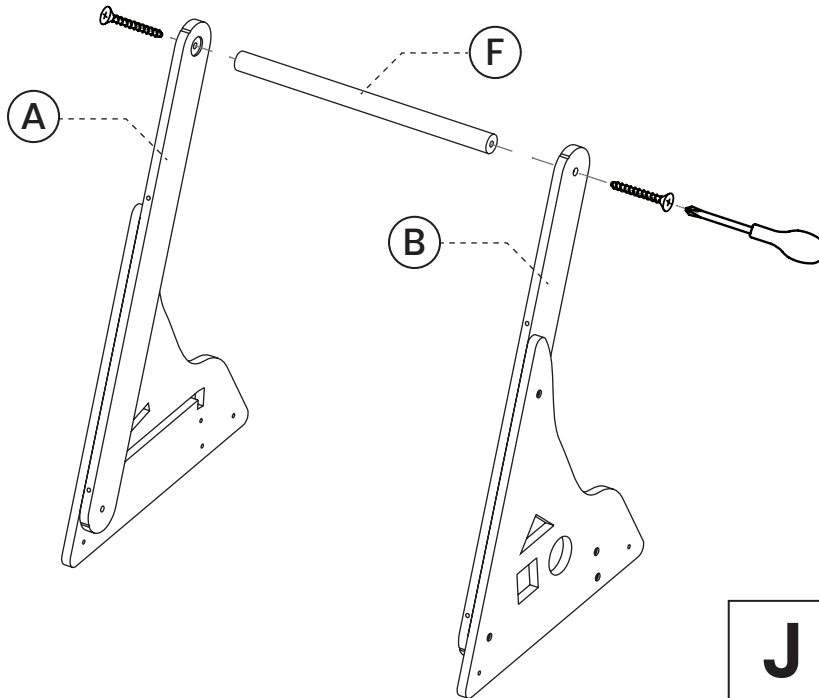

1





<b>J</b>		x2
----------	---	----

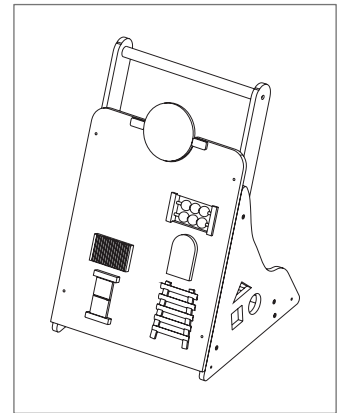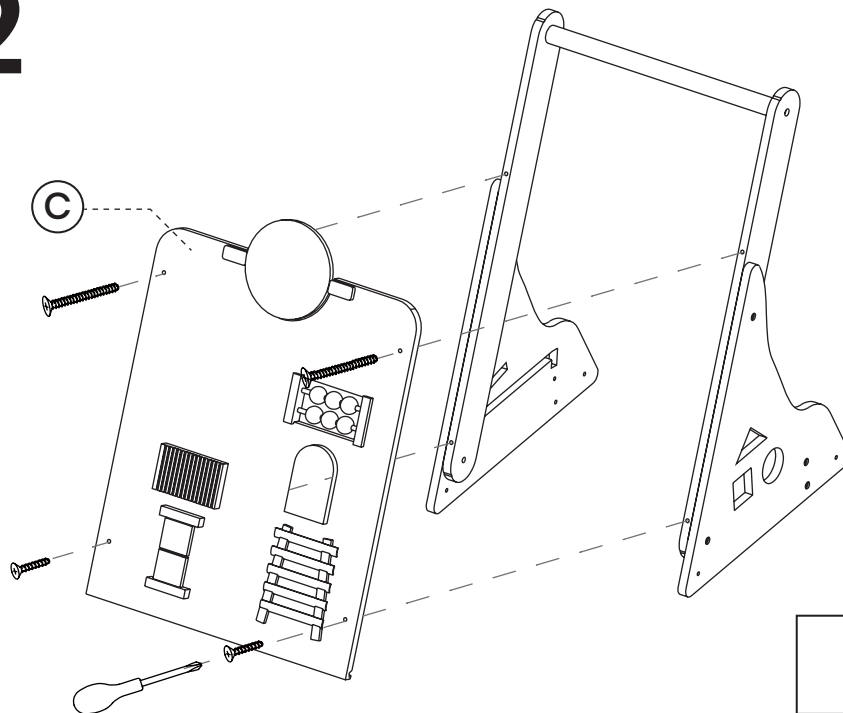  
2





<b>I</b>		x2
<b>J</b>		x2

  
3

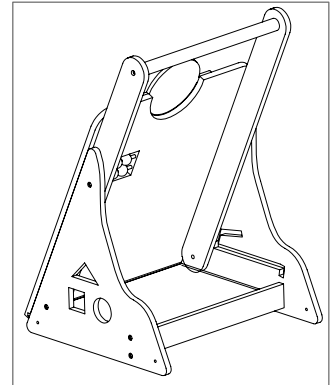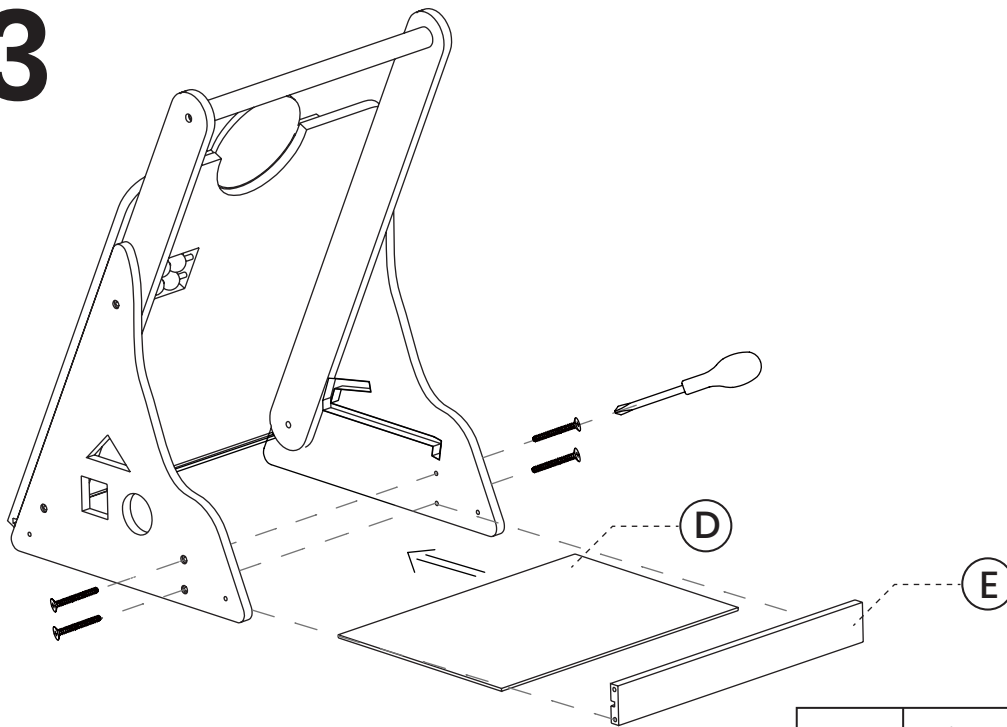

<b>J</b>		x4
----------	---	----

   4

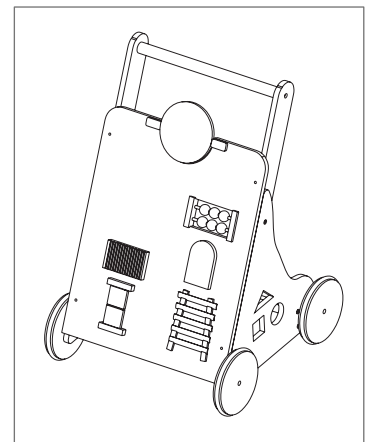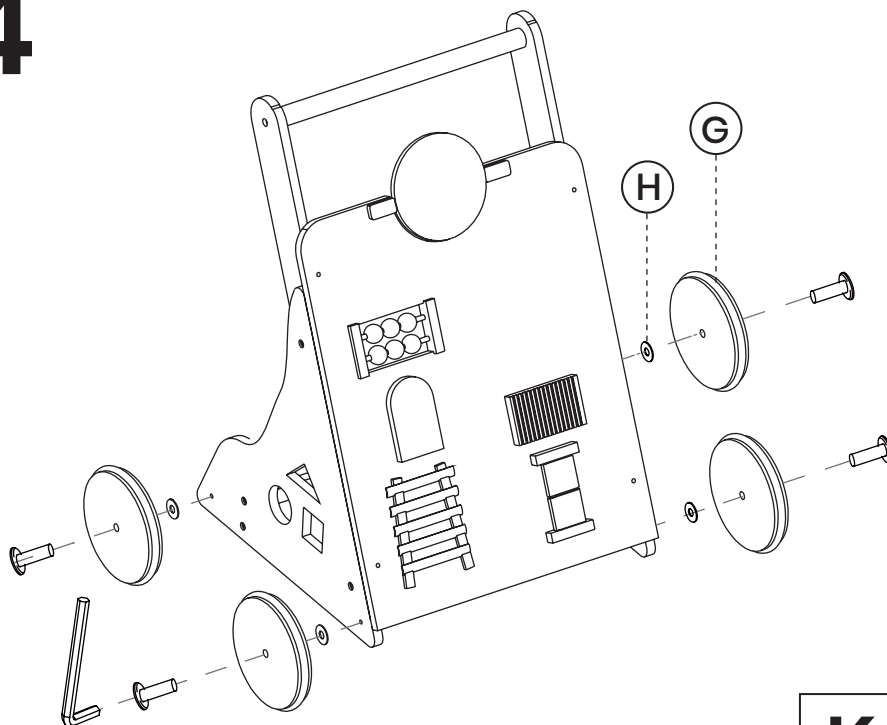

<b>K</b>		x4
----------	---	----

# COCO VILLAGE



**Unique minimalist designs**

Designs québécois uniques



**Exclusively online**  
**cocovillage.com**

Exclusivement en ligne



**Customer care available 7/7**  
**1-833-901-COCO**

Service client disponible 7 jours  
1-833-929-COCO



**Fast delivery**  
**across North America**

Livraison rapide partout en Amérique du Nord