Changing a Monkey Tail Handle on a Casement Window

Health & Safety

Do not put yourself in a position of potential fall through the open window whilst performing this task. If you do not feel competent or feel unable to undertake this replacement safely, **STOP** and seek further assistance from Anglian.



Old Handle Removal Sequence



Move the handle into the open position and remove the bottom screw.





Step Two

Move the handle back into the closed position and remove the upper screw.

New Handle Fitting Sequence



Push the new handle into position on the window, engaging the spindle into the gearbox. The handle should fit flat against the window.





Fit the upper screw into handle and locate thread in the lock with the screw in your fingers before using the screwdriver to tighten.



Handle with now be free to be withdrawn from the gearbox and away from the window.

If the spindle has become detached from the handle it should still be free to be withdrawn.

Check! That the replacement handle has the same length spindle as the handle being removed.



Move the handle into the open position, fit the lower screw into the handle. Use your fingers to screw before using the screwdriver to tighten.



