

Changing a Monkey Tail Handle on a Flush Finish Window

Health & Safety

If you do not feel competent or able to undertake this replacement safely **STOP** and seek further assistance from Anglian.




Old Handle Removal Sequence

Step One

With the window closed and the handle in the normally closed position, Remove the bottom screw.



Step Two

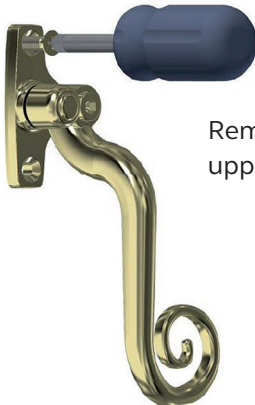

Remove the upper screw.

Step Three

Handle with now be free to be withdrawn from the gearbox and away from the window.

If the spindle has become detached from the handle it should still be free to be withdrawn.

Check! That the replacement handle has the same length spindle as the handle being removed

New Handle Fitting Sequence

Step Four

There will be three holes in the window profile, screws to the outside spindle to the centre



Push the new handle into position on the window and locate into the gearbox, handle should sit flat against the surface of the window profile.

Step Five

Fit the upper screw into handle and locate thread in the lock with the screw in your fingers before using the screwdriver to tighten.



Step Six

Fit the lower screw into handle, locate thread in the lock with the screw in your fingers before using the screwdriver to tighten.

Once you are happy that the screws are pinch tight and that the handle operates the window lock correctly.

