

INCLUDED PARTS

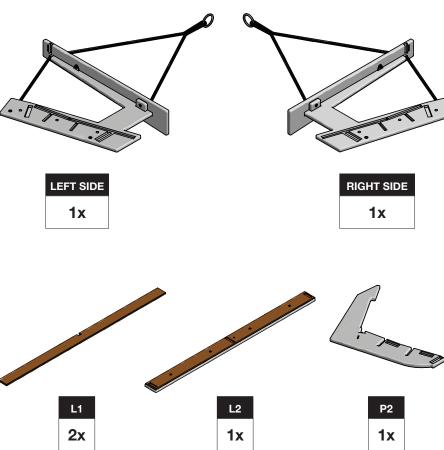

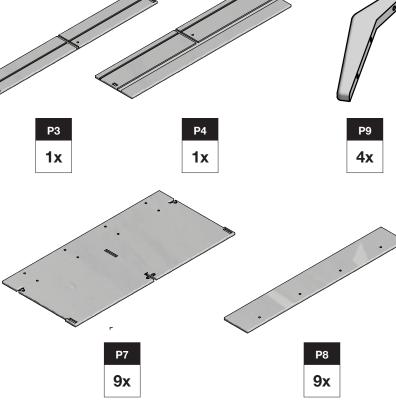























1.375


1x


9x


4x


Bolts & Tools shown actual size.


*** Please double check the bolt size required on each step. Use of wrong bolts will result in damage of product.***

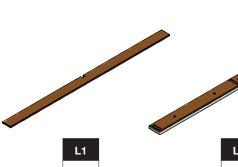

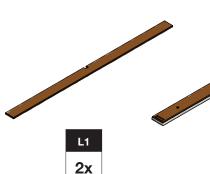

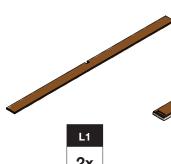


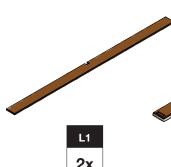

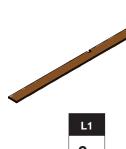 






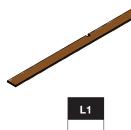









 














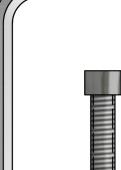

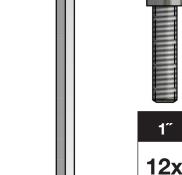

ISTRUCTIONS & PRODUCT INFO:

LOLLYGAGGER PORCH SWING

ASSEMBLY TIPS: 5 Important Points You NEED to Read

"Loll Designs inspires people to appreciate the outdoors."

Greg Benson - Founder/CEO

Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to lolldesigns.com/damage. Rest assured we'll get it taken care of straight away!

- To avoid scratching furniture, assemble on a clean soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
- Start all bolts by hand to ensure proper alignment and to prevent cross threading. Then using the Allen Key or Loll Tool, tighten until you feel resistance.

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

RECYCLE THE PACKAGING

For more info and visual aids, watch the assembly videos at www.lolldesigns.com/videos For product care & maintenance, visit www.lolldesigns.com/care-maintenance For further **loll**ygagging assistance, please reach out!

WE WANT YOU TO LOVE YOUR LOLL

4

မှ

ы

- Bolts should not be forced, but some components, particularly the blocks will need a bit of muscle to get them together as they are machined for a snug fit. If parts are still not going together, please send us a photo of the part you are having trouble with.
- You can use a cordless screw gun if you have one and know how to use it. Set the clutch setting at low to medium torque. We do not recommend using an electric drill without a clutch to install bolts as you can easily overtighten and damage the product.

BLOCK & BOLT INSTALLATION

 
+1 877-740-3387

Duluth, Minnesota 55807 5912 Waseca Street sales@lolldesigns.com

as shown below. Insert bolts through countersunk hole side of blocks







beginning assembly. "Tool Included" before **LOLL TOOL**






















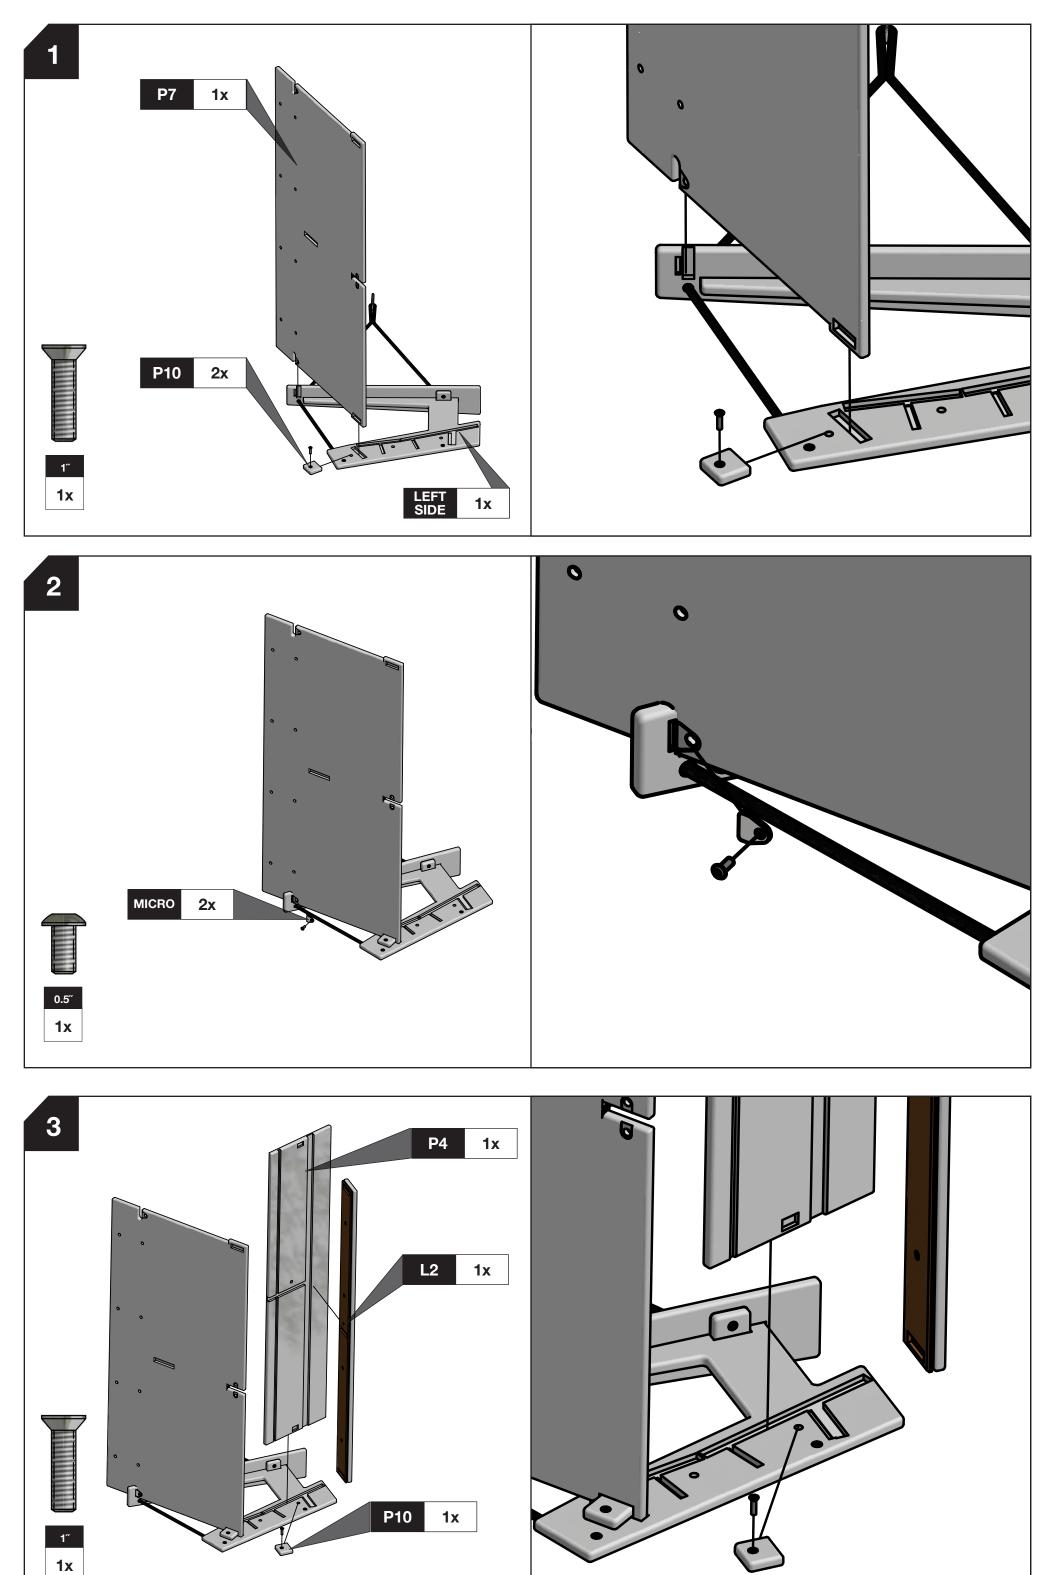


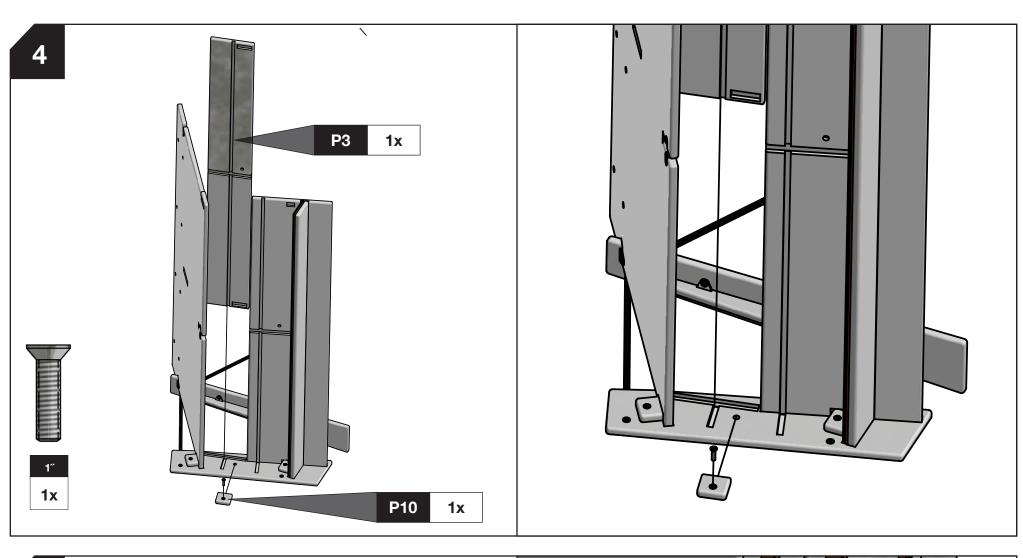


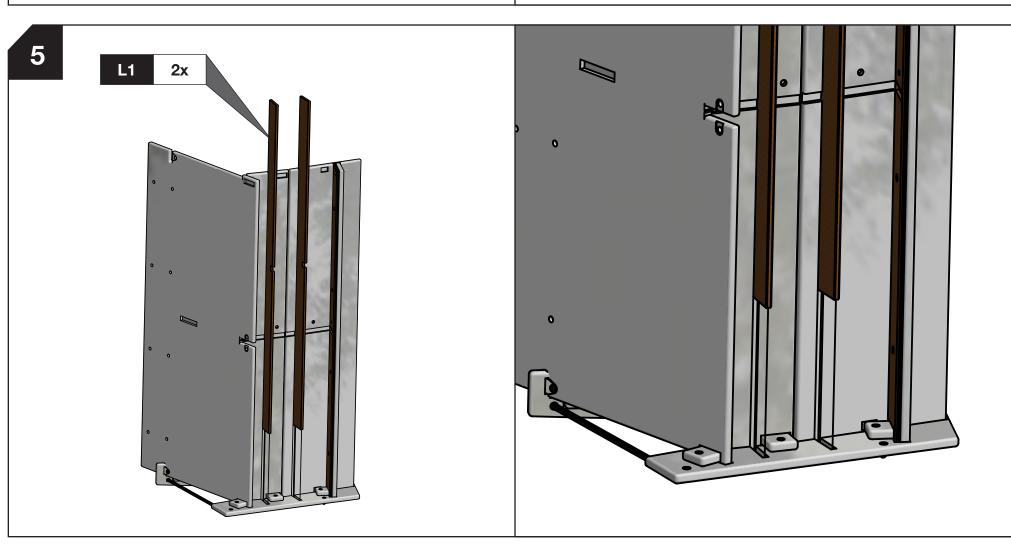


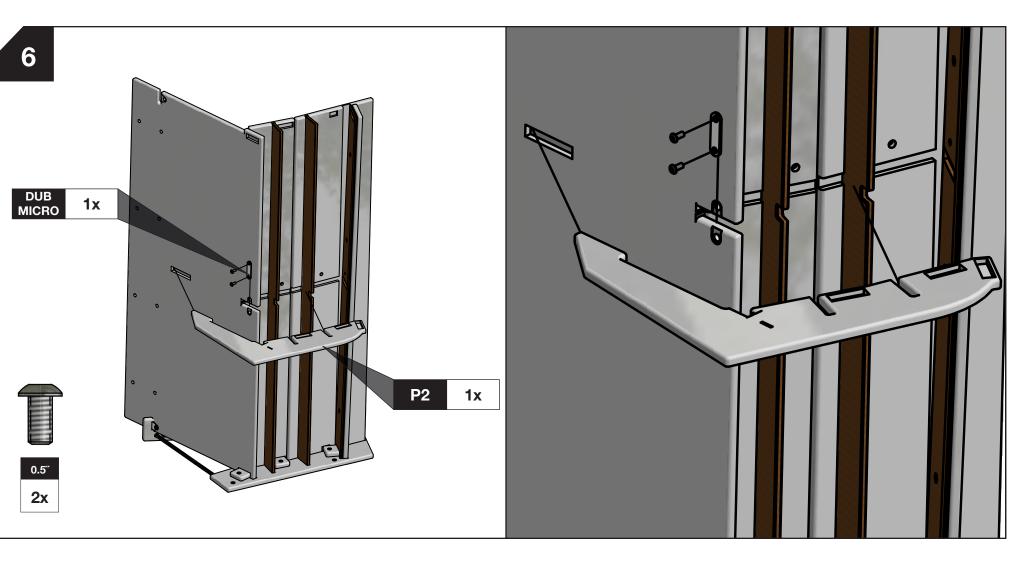

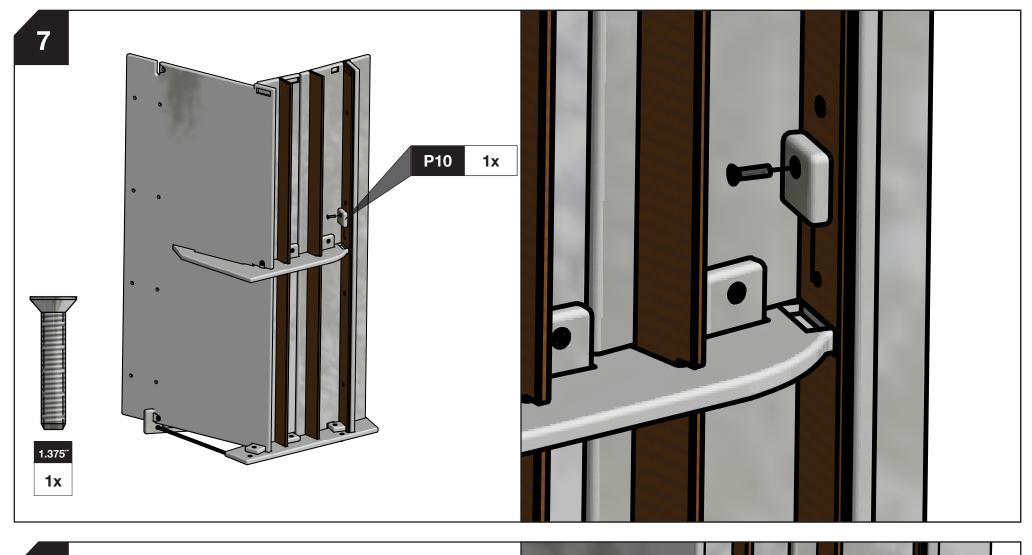

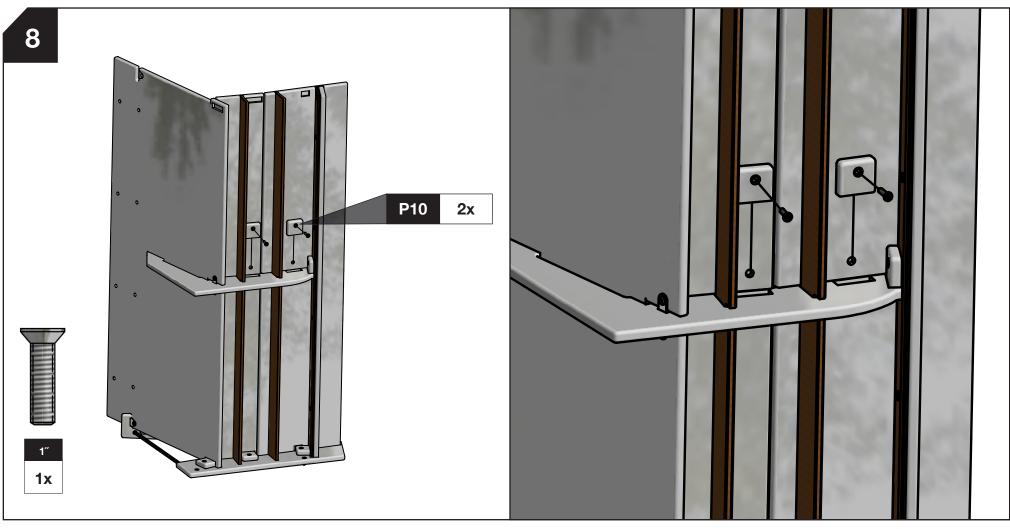

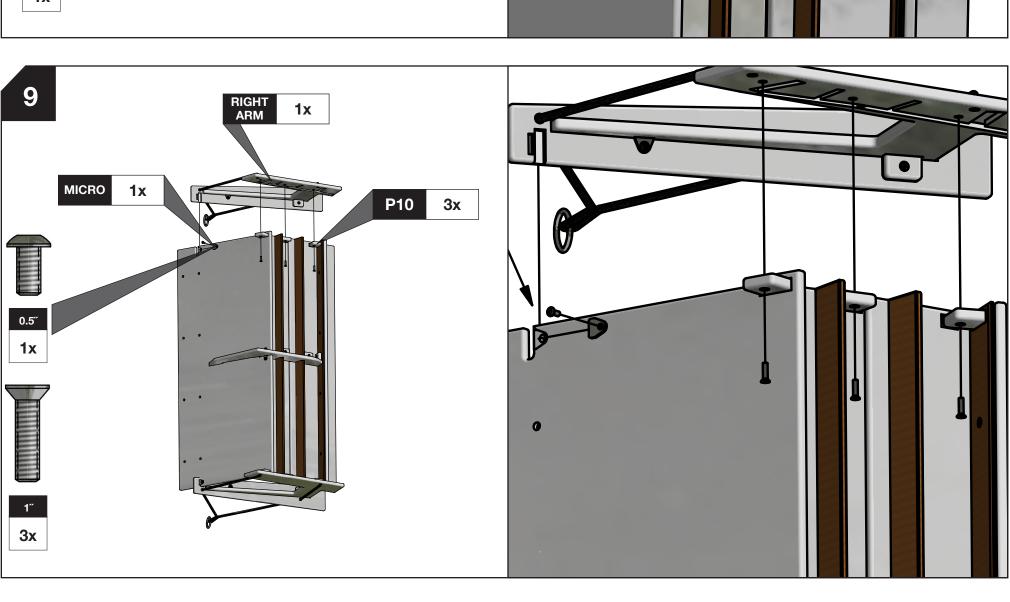

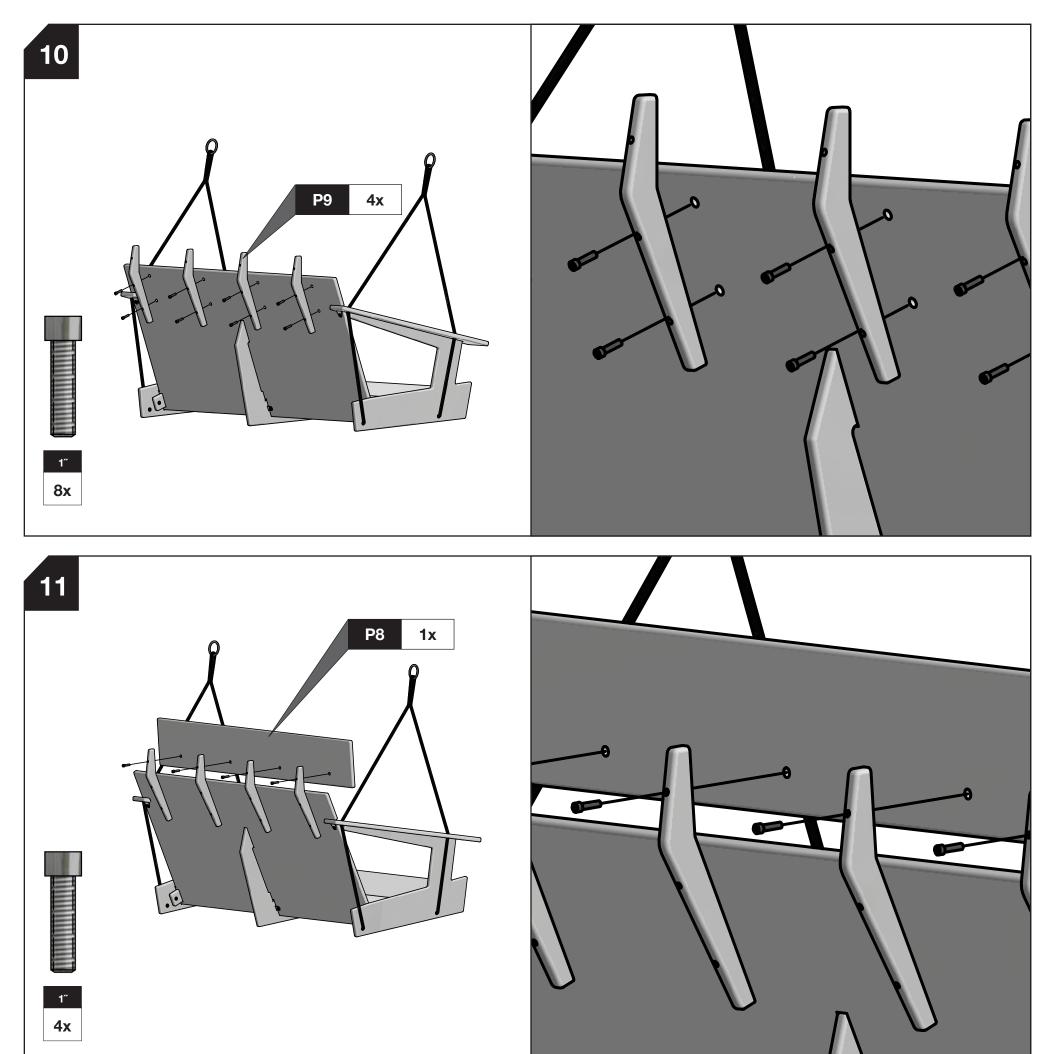





LOLLYGAGGER DOUBLE SWING SWING HANGING SUGGESTIONS

It is the responsibility of the end user to mount their swing securely.

lolldesigns.com | 1-877-740-3387

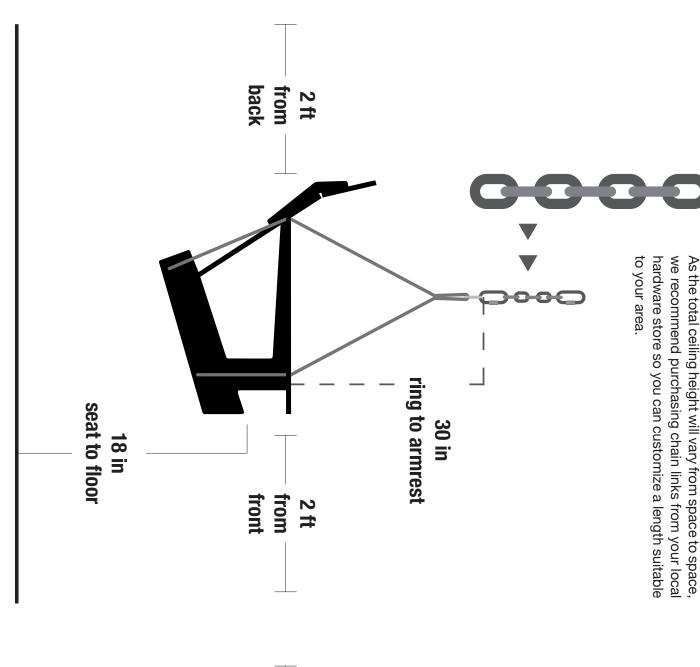

In general, we recommend approximately a 2-ft minimum clearance in the back and front, and a foot on either side. As far as the seat height, we recommend it to be approximately 18" from the ground, but that can be a general approximation, due to each specific user.

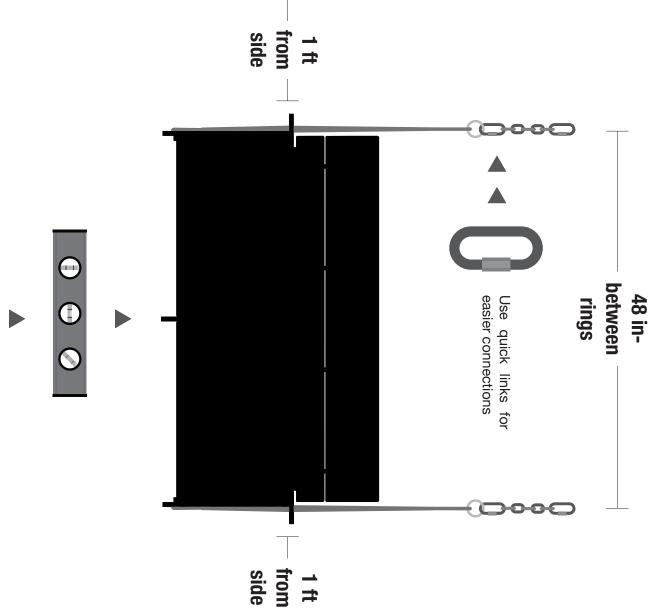

Check that the swing hangs level. Use a level on the swing seat for best measurement.