


HANDHELD BLOWER HOLDER ASSEMBLY INSTRUCTIONS

HARDWARE

ITEM #	QUANTITY	PART #	DESCRIPTION
1	1	MAIN FRAME	Frame Assembly
2	1	HBH-MC WELDMENT	Locking Weldment
3	2	Vinyl-1.00	1" Vinyl Cap
4	2	Vinyl-3.75	1⁄2″ x 3 ¾″ Vinyl
5	1	GC-HOOK	Trimmer Rack Hook
6	1	ATR-LN	Locking Nut
7	2	104	3/8" – 16 x ¾" Carriage Bolt
8	1	206	3/8" – 16 x 2" Flat Head Socket Screw
9	2	302	3/8" – 16 Nylon Lock Nut
10	1	823	18" Bungee Cord (Not shown)

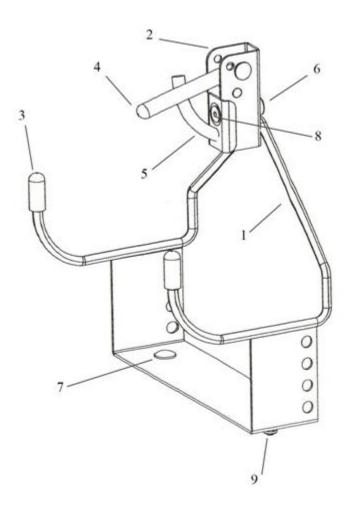

Jungle Jim's Accessory Products, Inc. 550 O'Byrne Avenue, Louisville, KY 40223 1-888-844-JIMS or log onto the web site at www.junglejimsap.com

ASSEMBLY

- Attach the blower hook to the blower holder using the 3/8"-16 x 2" flat head socket screw (206) and the locking nut (ATR-LN) as shown in figures 1 & 2. Place the end of the hook through the eye of the spring before securing with the ATR-LN to the locking weldment.
- Select a suitable location on your trailer for the blower holder. Make sure the blower does not interfere with the trailer rails or mowers when loaded. Mark the location of the 2 holes in the bottom of the blower holder on your trailer. Drill 3/8" holes at each location and attach the blower holder using two 3/8"-16 x 1" carriage bolts (104) and two nylon lock nuts (302).
- 3. Place all vinyl sleeves on the proper hooks.
- 4. When transporting your blower, use the optional bungee cord (included) to reduce movement of blower in unit.

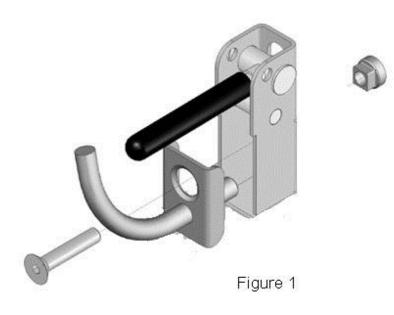




Figure 2

3