

READ ME FIRST

Ceramic Wall Heater

Please read these instructions & user manual carefully.

1. Your Goldair Ceramic Wall Heater must be installed with:
 - At least 1.8m clearance from the floor.
 - At least 300mm clearance from the ceiling.
 - At least 200mm clearance on the sides.
 - At least 300mm clearance from the bottom of the heater to any obstructions, such as other appliances, shelves and pictures.
 - At least 1.0m clearance from air outlet from any flammable material including textiles, curtains and soft furnishings.
2. Do not place appliance close to radiant heat source.
3. Never cover this heater or restrict its airflow. Covering or restricting the airflow of the heater will cause activation of the thermal safety device.
4. It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
5. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
6. Do not dispose of packaging until completely satisfied with your purchase.

PLEASE NOTE: When the unit is turned off the fan will continue to run for a short period of time even though the elements have switched off. This is normal to assist in the protection of internal components. DO NOT TURN OFF AT THE WALL DURING THIS TIME

Please refer to your user manual for operating instructions, further information or trouble shooting before you call the Customer Service number listed within the user manual.

READ ME FIRST

Installation Guide

Please read these instructions & user manual carefully.

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use.

BEFORE USING THIS APPLIANCE, IT MUST BE WALL MOUNTED.

WALL MOUNTED HEATERS ARE ONLY TO BE MOUNTED ON HEAT RESISTANT WALLS THAT COMPLY WITH CURRENT AS/NZS SPECIFICATIONS & BUILDING REGULATIONS.

CAUTION: Do not run the power cord behind the heater.

CAUTION: Do not mount directly under or above an electrical power socket. It is recommended to install the heater to the side of the power socket


- NOTE:** Your Goldair Ceramic Wall Heater must be installed with:
- At least 1.8m clearance from the floor.
 - At least 300mm clearance from the ceiling.
 - At least 200mm clearance on the sides.
 - At least 300mm clearance from the bottom of the heater to any obstructions, such as other appliances, shelves and pictures.
 - At least 1.0m clearance from air outlet from any flammable material including textiles, curtains and soft furnishings.

CAUTION: Do not mount anything within 300mm below the heater as this may cause the air flow to be restricted.

NOTE: Do not mount the heater above a door.

See installation instructions on next page

CERAMIC WALL HEATER INSTALLATION REQUIREMENTS

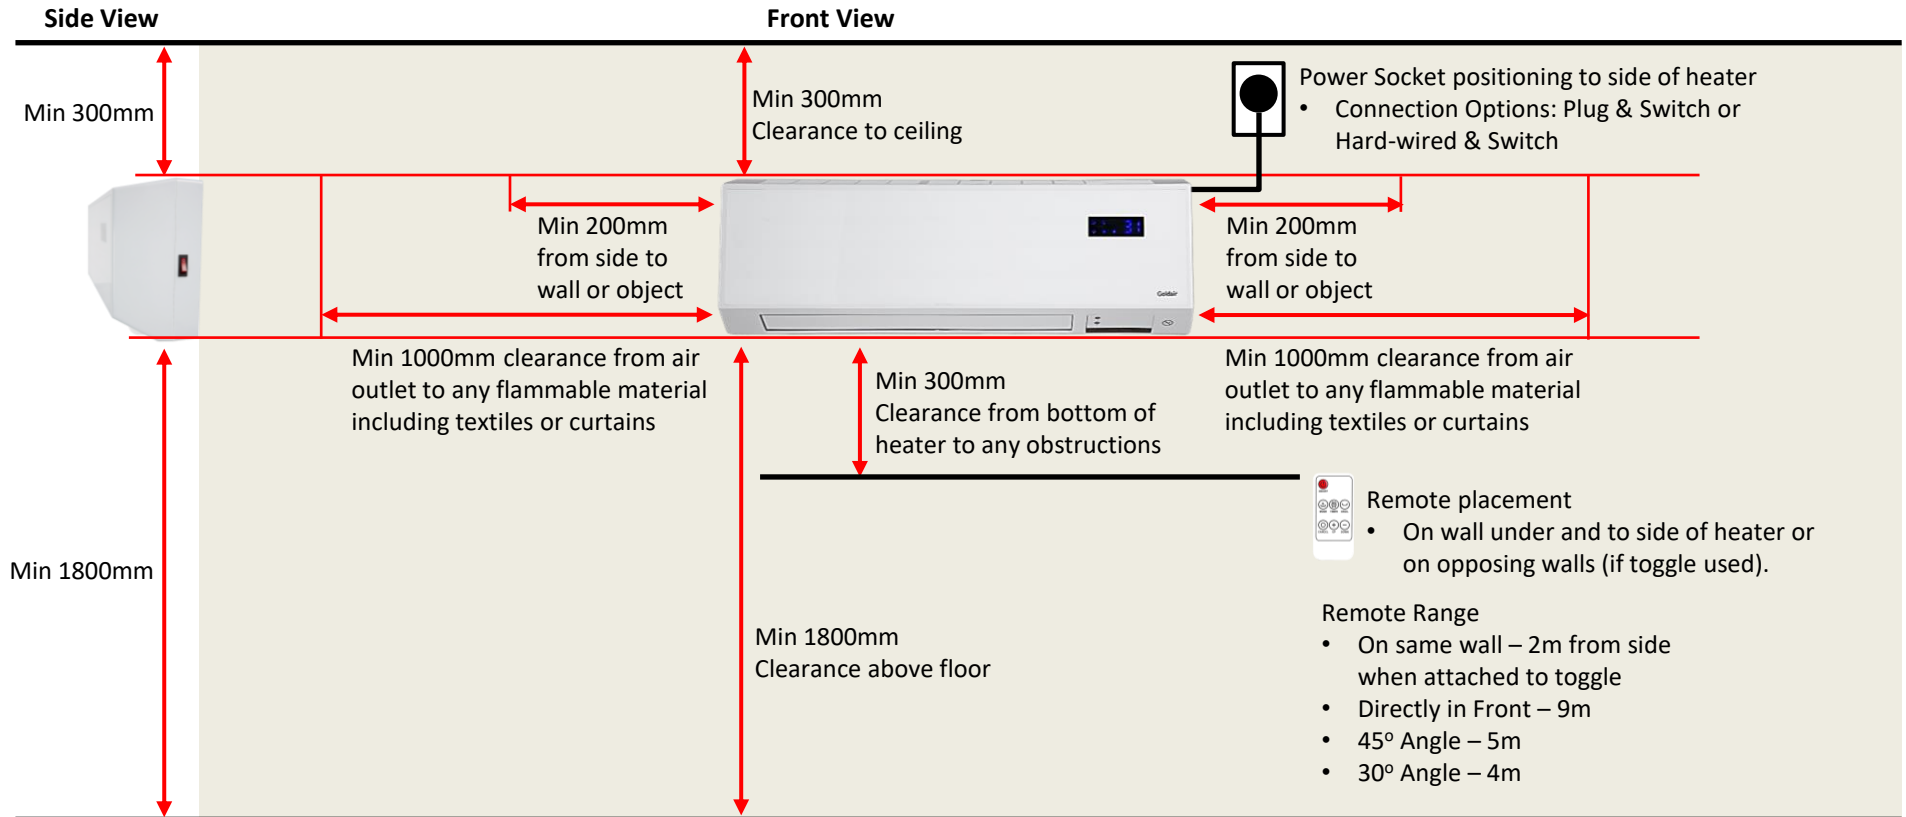

INSTALLATION

1. Measure the distance between the mounting holes on the back of the appliance and then mark the wall at the measured distance. Ensure that the marks you make are level.
2. Drill holes to the same diameter as the wall plugs.
3. Place the wall plugs into the hole in the wall and then fix two screws into the wall plugs.
4. Keep the heads of the screws out approximately 10mm.
5. Hang the heater on the screws and slide the heater across to the right and then down, locking the heater to the screws in the wall.
6. Remote Placement – Remote and Remote Holder Toggle (if included) can be placed either to the side of the product or on opposite walls within the room. Toggle extends approx. 300mm.

Please refer to your user manual for operating instructions, further information or trouble shooting before you call the Customer Service number listed within the user manual.