## **Assembly Instructions**

Before using this appliance, it must either be wall mounted or have the castor plates and castors fitted

This appliance has been supplied with '1 way screws' for permanent installation of the feet. This is a safety requirement for the New Zealand and Australian market.

## FRFF STANDING

- 1. Ensure the appliance is unplugged and power switches are off.
- 2. Carefully turn the main body upside-down on a scratch-free and stable surface. Be careful to prevent damage to the cosmetic finish or your floor surfacing.
- 3. Align the screw hole on the Castor Wheel Bracket with the screw hole on the base of the appliance.
- 4. Attach Castor Wheel Bracket with the '1 way screws' provided and ensure the bracket sits firmly in place (do not over tighten). Firmly press Castor Wheels into the slots provided on the Castor Wheel Bracket until they click into place. Some force may be required.
- 5. Set appliance upright.

NOTE: The wall bracket edges may be sharp. It is recommended that if using as a free standing appliance please remove the wall bracket from the back of the heater.

