

TECHNICAL DATA SHEET

HO962 TREKKER EARTH FASCIA - 2-SIDED USAGE: COMMERCIAL AND RESIDENTIAL APPLICATIONS



TREKKER EARTH FASCIA

PRODUCT DETAILS

Product Reference	HO962
Width x Thickness	100 x 11mm
Board Type	2-Sided Flexitrim
Pattern	1-Strip Plank
Length	1500mm
Composition	Wood/Polymer Composite
Maintenance	Comprehensive cleaning and maintenan



The mark of responsible forest

Comprehensive cleaning and maintenance instructions and materials are available from Havwoods Ltd. for all floors.


INSTALLATION METHODS

Fully Bonded	No	No			
Fixing	Clips and screws are included (please ask a member of staff for details)				
Origin:	Europe				

TECHNICAL CRITERIA				
Characteristics	Requirements - EN 15534-4	Result		
Humidity	Declaration	0.31%		
Cupping	Declaration	0.06mm		
Density	Declaration	1459 Kg/m ³		
Impact Resistance	≤ 0.5mm	Max 0.12mm		
Flexural Properties	F ¹ Max 3300N (Mean) F ¹ Max 3000N (Mean) Deflection under load (Mean) Deflection under load (Individual)	1274N 1228N 1.6mm 1.7mm		
Swelling and Water Absorption	Absorption (Mean) ≤ 4% (thickness) ≤ 0.8% (width) ≤ 0.4% (length)	3.00% 0.60% 0.20%		
	Absorption (Individual) ≤ 4% (thickness) ≤ 1.2% (width) ≤ 0.6% (length) Mean Absorption < 7% Individual Absorption < 9%	3.60% 0.70% 0.30% 3.90% 4.20%		
Boiling Test	≤ 7% (mean)	3.70%		
Composition	Declaration	40%/60% Wood 40%/60% Polymer 10% Others		
Vicat	Declaration	85.2°C		
HDT	Declaration	74°C		
Coef. Thermal expansion	≤ 50 x 10-6K	2.79 x 10-5mn	n/mm°C	
Resistance to artificial weathering	Declaration	ΔL < 5		
Mark	Declaration	EN15534-4 P\	/C W 50 UC3	
		· · · · · · · · · · · · · · · · · · ·		

INSTALLATION AND WARRANTY

All Havwoods floors must be installed by a competent installer who will have the necessary skills and take individual site circumstances into account. Havwoods warranty will apply only to floors which have been installed by a competent flooring installer comparable to BS8201 in the UK or equivalent standard worldwide.

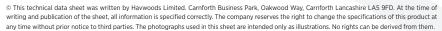





^{*} Subject to compatible subfloor and correct installation (see Installation Guidelines) including sensors.