

# WALTERS FENCING EQUIPMENT NETTING ROLLER RANGE



The Walters Fencing netting roller, in 1200mm and 1900mm capacity variants, is built to enable the rapid removal of old netting and hinged joint fences. Extra barbed and plain wires can also be rolled at the same time. Attaching to skid steer loaders or the front of a tractor, an integrated pick up arm lets you start the roll without having to manually attach wires. Once the roll is complete, the frame can be opened remotely by pulling a cable running from the manual lock to the vehicle cab.

**CALL 02 6766 6693**



**PURCHASE ONLINE**  
**WWW.WALTERSFENCING.COM.AU**



# OPERATION INSTRUCTIONS

Place the pickup arm into a hole in the netting/hinged joint and activate your hydraulics. The arm is gravity operated and will retract once the roller starts winding the netting. Ensure the first 5 wraps are fairly loose to make it easier to remove the completed roll



Once the roll is complete, position the roller horizontally just above ground level, and pull the release cable until the catch locks open. The cable can be extended and fastened at a convenient location on your machine.

Reverse the loader and swing the roll to a forward facing direction. Apply only enough downward pressure for the roll to contact the ground. Check there are no stray wires caught on the end of the drum core before reversing.



Continue reversing until the roll is completely clear of the centre drum, then crowd the loader to close the roller frame and lock up the drum core.

For technical specs and troubleshooting call **02 6766 6693**