

INFRARED

TABLE OF CONTENTS

- 3 ————— MOVEMENT -- SEIKO VK64
- 5 ————— MOVEMENT -- SEIKO VK63
- 7 ————— MOVEMENT -- SEIKO VK67
- 9 ————— MOVEMENT -- MIYOTA 2035
- 10 ————— PRECAUTIONS AND PREVENTIVE MEASURES
- 11 ————— CARING FOR YOUR INFRARED
- 12 ————— WATER RESISTANCE
- 14 ————— LIMITED WARRANTY

MOVEMENT – SEIKO VK64

SETTING THE TIME



1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Turn the crown to set the hour and minute hands.
(Check that AM/PM is set correctly)
4. Push the crown back to the **A** position.

★ Crown may need to be unscrewed prior to operation.

★ If the crown is pulled to the second position while the chronograph has started, the chronograph hands will continue to move. This is not a malfunction.

SETTING THE DATE

 


1. **A** Normal position.
2. Pull the crown out to the **B** position.
3. Turn the crown clockwise to set the date.
4. Push the crown back to the **A** position.

★ Do not set the date between 9:00PM and 3:00AM, otherwise the date may not change properly. If it is necessary to set the date during that period, first change the time to any time outside it, set the date, and then reset the correct time.

MOVEMENT – SEIKO VK64


HOW TO RESET (After Battery Change)



1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Press the **E** pusher for two seconds and then release.
4. Push the crown back to the **A** position.

★ Do not set the date between 9:00PM and 3:00AM, otherwise the date may not change properly. If it is necessary to set the date during that period, first change the time to any time outside it, set the date, and then reset the correct time.

 HOW TO USE THE CHRONOGRAPH



1. Press the **D** pusher to start the chronograph. The chronograph hands will start moving.
2. Press the **D** pusher again to stop the chronograph. The chronograph hands will indicate the elapsed time.
3. Press the **E** pusher to reset the chronograph. All chronograph hands will reset to the "0" position.

★ The chronograph can measure up to 60 minutes and stops after a measurement for 60 minutes.

MOVEMENT – SEIKO VK63

SETTING THE TIME

 


1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Turn the crown to set the hour and minute hands.
(Check that AM/PM is set correctly)
4. Push the crown back to the **A** position.

★ Crown may need to be unscrewed prior to operation.

★ If the crown is pulled to the second position while the chronograph has started, the chronograph hands will continue to move. This is not a malfunction.

SETTING THE DATE




1. **A** Normal position.
2. Pull the crown out to the **B** position.
3. Turn the crown clockwise to set the date.
4. Push the crown back to the **A** position.

★ Do not set the date between 9:00PM and 3:00AM, otherwise the date may not change properly. If it is necessary to set the date during that period, first change the time to any time outside it, set the date, and then reset the correct time.

MOVEMENT – SEIKO VK63

 
HOW TO RESET (After Battery Change)



1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Press the **E** pusher for two seconds and then release.
4. Push the crown back to the **A** position.
5. The small second hand will move at two-second intervals for 10 seconds as a demonstration

★ If the crown is operated within the 10 seconds, the two-second intervals movement will not be activated.

 HOW TO USE THE CHRONOGRAPH



1. Press the **D** pusher start the chronograph. The chronograph hands will start moving.
2. Press the **D** pusher again to stop the chronograph. The chronograph hands will indicate the elapsed time.
3. Press the **E** pusher to reset the chronograph. All chronograph hands will reset to the "0" position.

★ The chronograph can measure up to 60 minutes and chronograph stops after a measurement for 60 minutes.

MOVEMENT - SEIKO VK67

SETTING THE TIME

 


1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Turn the crown to set the hour and minute hands.
(Check that AM/PM is set correctly)
4. Push the crown back to the **A** position.

★ Crown may need to be unscrewed prior to operation.

★ If the crown is pulled to the second position while the chronograph has started, the chronograph hands will continue to move. This is not a malfunction.

SETTING THE DATE




1. **A** Normal position.
2. Pull the crown out to the **B** position.
3. Turn the crown clockwise to set the date.
4. Push the crown back to the **A** position.

★ Do not set the date between 9:00PM and 3:00AM, otherwise the date may not change properly. If it is necessary to set the date during that period, first change the time to any time outside it, set the date, and then reset the correct time.

MOVEMENT – SEIKO VK67

 
HOW TO RESET (After Battery Change)



1. **A** Normal position.
2. Pull the crown out to the **C** position.
3. Press the **E** pusher for two seconds and then release.
4. Push the crown back to the **A** position.
5. The small second hand will move at two-second intervals for 10 seconds as a demonstration

★ If the crown is operated within the 10 seconds, the two-second intervals movement will not be activated.

 HOW TO USE THE CHRONOGRAPH




1. Press the **D** pusher start the chronograph. The chronograph hands will start moving.
2. Press the **D** pusher again to stop the chronograph. The chronograph hands will indicate the elapsed time.
3. Press the **E** pusher to reset the chronograph. All chronograph hands will reset to the "0" position.

★ The chronograph can measure up to 12 hours and chronograph stops after a measurement for 12 hours .

MOVEMENT – MIYOTA 2035

 SETTING THE TIME



1. **A** Normal position.
2. Pull the crown out to the **B** position.
3. Turn the crown to set the hour and minute hands.
4. Push the crown back to the **A** position.

★ Crown may need to be unscrewed prior to operation.

PRECAUTIONS AND PREVENTIVE MEASURES

TEMPERATURE AND SHOCKS

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures - over 60C (140F) or below 0C (32F)

MAGNETIC FIELDS

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers or refrigerators, and other electromagnetic appliances.

SHOCKS

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock, you can contact Infrared Customer Service for repairs.

HARMFUL PRODUCTS

Avoid direct contact with solvents, detergents and perfumes, cosmetic products, etc - this may damage the bracelet, case or lead to discoloration.

CARING FOR YOUR INFRARED

Infrared watches are built to the toughest manufacturing guidelines ensuring your timepiece is always reliable and rugged. Here are a few tips to preserve and extend your watch's lifetime.

- * Clean the case and bracelet regularly - this will help prevent possible corrosion by perspiration.
- * Avoid running the chronograph constantly as this will lead to shorter battery life.

Your watch is rated at 5 ATM and 10 ATM which means you can clean it using a toothbrush and soapy water occasionally.

WATER RESISTANCE

Water Resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. Unfortunately, many water-based activities involve a lot of movement and other environmental changes such as temperatures. This means the watch's water resistance may be challenged or defeated when pushing to the maximal ATM.

The water resistance of a watch cannot be guaranteed permanently. It may be affected by aging gaskets or by accidental shocks while being used.

Never pull the crown when the watch is under water as this will flood the watch and will lead to its destruction. Make sure the crown is properly pushed in before entering the water with it.

WATER RESISTANCE

METERS	ATM	FEET	Hand wash	Rain	Car wash	Swim	Diving
30	3	100	✓	✓	✗	✗	✗
50	5	165	✓	✓	✓	✗	✗
100	10	330	✓	✓	✓	✓	✗
200	20	660	✓	✓	✓	✓	✓

Key points:

- * Water resistance does not include the strap - leather straps are particularly fragile to sea water
- * Avoid showering with your Infrared as this may damage the finishing
- * Make sure your crown is properly pushed before entering the water

LIMITED WARRANTY

Infrared Watches offers an extended warranty period of two (2) years from the date of purchase. As a client, you are expected to abide by the following rules set to qualify for the international warranty.

COMPONENTS UNDER WARRANTY

Please note that your warranty covers only the following parts:

- *Movement
- *Hands
- *Dial

Repairs of the damaged part/s will only begin after a thorough inspection.

EXCLUSIONS:

The warranty does not cover the following:

- * Battery, case, crystal, strap and buckle or bracelet, stem or crown.
- * Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- * Water damage due to negligence unless marked water-resistant.
- * Repairs, on a watch not purchased from Infrared Watches' official website or authorized resellers.

CONTACT US

INFRARED

contact@infrared-watches.com

www.infrared-watches.com

INSTAGRAM: [@infraredwatches.official](https://www.instagram.com/infraredwatches.official)

FACEBOOK: [Infrared Watches](https://www.facebook.com/Infrared-Watches)