


NNI FITNESS 2020+

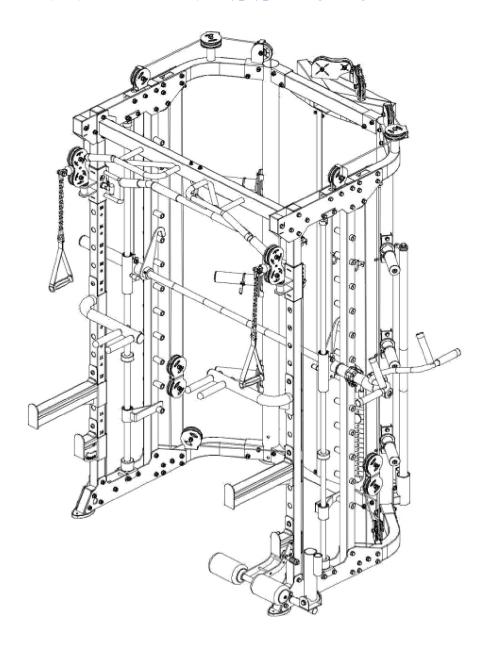

Spare part list	3
Spare part 11st	. 3
Spare part list	4
Spare part list	- 5
Assembly (1)	
Assembly (2)	8-10
Assembly (3)	_ 11-12
Assembly (4)	
Assembly (5)	
Assembly (6)	_ 17-18
Assembly (7)	_ 19-20
Assembly (8)	21-22
Assembly (9)	23-24
Assembly (10)	25-26
Card	

Owner's Manual Orbit X305

CAUTION:

Exercise of a strenuous nature, as is customarily done on this equipment, should not be undertaken without first consulting a physician. No specific health claims are made or implied as they relate to the equipment. Measurements made by the equipment are believed to be accurate, but only the measurements of your physician should be relied upon.

IMPORTANT:

Read all instructions carefully before using this product. Retain this product owner's manual for future reference.

Spare parts list

No.	Description	Note	Qty.
1	connection tube		1
2	upright frame left		1
3	upright frame right		1
4	bending tube left		1
5	bending tube right		1
6	upper connection tube		1
7	upper bending tube right		1
8	upper bending tube left		1
9	hexagon bolt	M10x75	54
10	lock nut	M10	100
11	washer	Ф10	210
11	washer	Ф10	1
12	chin up bar		4
13	upper plate		1
14	pulley frame tube right		1
15	pulley frame tube left		2
16	upright tube		1
17	tube with hole right		1
18	tube with hole left		4
19	lower plate		1
20	sliding tube right		1
21	sliding tube left		2
22	foot tube cover		2
23	end tube		14
24	hexagon bolt	M10x80	2
26	upper base		2
27	guide rod	Ф25х1850	2
28	lock sleeve		2
29	sliding sleeve		2
30	rubber pad with groove	Ф60хФ26х45	2
31	safety hook right		1
32	safety hook left		1
33	hexagon bolt	M10x90	8
34	socket set screw	M8x10	2
35	end cap		2

Spare parts list

No.	Description	Note	Qty.
36	check ring		2
37	pipe	Φ	2
38	button head socket screw	M12x40	2
39	spring washer	Ф12	2
40	washer	Ф12	2
41	barbell rod		1
42	inner pipe	Φ	2
43	rubber pad	Ф60хФ26х25	2
44	rubber pad	Ф60хФ26х42	4
45	guide rod hollow	Ф25х1955	4
46	reinforcing plate		4
47	weight stack		2
48	hexagon bolt	M10x20	8
49	wire	Ф5x2745mm	2
50	pulley	Ф95	20
51	pulley plate		4
52	hexagon bolt	M10x45	14
53	hexagon bolt	M10x50	4
54	hexagon bolt	M10x25	7
55	weight		2
56	wire	Ф5x4095mm	2
57	"-" shape pulley frame		2
58	pulley spacer sleeve	Φ	16
59	pulley	Ф50	6
60	wire		2
61	barbell plate holder		6
62	connection strap		1
63	shield left		1
64	shield right		1
65	hexagon bolt	M6x16	10
66	washer	Ф6	10
67	hook		4
68	"+"slotted countersunk head bolt	M4x12	8
69	lock nut	M4	8
70	hexagon bolt	M8x20	12


Spare parts list

71	washer	Ф8	12
72	core trainer		1
73	powder metallurgy sleeve		2
74	barbell rod cup		1
75	big washer	Ф25х10х2.0	1
76	hexagon bolt	M10x95	2
77	dip bar left		1
78	dip bar right		1
79	barbell rod holder right		1
80	barbell rod holder left		1
81	barbell rod holder short left		1
82	barbell rod holder short right		1
83	long bar		1
84	ship rod		1
86	pull lift device		1
87	T shape pin	Ф10х100	1
88	leg curl tube		1
89	barbell clamp collar		2
90	selector rod		2
91	weight pin		2

Bolt length measurement ruler




Assembly step (1) explosion drawing

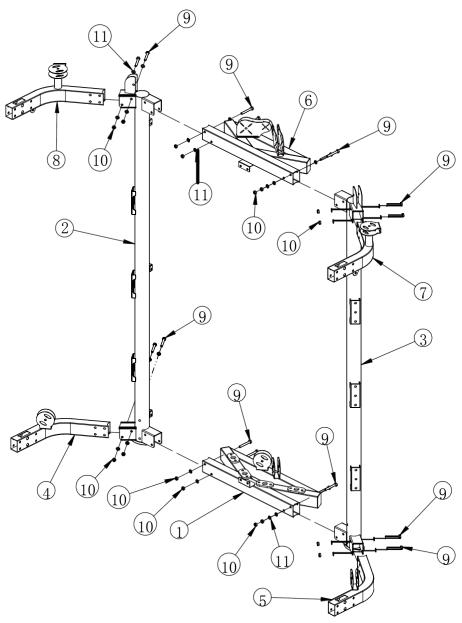

No.	Description	Note	Qty.
1	connection tube		1
2	upright frame left		1
3	upright frame right		1
4	bending tube left		1
5	bending tube right		1
6	upper connection tube		1
7	upper bending tube right		1
8	upper bending tube left		1
9	hexagon bolt	M10x75	16
10	lock nut	M10	16
11	washer	Ф10	32


Assembly step (1) drawing

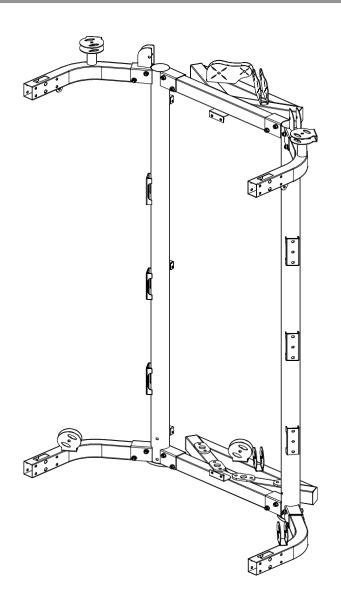

Assembly step (1) assembly instruction

- Fix bending tube left-4 fastening on upright frame left-2 using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- Fix bending tube right-5 fastening on upright frame right-3 using M10x75 hexagon bolt-9, Φ 10 washer-11 and M10 lock nut-10
- Fix connection tube-1 fastening with bending tube left-4, bending tube right-5 using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- Fix upper connection tube-6 fastening on upright frame using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- Fix upper bending tube left-8 fastening on upright frame left-2 using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- Fix upper bending tube right-7 fastening on upright frame right-3 using M10x75 hexagon bolt-9, ϕ 10 washer-11 and M10 lock nut-10


Assembly step (2) explosion drawing

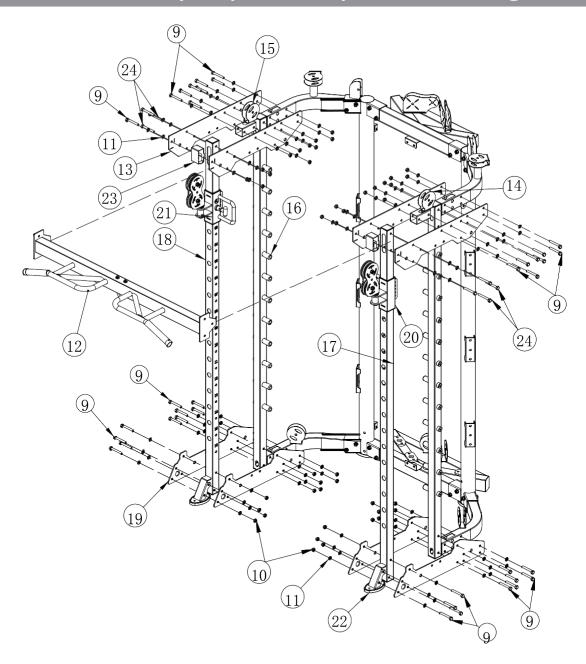

No.	Description	Note	Qty.	No.	Description	Note	Qty.
9	hexagon bolt	M10x75	38	17	tube with hole right		1
10	lock nut	M10	44	18	tube with hole left		1
11	washer	Ф10	88	19	lower plate		4
12	chin up bar		1	20	sliding tube right		1
13	upper plate		4	21	sliding tube left		1
14	pulley frame tube right		1	22	foot tube cover		2
15	pulley frame tube left		1	23	end tube		2
16	upright tube		2	24	hexagon bolt	M10x80	6

Assembly step (2) Enlarged View (14)23 249 (24)(24)9 10 (17)(19) (22)(g) (19) 9

Assembly step (2) drawing

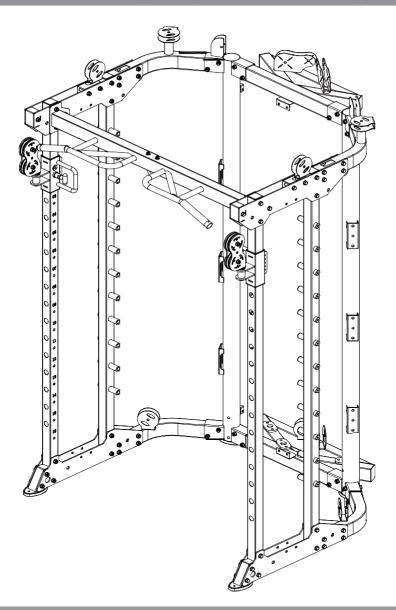

Assembly step (2) assembly instruction


1 Fix sliding tube left-21 on tube with hole

left-18 2 Fix sliding tube right on tube with hole

right-17


- Fix upright tube-16 and tube with hole left-18 fastening on assembly step-1 using M10x75 hexagon bolt-9, Φ10 washer-11, M10 lock nut-10, upper plate-13 and lower plate-19
- Fix pulley frame tube right-14 and pulley frame tube left-15 fastening on upper plate-13 using M10x75 hexagon bolt-9, Ф10 washer-11 and M10 lock nut-10
- Fix end tube-23 fastening on upper plate-13 using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- Fix foot tube cover-22 fastening on lower plate-19 using M10x75 hexagon bolt-9, Φ10 washer-11 and M10 lock nut-10
- 7 Fix chin up bar-12 fastening on upper plate-13 using M10x80 hexagon bolt-24, Φ10 washer-11 and M10 lock nut-10

Assembly step (3) explosion drawing

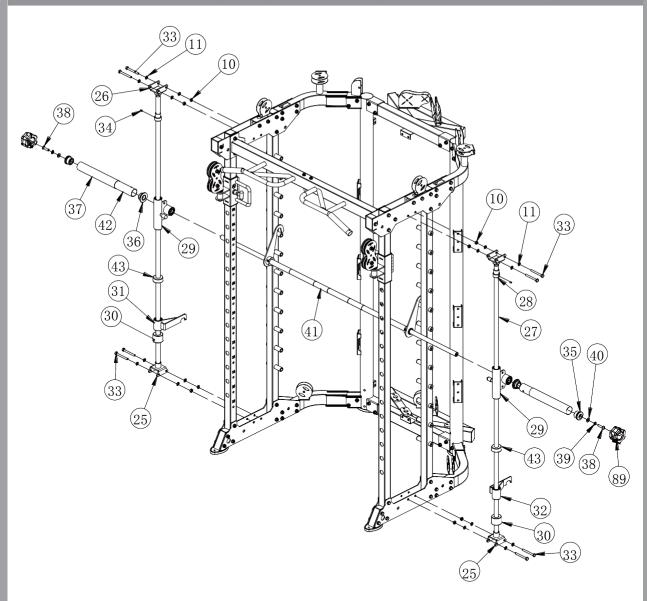

No.	Description	Note	Qty.	No.	Description	Note	Qty.
10	lock nut	M10	8	34	socket set screw	M8x10	2
11	washer	Ф10	16	35	end cap		2
25	lower base		2	36	check ring		2
26	upper base		2	37	pipe	Ф50х310хТ0.5	2
27	guide rod	Ф25х1850	2	38	button head socket screw	M12x40	2
28	lock sleeve		2	39	spring washer	Ф12	2
29	sliding sleeve		2	40	washer	Ф12	2
30	rubber pad with groove	Ф60хФ26х45	2	41	barbell rod		1
31	safety hook right		1	42	inner pipe	Φ48x298x2.5T	2
32	safety hook left		1	43	rubber pad	Ф60хФ26х25	2
33	hexagon bolt	M10x90	8	89	barbell clamp collar		2

Assembly step (3) drawing

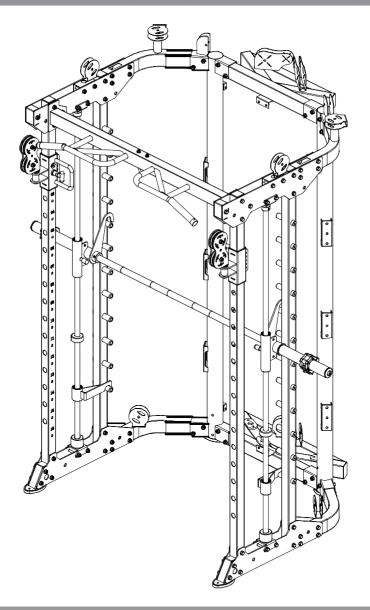


Assembly step (3) assembly instruction

- $_{1}$ Fix lower base-25 fastening on lower plate using M10x90 hexagon bolt-33, Φ 10 washer-11 and M10 lock nut-10
- Fix upper base-26 fastening on upper plate using M10x90 hexagon bolt-33, Φ 10 washer-11 and M10 lock nut-10
- Guide rod in turn through lock sleeve-28, sliding sleeve-29, rubber pad-43, safety hook left-32 and rubber pad with groove-30 fastening on base using M8x10 socket set screw-34


 Barbell rod-41 in turn through sliding sleeve-29, check ring-36, inner pipe-42, pipe-37 and
- end cap-35 fastening using M12x40 button head socket screw-38, Φ12 spring washer-39 and Φ12 washer-40, then fit on barbell clamp collar-89
- Guide rod in turn through lock sleeve-28, sliding sleeve-29, rubber pad-43, safety hook right-31 and rubber pad with groove-30 fastening on base using M8x10 socket set screw-34

Assembly step (4) explosion drawing

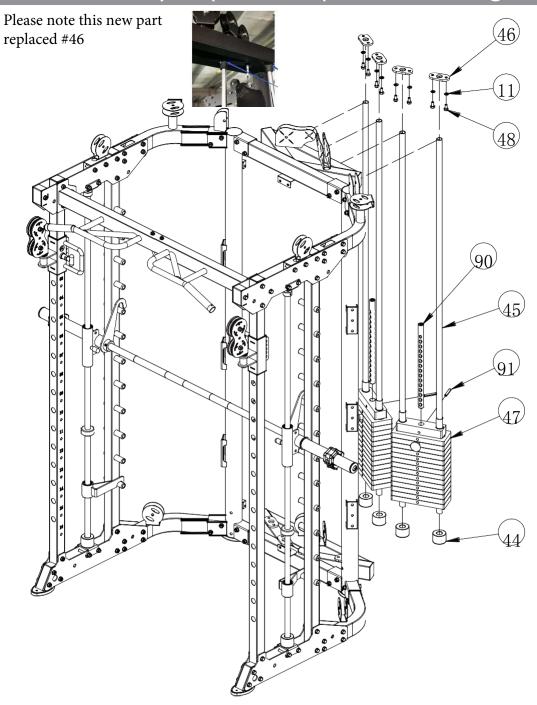

No.	Description	Note	Qty.
11	washer	Ф10	8
44	rubber pad	Ф60хФ26х42	4
45	guide rod hollow	Ф25х1955	4
46	reinforcing plate		4
47	weight stack		2
48	hexagon bolt	M10x20	8
90	selector rod		2
91	weight pin		2


Assembly step (4) drawing

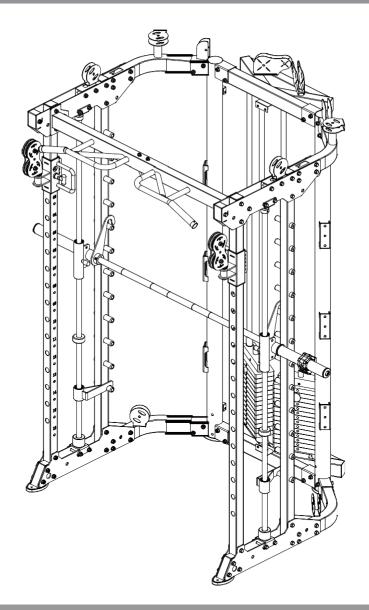

Assembly step (4) assembly instruction


- 1 Fix weight pin-91 fastening on selector rod-90
- 2 Guide rod hollow-45 in turn through rubber pad-44, weight stack-47 and fastening on reinforcing plate-46 using M10x20 hexagon bolt-48, Ф10 washer-11 and M10 lock nut-10

Assembly step (5) explosion drawing

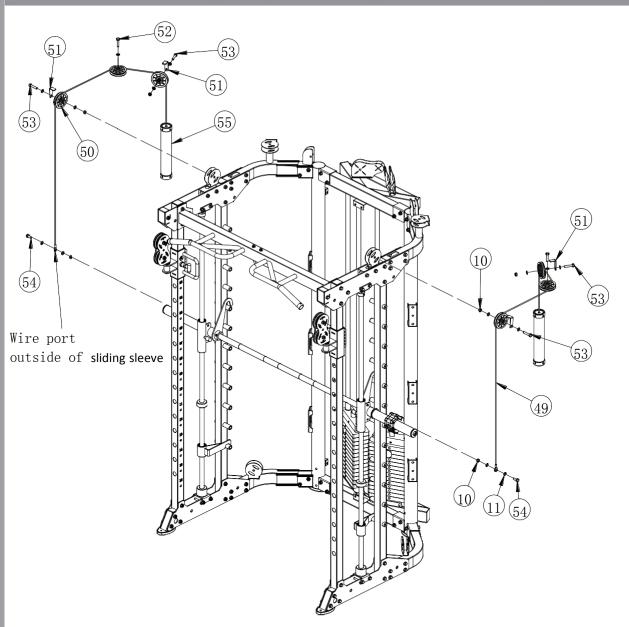

No.	Description	Note	Qty.
10	lock nut	M10	6
11	washer	Ф10	14
49	wire	Ф5x2745mm	2
50	pulley	Ф95	6
51	pulley plate		4
52	hexagon bolt	M10x45	2
53	hexagon bolt	M10x50	4
54	hexagon bolt	M10x25	2
55	weight		2


Assembly step (5) drawing

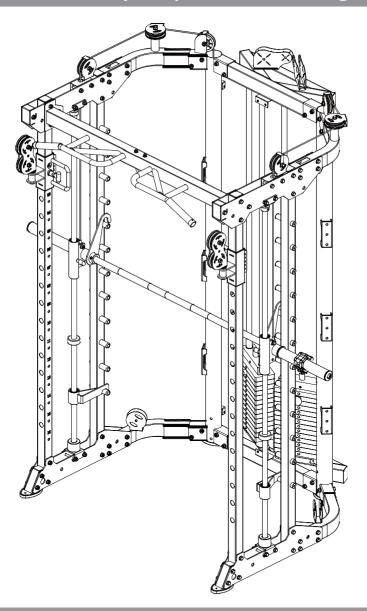

Assembly step (5) assembly instruction


- 1 Connect wire-49 with weight-55, put them into upring frame
- 2 Fix pulley-50 fastening on upper bending tube using M10x50 hexagon bolt-53, pulley plate- 51, Φ10 washer-11 and M10 lock nut-10
- 3 Fix pulley-50 fastening on upper bending tube using M10x45 hexagon bolt-52, Φ 10 washer-11 and M10 lock nut-10
- 4 Fix wire-49 fastening on sliding sleeve outside using M10x25 hexagon bolt-54, Φ10 washer-11 and M10 lock nut-10

Assembly step (6) explosion drawing

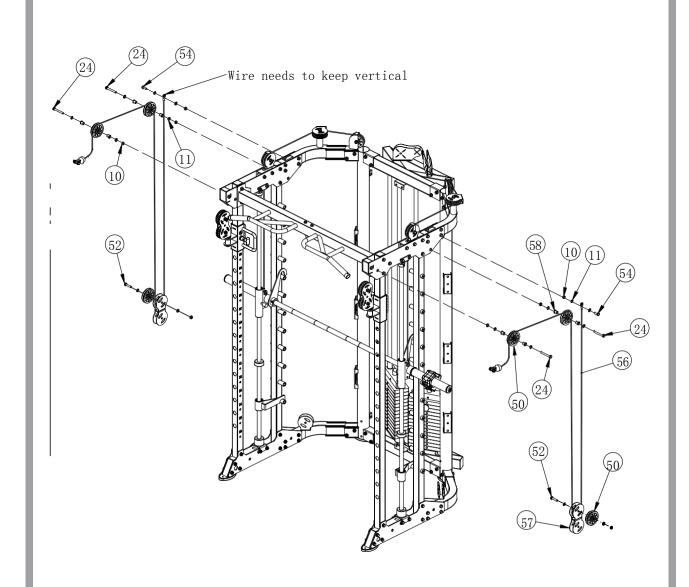


No.	Description	Note	Qty.
10	lock nut	M10	8
11	washer	Ф10	16
24	hexagon bolt	M10x80	4
50	pulley	Ф95	6
52	hexagon bolt	M10x45	2
54	hexagon bolt	M10x25	2
56	wire	Ф5х4095mm	2
57	"-" shape pulley frame		2
58	pulley spacer sleeve	Ф20x10.5xL20.5	8

Assembly step (6) drawing

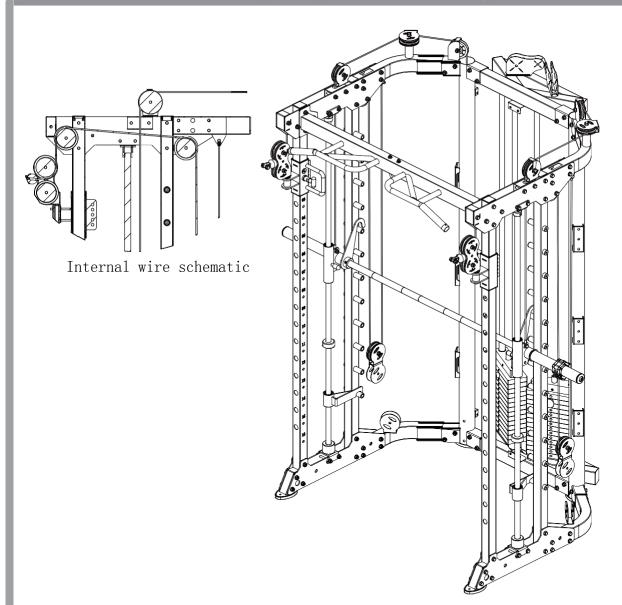


Assembly step (6) assembly instruction


- As the shown in the figure fix pulley-50 fastening on upper plate using M10x80 hexagon bolt-24, Φ10 washer-11 and M10 lock nut-10 and pulley spacer sleeve-58
- Fix pulley-50 fastening on "-" shape pulley frame-57 using M10x45 hexagon bolt-52, Φ10 washer-11 and M10 lock nut-10
- As the shown in the figure put the wire-56 using M10x45 hexagon bolt-52, Φ10 washer-11 and M10 lock nut-10 fastening on bending tube, careful to keep the wire vertical

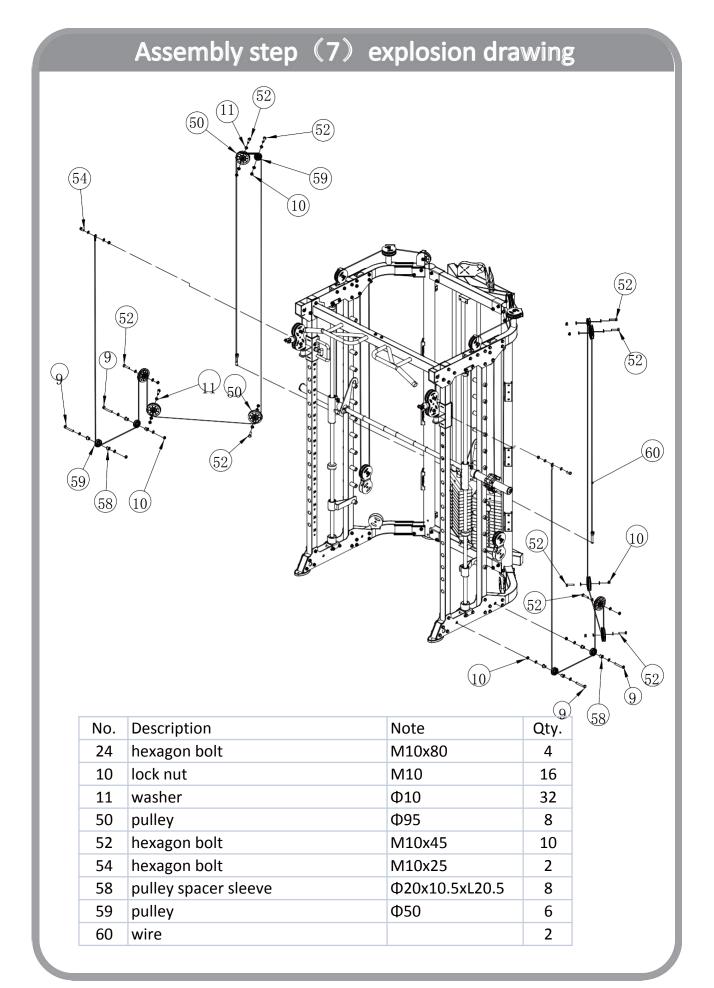

Assembly step (7) drawing

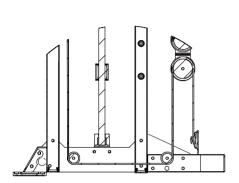

Internal wire schematic

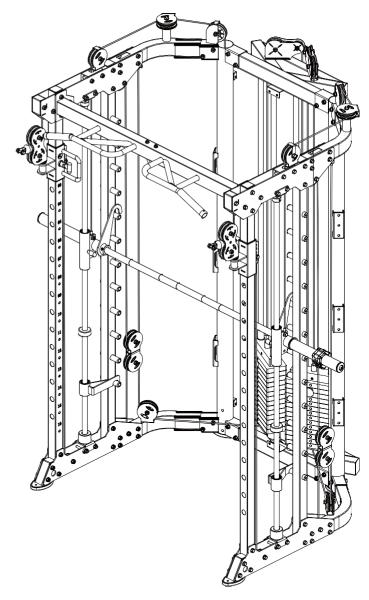

Assembly step (7) assembly instruction

- Fix pulley-50 fastening on "-" shape pulley frame-57 using M10x45 hexagon bolt-52, Φ10 washer-11 and M10 lock nut-10
- Fix pulley-50 fastening on lower plate using M10x80 hexagon bolt-24, Φ 10 washer-11 and M10 lock nut-10 and pulley spacer sleeve-58
- Fix pulley-50 fastening on lower bending tube using M10x45 hexagon bolt-52, Φ10 washer-11 and M10 lock nut-10
- As the shown in the figure put the wire-60 on the machine

Assembly step (8) explosion drawing (62) (61)(65) (71)63) (70)(67) (68)(65)(66)(65) 65 (66)Description Note Qty. No. barbell plate holder 61 6 connection strap 1 62 shield left 63 1 shield right 64 1 hexagon bolt M6x16 10 65 66 washer Ф6 10 67 hook 4 "+"slotted countersunk head bolt 68 M4x12 8 69 lock nut M4 8

M8x20

Ф8

12

12


70

71

hexagon bolt

washer


Assembly step (8) drawing

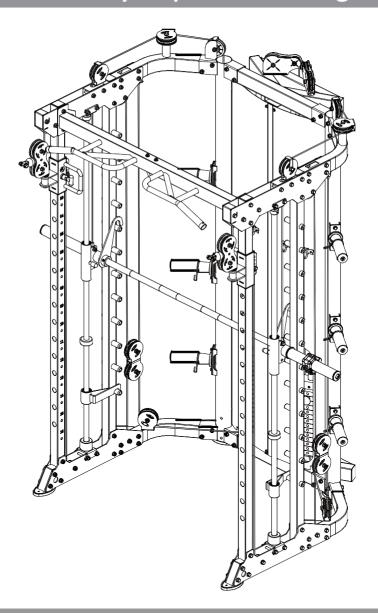

Assembly step (8) assembly instruction


- 1 Connect shield left-63, connection strap-62 and shield right-64
- 2 Fix hook-67 fastening on shield using "+"slotted countersunk head bolt-68 and M4 lock nut-
- 3 Fix shield fastening on main frame using M6x16 hexagon bolt-65, Φ6 washer-66
- 4 Fix barbell plate holder-61 on main frame using M8x20 hexagon bolt-70, Φ8 washer-71

Assembly step (9) explosion drawing

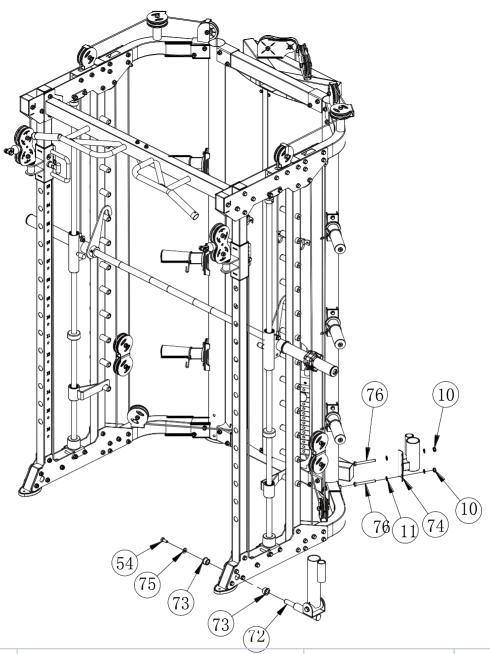

No.	Description	Note	Qty.
10	lock nut	M10	2
11	washer	Ф10	4
54	hexagon bolt	M10x25	1
72	core trainer		1
73	powder metallurgy sleeve		2
74	barbell rod cup		1
75	big washer	Ф25х10х2.0	1
76	hexagon bolt	M10x95	2


Assembly step (9) drawing

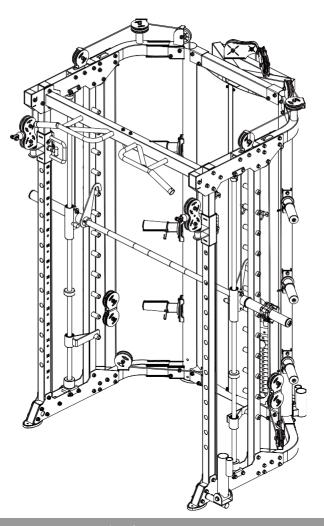

Assembly step (9) assembly instruction


- Fix core trainer-72 fastening on main frame using M10x25 hexagon bolt-54, Φ10 big washer-75 and powder metallurgy sleeve-73
- Fix barbell rod cup-74 fastening on upright frame using M10x95 hexagon bolt-76, Φ10 washer-11 and M10 lock nut-10

Assembly step (10) explosion drawing

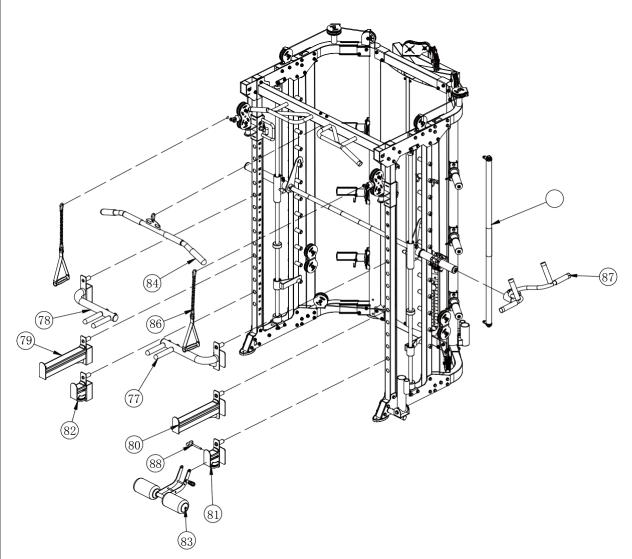

No.	Description	Note	Qty.
77	dip bar left		1
78	dip bar right		1
79	barbell rod holder right		1
80	barbell rod holder left		1
81	barbell rod holder short left		1
82	barbell rod holder short right		1
83	long bar		1
84	ship rod		1
85	hand belt		2
86	pull lift device		1
87	T shape pin	Ф10х100	1
88	leg curl tube		1

Assembly step (10) drawing

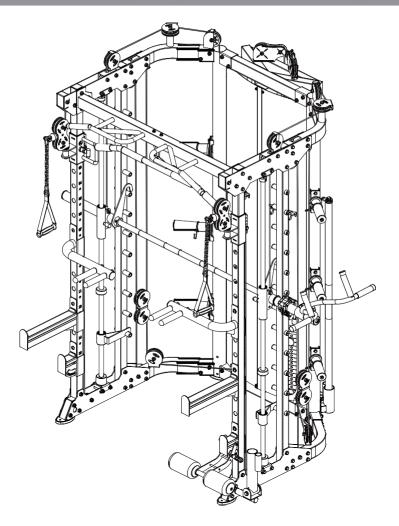

Assembly step (10) assembly instruction

- 1 Connect leg curl tube-83 and barbell rod holder short left-81 using T shape pin-88
- 2 Put the attached part on the machine

Items Not Covered

This warranty does not apply to any failure of the product, or any parts of the product, due to alterations, Modifications, misuse, abuse, negligence, accident, incorrect assembly or improper maintenance. Faults as result of installation by NNI Fitness staff must be reported within 7 days, as do concerns, questions aroused during or after installation by customer. Failure to follow warning in the owners manual, or warning stickers placed on equipment may result in injury to person and equipment and substantially void your warranty. Normal wear and tear due to use, transport, exposure to air and radiation, material fatigue is not covered.

Maintenance tips

Enclosed in your user manual. For products that do not come with a service card, please refer to below general advice or contact NNI Fitness service department for more specific advices. All NNI Fitness products are designed and produced for indoor usage-do not place them outdoor or expose them to weather.

Always inspect parts of safety concern prior to exercise, eg. Steel cable, handle bar, foot pedal, chains and bands etc. Repair or replace any damaged or worn parts as early as possible so to avoid injury.

As part of NNI's normal installation and set-up process, all bolts must be tightened and checked after the first 1 to 2 hours of initial usage and then periodically. Loose bolts and nuts may come o ff, causing damage, which may void warranty and can cause potential danger to the user as well.

After training, always wipe down your NNI machine. Perspiration that continuously settles on the frame and pads may cause rust or damage to the unit. Damage resulting from lack of proper maintenance will not be covered under warranty. To clean upholstery and frame, use a mild soap and warm water. Dry with a clean towel.