

benross®

Electrical

Big Button Phone

Instruction Manual




Item No. 44570 & 44580

FEATURE LIST:

- Hands-free speaker phone with volume control.
- Easy to read big buttons.
- Handset volume high/norm selector.
- 10-two touch speed dialling memories.
- Ringer HI/LO switch.
- Flash function.
- Last number redial.
- Desktop/wall mountable.

LOCATION OF CONTROLS

1. AUTO Button
2. STORE Button
3. HOLD Button
4. SP-PHONE Volume
5. FLASH Button
6. REDIAL Button
7. SP-PHONE Button
8. RINGER Indicator
9. RINGER Volume
10. HANDSET Volume

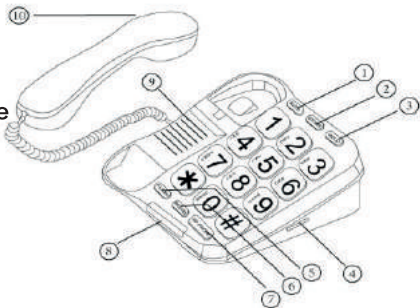

SAFETY PRECAUTIONS:

- Read all instructions before using this telephone. Retain this document for future reference.
- This telephone is an electrical device and can be hazardous if immersed in water, if you accidentally drop it in water, first unplug the device from the wall jack and remove from the water.
- Please keep the telephone dry and do not use in moisture place, for example, near a bathtub, wash bowl, kitchen sink, laundry tub and swimming pool.
- Unplug the phone from the wall jack before cleaning with a clean damp cloth. Please do not use liquid or aerosol.
- Do not use the phone to report a gas leak in the vicinity. Please remove yourself from the area and make the emergency call in a safe area.
- Handle the phone carefully, do not drop it.
- Do not use or put the unit in extreme temperature.
- Keep the phone away from dust and dirt.
- Do not modify or tamper with the telephones internal components, improper adjustment can cause damage and can be dangerous.

INSTALLATION:

1. Connect the coiled cord to the handset and telephone base.
2. Connect the telephone wire to the telephone set and wall jack.

OPERATION:

RINGER VOLUME HI/LO SWITCH

To control the volume of the ringer.

SP-PHONE volume HI/LO SWITCH

To control the volume of the Handsfree.

RINGER INDICATOR

LED will flash when a call comes in.

RECEIVING A CALL

1. Pick up the handset or press 'SP-PHONE' button when the phone rings.
2. When you finish the phone call, put the handset back on the phone base or press 'SP-PHONE' button again.

MAKING A CALL

1. Pick up the handset or press 'SP-PHONE' button to hear a dialling tone.
2. Dial the number you want to call.
3. Hang up the handset or press 'SP-PHONE' button again if you finish the conversation.

LAST NUMBER REDIALLING

Pick up the handset or press the 'SP-PHONE' button then press 'REDIAL' button when you hear dial tone.

FLASH FUNCTION

If you have subscribed to a call waiting service, the flash button replaces the hook allowing you to take the next call.

RINGER HI/LO SWITCHABLE

Select the volume of the tone ringer by the switch of MAX/MIN.

MUSIC ON HOLD

1. When talking on the phone, press HOLD button once.
The caller will hear the music from your phone set, and your phone set is in a holding state.
2. To continue the phone call, just pick up the handset or press 'SP-PHONE' button once again.

STORING TELEPHONE NUMBERS

1. With the handset off the hook, press STORE button and then enter the number you want to store.
2. Press AUTO button and then press (0-9) button for number location.
3. When you have finished these steps the numbers will be stored.

TO SPEED DIAL FROM STORED NUMBER

1. Pick up handset (or press SP-PHONE button).
2. Press AUTO and select correct memory location button (0-9) on the keypad location number. The telephone will automatically dial out the number.

IMPORTANT NOTES:

Telephone Connections



The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages, as defined in the standard EN60950). Following a power cut, the call in progress as well as the date and time settings is lost.

HEARING AID

Please note that this telephone works by sending radio signals between the base unit and the handset. These signals may interfere with some hearing aids, causing a humming noise.

WARNING:

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>
--	---	--

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

Imported by Benross® L24 9WD



Made in P.R.C

The logo for Benross, featuring the word "benross" in a lowercase, sans-serif font. The letters "ben" are in a light green color, and "ross" is in a dark grey color. A registered trademark symbol (®) is located at the end of the word. The logo is positioned in the top right corner of the page, partially overlapping a white graphic element.The word "Electrical" in a white, sans-serif font, positioned in the top left corner of the page. It is partially overlapped by a white graphic element that forms a stylized 'L' shape with a circular cutout at the bottom right corner.