

Benross 4.2kW Calor Gas Heater Cabinet

Turning Heater On

Ensure that the heat control dial is turned to the ignition position and that the regulator gas tap is open

Hold down the heat control dial and at the same time repeatedly press the ignition button to ignite the pilot light (at the bottom of the burner). When it has lit, keep holding down the heat control dial for a few more seconds and then release it. If the pilot light extinguishes, repeat the procedure, holding down the heat control dial down for slightly longer. If it does not ignite after 3 or 4 attempts, then leave it for a couple of minutes so any gas has time to clear, then repeat the procedure again.

NOTE: When lighting the heater for the first time after installing a new gas cylinder, it may be necessary to hold down the heat control dial for a longer period, to allow the gas to flow through to the pilot light.

Once the heater is lit, turn the heat control dial to the desired heat setting:

1. Low
2. Medium
3. High

Please Note:

- The item is fitted with an anti-tilt safety system which can be operated if the heater has been moved around frequently or activated if the heater has been tilted. This is normal and will reset itself after a short period of time.
- This heater operates from a butane gas cylinder, not supplied
- It has a built-in ignition button to allow for easy and quick operation but you should be patient as this does require technique which can only be established through using the item.