

Quick Start Guide

FX Wall Mounted Fan Heaters



QS015

This guide is for quick reference only. Refer to the FX installation and operating instructions for further information


FX20V

On/Off indicator

Indicator will glow red when heating

Pull cord switch

Pull the cord to switch the heater ON and pull the cord again to switch the heater OFF

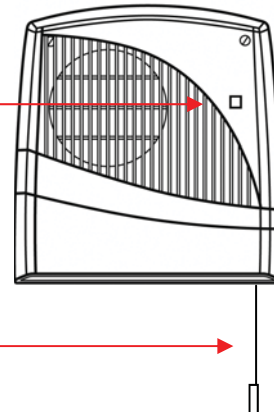

FX20VE (runback timer)

On/Off indicator


Indicator will glow red when heating.

Pull cord switch

Pull the cord to switch the heater ON and the heater will run for 15 minutes* and then automatically switch off. To restart the heater for a further 15 minutes pull the cord twice.

To switch the heater off before the timer expires pull the cord once.

*Timer is factory preset at 15 minutes but can be adjusted to run for any time period from 5 – 155mins, please refer to installation and operating instructions for further details

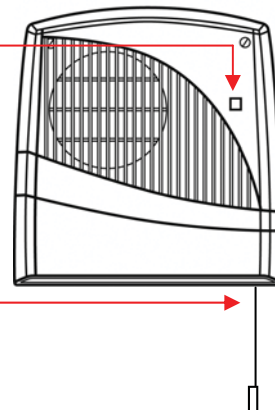


FX20VL

Thermostat

Turn thermostat dial to appropriate position to give comfort level required. Heater will switch on and off as necessary, and a higher setting will make the room warmer.

On/Off indicator

Indicator will glow red when heating

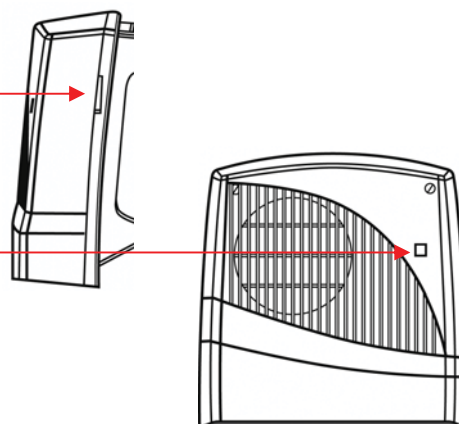

WARNING: A clearance of at least 250mm must be maintained from either side of the heater, 280mm from the top of the heater to the ceiling and must be installed 1800mm from the floor **DO NOT COVER** or obstruct the air inlet or outlet grilles.
PLEASE REFER TO THE OPERATING AND INSTALLATION INSTRUCTIONS FOR FURTHER SAFETY ADVICE.