



88

INSTALLATION & MAINTENANCE MANUAL JB002 JB003 & JB004



IP 68



10-14 – PS V1 SC-88




## **GENERAL INSTRUCTIONS:**

These instructions should be read carefully and retained after installation for further reference and maintenance.

## SAFETY

- Before installation/maintenance ensure that the supply to the cable to be joined is switched off and the circuit fuses are removed or switched off
- Installation of these products must be carried out by a competent person or by a qualified electrician to the current IEE Wiring and Building Regulations
- · Please recycle this unit
- 230V 50Hz
- JB002 and JB003 IP68 (5mtrs max) JB004 IP66
- 3 Pole screw-fix terminals
- H07RN-F cable min 0.75mm<sup>2</sup> 3 core max 4.00mm<sup>2</sup> 3 core
- EN50262

## INSTALLATION

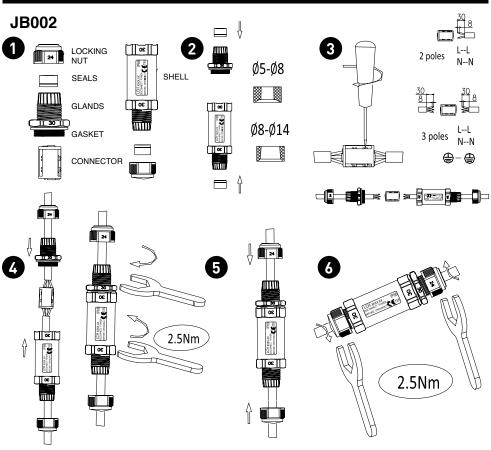

## JB003

